

2016.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV6 3.0L DIESEL

CAMSHAFT POSITION SENSOR (G1509551)

REMOVAL AND INSTALLATION

18.30.24	SENSOR - CAMSHAFT POSITION (CMP) - RENEW	3000 CC, TDV6	2	USED WITHINS	+
18.30.24	SENSOR - CAMSHAFT POSITION (CMP) - RENEW	3000 CC, TDV6, DIESEL	2	USED WITHINS	+

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Engine Cover - TDV6 3.0L Diesel](#) (501-05 Interior Trim and


Ornamentation, Removal and Installation).

3. Refer to: [Left Exhaust Gas Recirculation Valve - TDV6 3.0L Diesel - Gen 2](#) (303-08A Engine Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).


4.

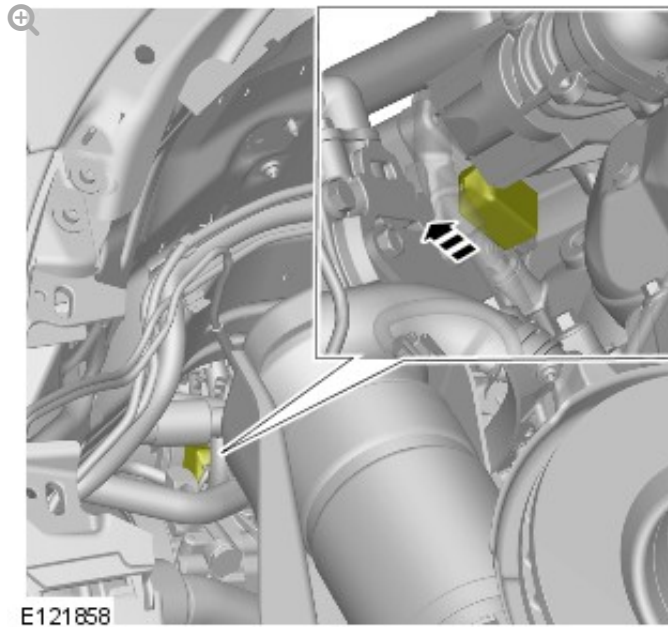

5.

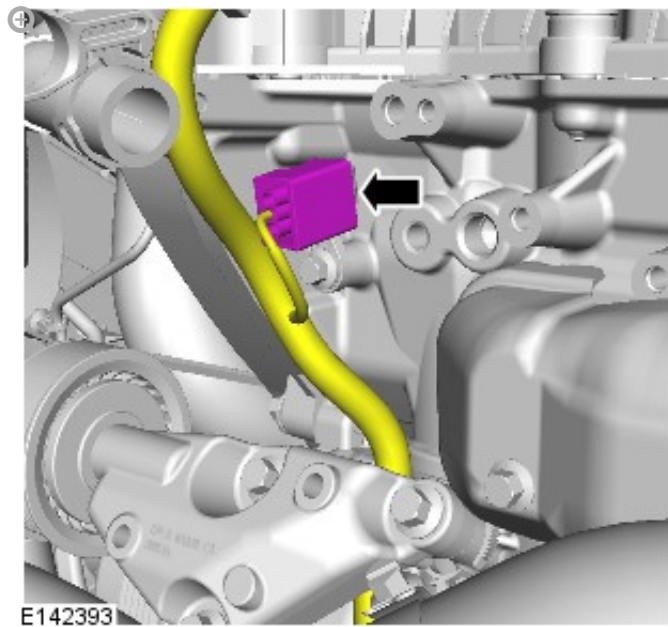

6.

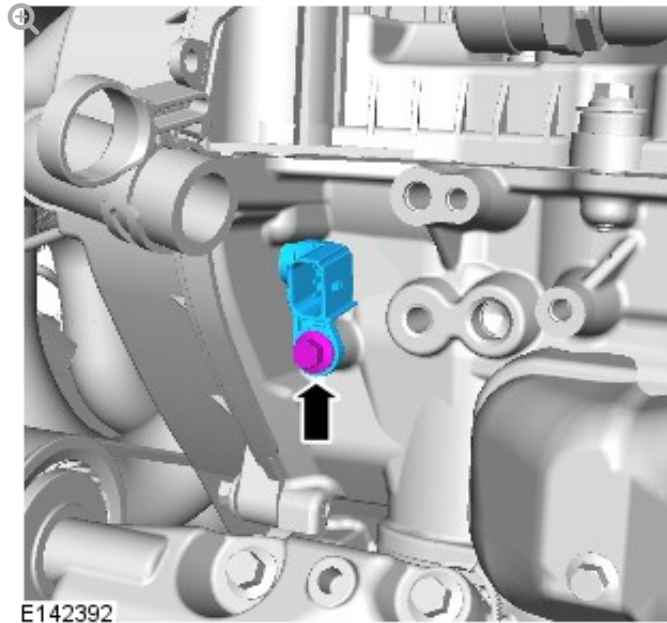

Torque: 10 Nm

INSTALLATION


1.

CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- The Camshaft position (CMP) sensor tip must rest on one of the three webs on the back of the camshaft pulley. Incorrect installation may result in the CMP sensor being damaged.

NOTES:

- Only turn the engine in the normal direction of rotation.
- Timing belt left hand cover shown removed for clarity.

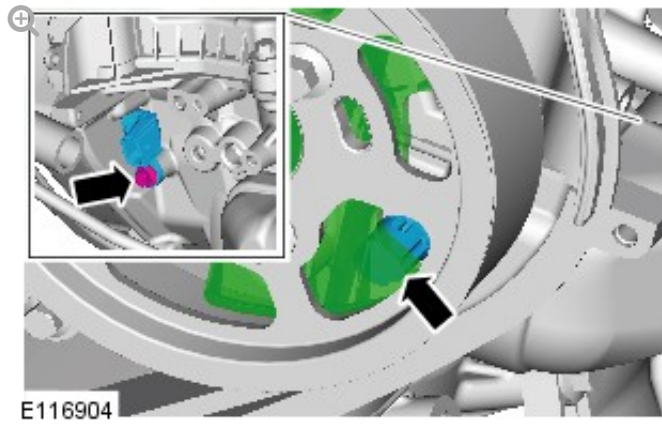

Turn the engine until one of the three webs on the back of the camshaft pulley is visible through the CMP sensor housing.

2. To install, reverse the removal procedure.