

2016.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV6 3.0L DIESEL

HEATED OXYGEN SENSOR

[G1509560]

REMOVAL AND INSTALLATION

19.22.16	SENSOR - HEATED OXYGEN (H02S) - FRONT/LEFT/EACH - RENEW	3000 CC, TDV6	0.7	USED WITHINS	+
----------	--	------------------	-----	-----------------	---

SPECIAL TOOL(S)



310-121

Wrench, H02S

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Remove the catalytic converter.

Refer to: [Catalytic Converter](#) (309-00A Exhaust System - TDV6 3.0L Diesel, Removal and Installation).

3.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

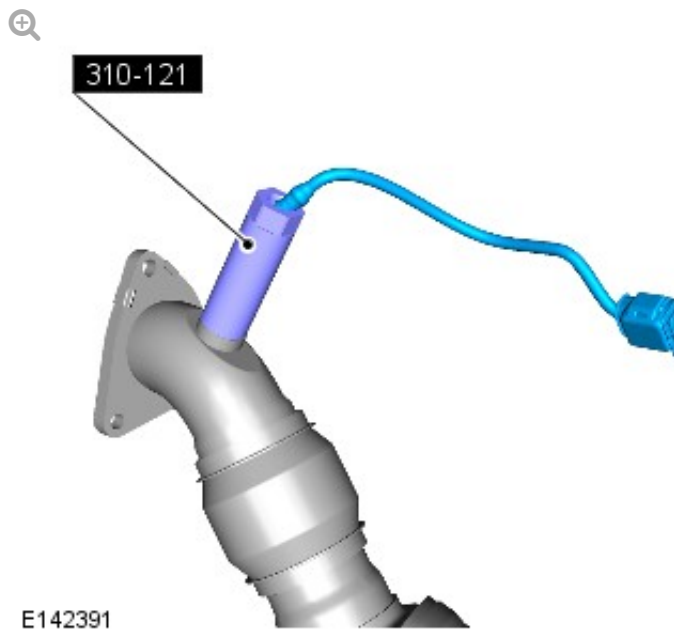

Special Tool(s): [310-121](#)

Torque: **48 Nm**

INSTALLATION

1.

CAUTIONS:

- Make sure the anti-seize compound does not contact the HO2S tip.
- If accidentally dropped or knocked install a new sensor.
- Make sure the HO2S wiring harness is not twisted more than 180 degrees and is not in contact with either the exhaust or driveshaft.

NOTE:

If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.

To install, reverse the removal procedure.

2. If a new unit is installed, configure using Land Rover approved diagnostic equipment.