

PUBLISHED: 31-JUL-2012
2014.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - V8 S/C 5.0L PETROL

CRANKSHAFT POSITION SENSOR (G1509589)

REMOVAL AND INSTALLATION

18.30.12	SENSOR - CRANKSHAFT POSITION (CKP) - RENEW	5000 CC, AJ V8	0.4	USED WITHINS	
----------	--	-------------------	-----	-----------------	--

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

2. WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

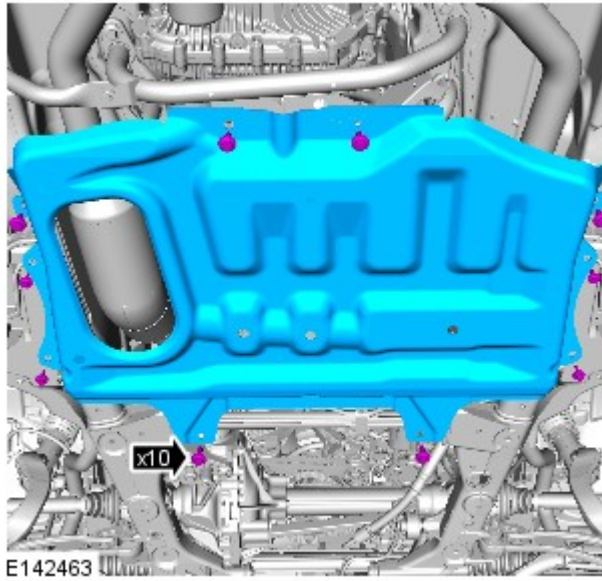

Torque:


M10 60 Nm

M6 10 Nm

4.

⚠ CAUTION:

Before the disconnection or removal of any components, make sure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

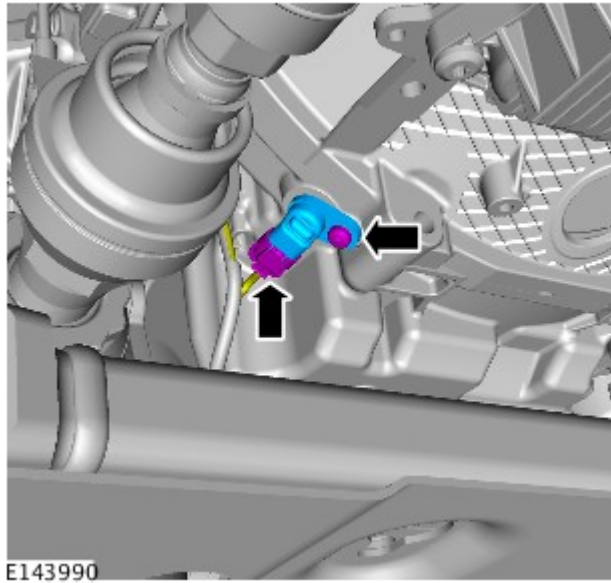

Torque: 10 Nm

INSTALLATION

1.



CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Make sure that the component is clean, free of foreign material and lubricant.

To install, reverse the removal procedure.

2.

Using the approved diagnostic equipment, clear the powertrain control module (PCM) adaptations.

