

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

CRANKSHAFT PULLEY - TDV6 3.0L DIESEL - GEN 2

[G1875416]

REMOVAL AND INSTALLATION

12.21.01	PULLEY - CRANKSHAFT - RENEW	3000 CC, TDV6	3.6	USED WITHINS	+
----------	-----------------------------------	------------------	-----	-----------------	---

SPECIAL TOOL(S)




303-1117

Timing Peg,
Automatic
Transmission



303-1123



E 54546

303-1123

Locking Tool,
Flywheel



303-D121



E64849

303-D121

Puller, General
Purpose

REMOVAL

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Refer to: [Timing Belt](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).

3.

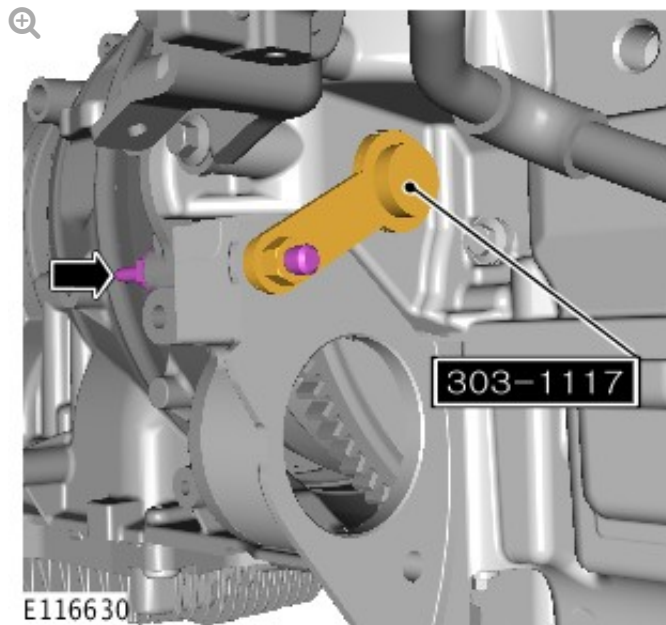


- Remove the special tool.
- *Special Tool(s):* 303-1117

4.

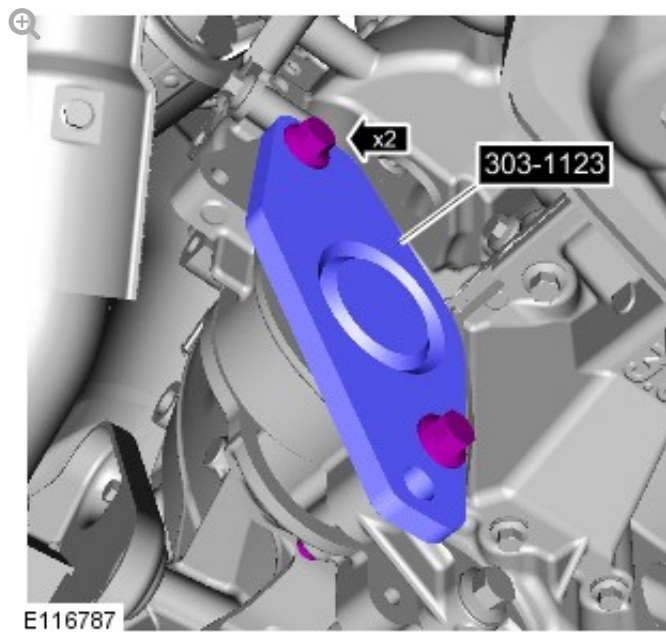


- Install the special tool.
- *Special Tool(s):* 303-1123

5.

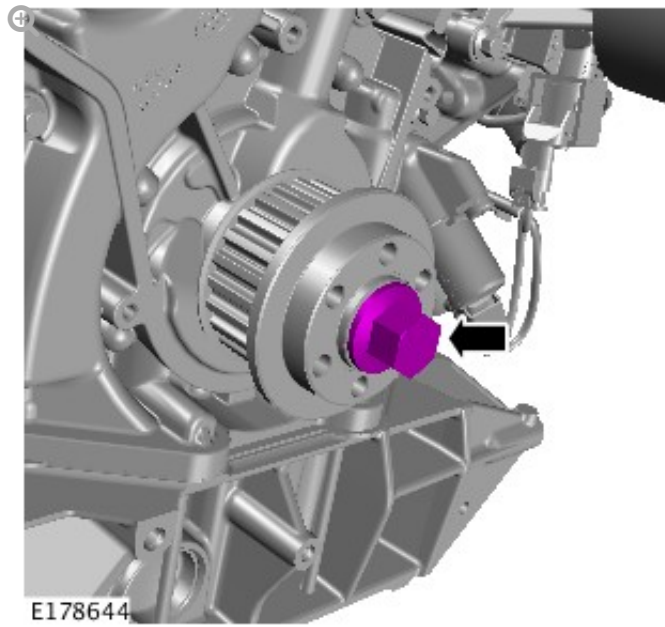


6.

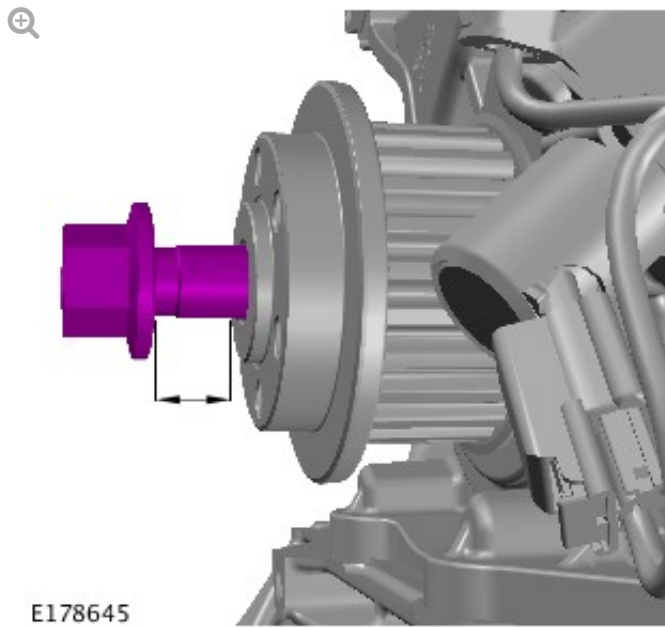

Loosen, but do not fully remove the bolt.

7.

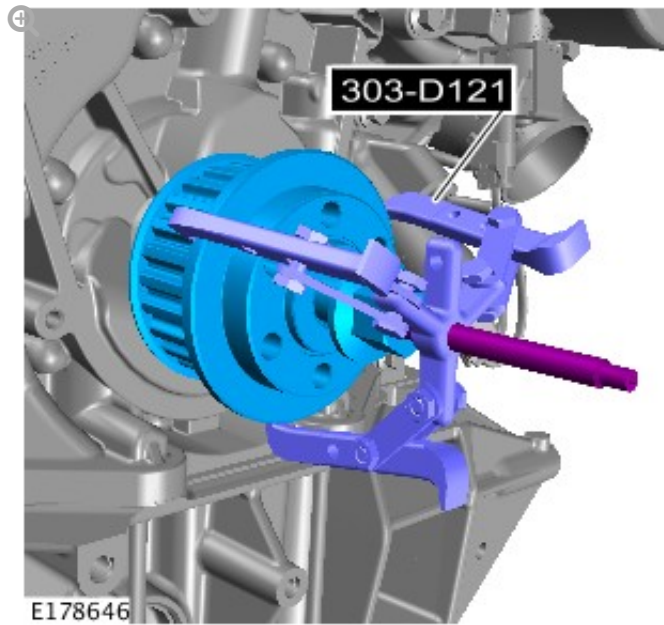


- Install the special tool.
- *Special Tool(s):* 303-D121

8.

CAUTIONS:

- Discard the bolt.
- Discard the friction washer.


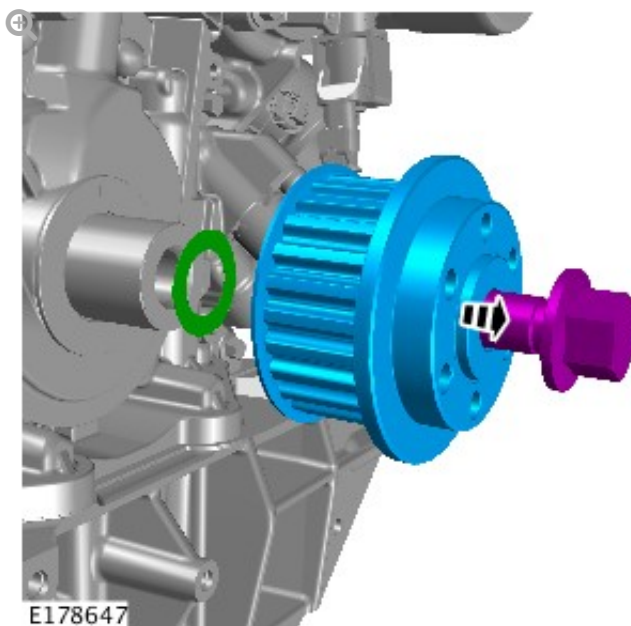


INSTALLATION

1.

CAUTION:

Make sure that the pulley washer is correctly seated before installing the pulley.

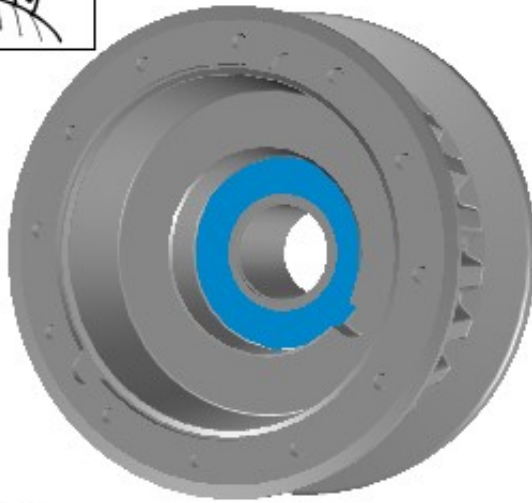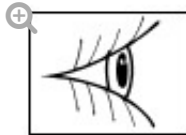

E178218


2.

CAUTIONS:

- Do not lubricate the components.
- Make sure that a new bolt is installed.

NOTE:

Do not tighten at this stage.

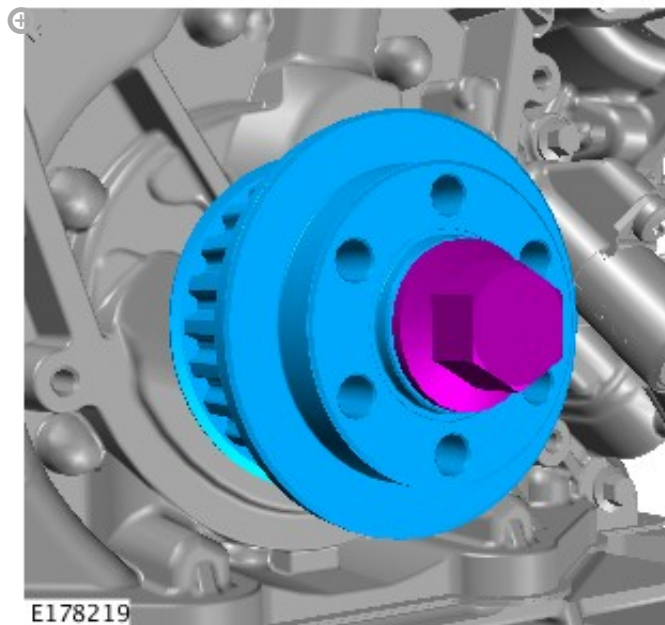


Install crankshaft pulley.

3.

CAUTION:


Make sure the alignment marks are aligned.

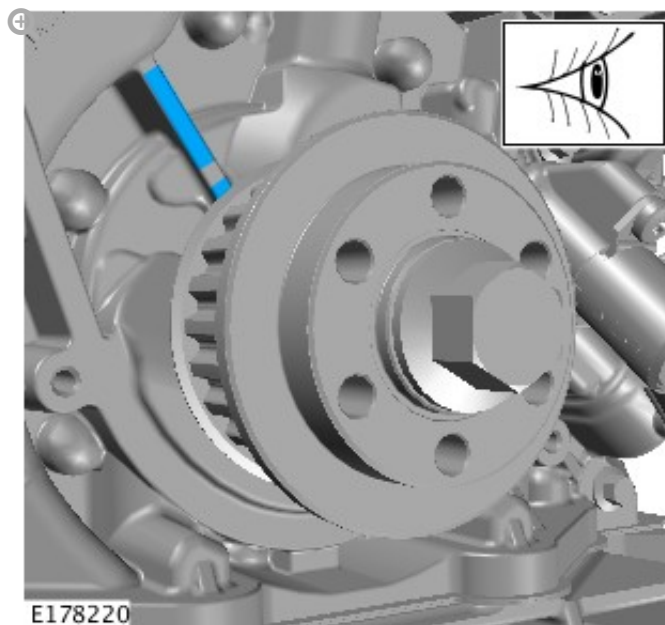

4.

CAUTION:

Do not lubricate the components.

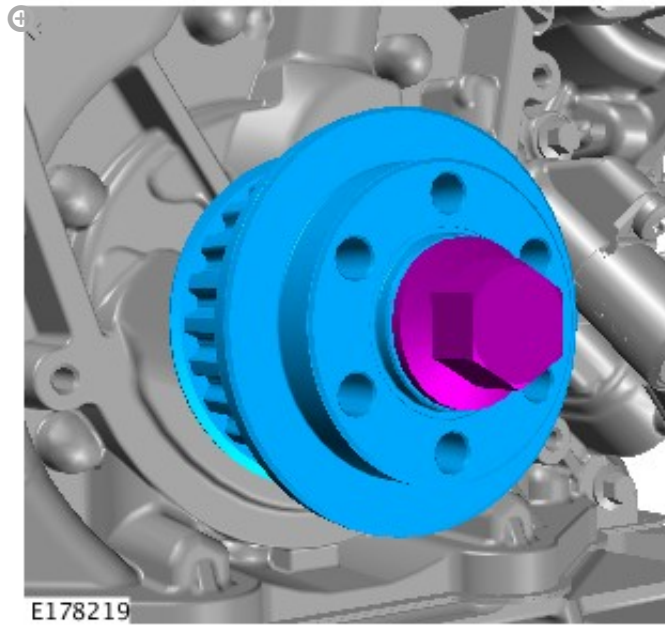


Torque:

Stage 1: 150 Nm

Stage 2: 300 Nm


Stage 3: 90°

5.

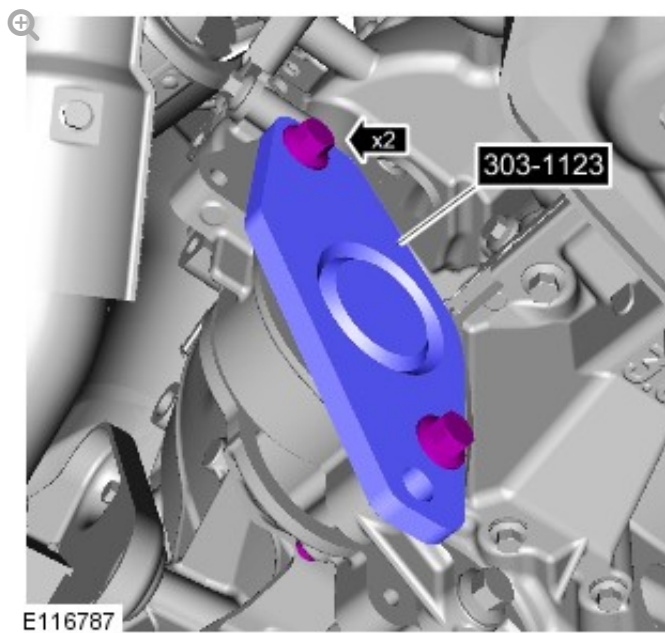

- Remove the special tool.
- *Special Tool(s):* [303-1123](#)

6.

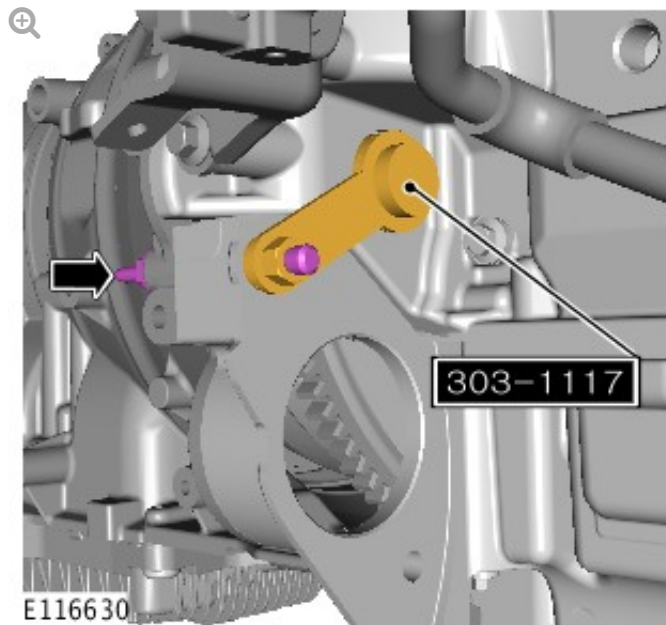

- Remove the special tool.
- *Special Tool(s):* [303-1117](#)

7. Refer to: [Timing Belt](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).