

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

TIMING BELT [G1821647]

REMOVAL AND INSTALLATION

12.65.18	TIMING BELT - CAMSHAFT - RENEW	3000 CC, TDV6	3.2	USED WITHINS	+
----------	---	------------------	-----	-----------------	---

SPECIAL TOOL(S)



303-1117

Timing Peg,
Automatic
Transmission



303-1126

Timing Peg,
Camshaft Pulley


PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Timing belt
Installation Step 2	Renew Part	Timing belt tensioner
Installation Step 2	Renew Part	Timing belt tensioner bolt

REMOVAL


1. Refer to: [Timing Cover - TDV6 3.0L Diesel - Gen 2](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Timing Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
2. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).

3.

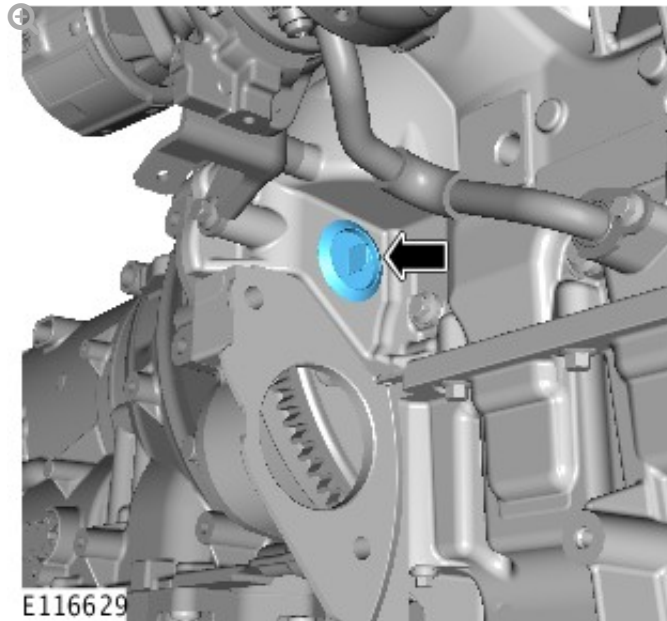


4. Rotate the crankshaft clockwise to align the crankshaft alignment hole in the flywheel or flexplate with the block aperture.

5.

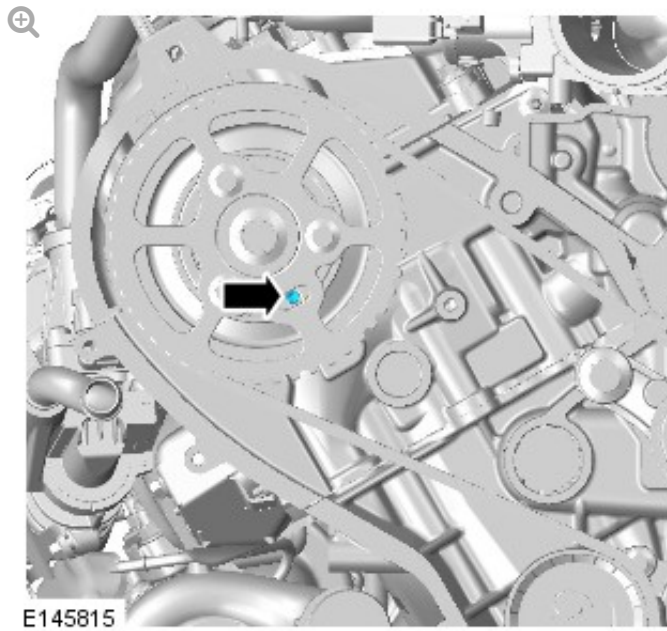


Check the camshaft pulley alignment holes are correctly aligned. If the alignment holes are not aligned, rotate the crankshaft one full turn clockwise.

6.

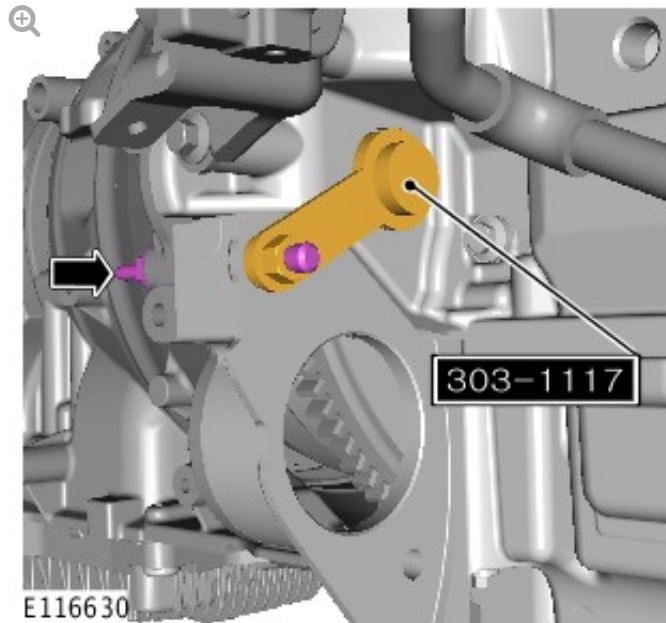

Special Tool(s): [303-1117](#)

7.

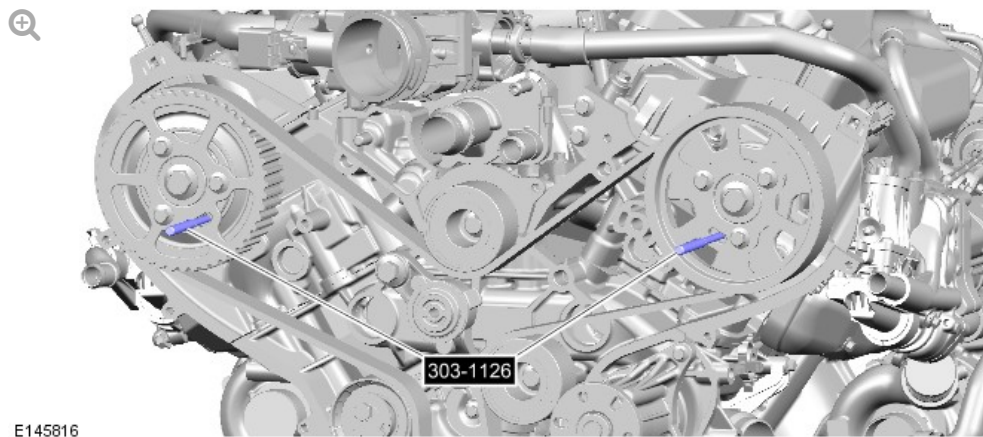

Special Tool(s): [303-1126](#)


8.

CAUTION:

Do not use the special tools to lock the camshafts. Failure to follow this instruction may result in damage to the engine or the special tools.

NOTE:


Do not loosen the bolts more than 2 turns.

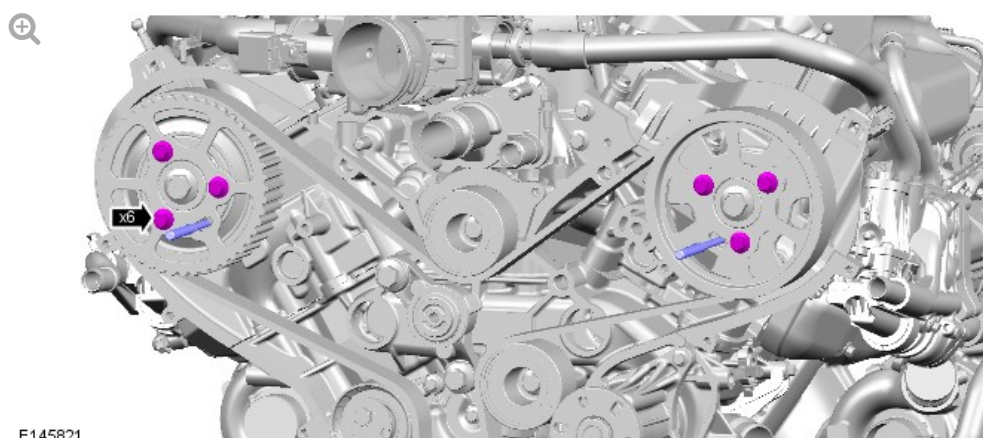

9.

CAUTIONS:


- Discard the component.
- Discard the bolt.

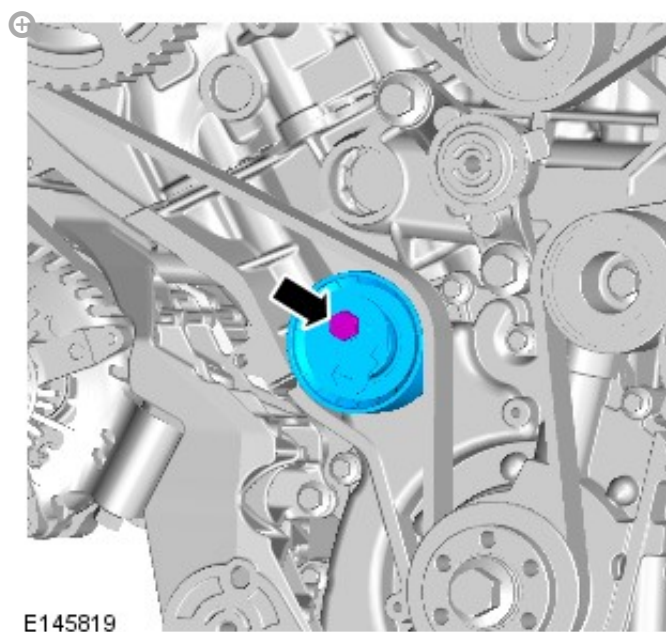

10.

CAUTION:

Discard the component.

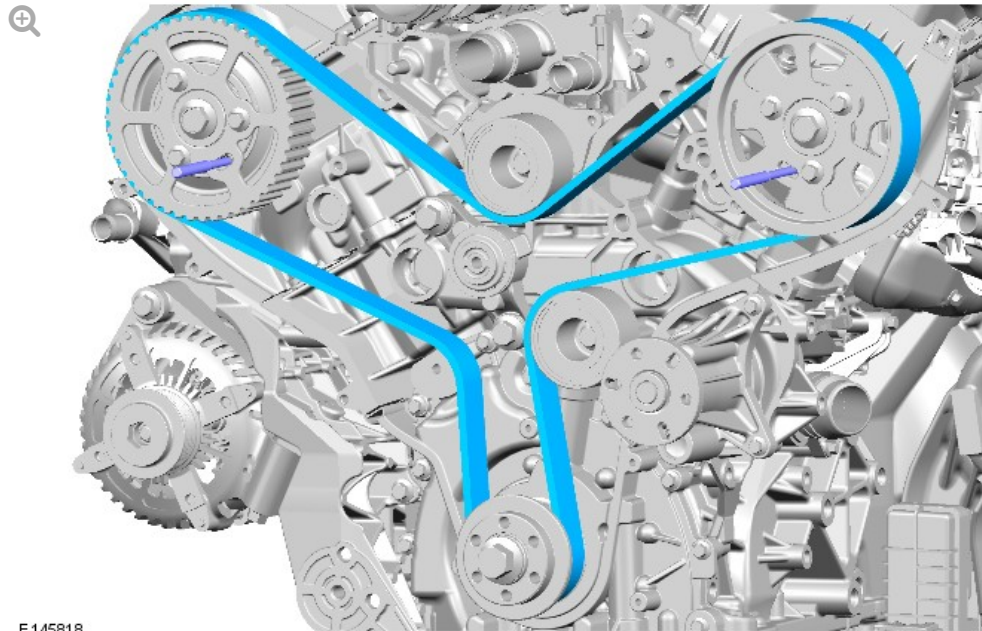

E145818

INSTALLATION

1.




E145820

Renew Part: *Timing belt.*

2.

CAUTIONS:

- Make sure that a new bolt is installed.
- Only tighten the bolts finger-tight at this stage.

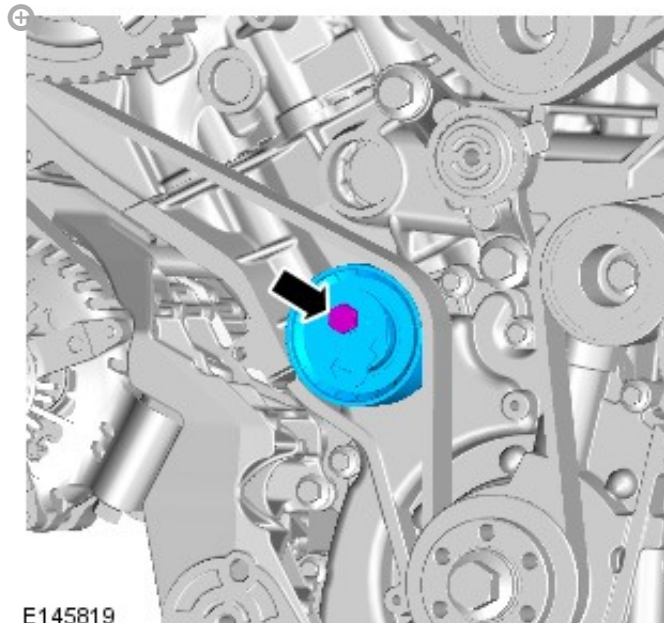


Renew Part: *Timing belt tensioner.*

Renew Part: *Timing belt tensioner bolt.*

3.

CAUTION:

Make sure the camshaft pulleys remain in the clockwise position.

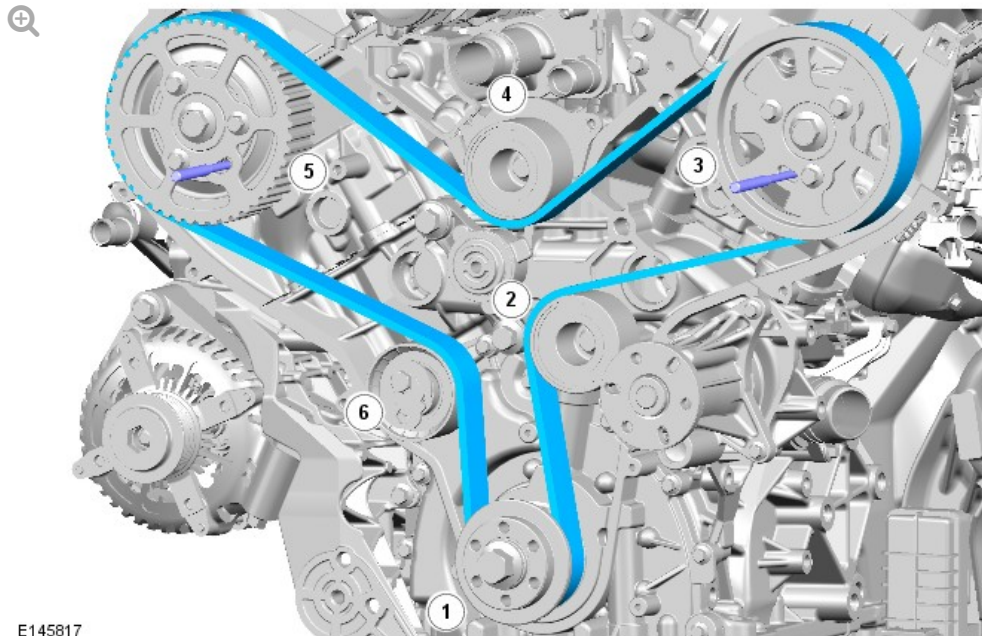


E145817

- Install the new timing belt.
- Starting at the crankshaft pulley, install the timing belt in a counter-clockwise direction, in the sequence shown.
- Stage one: Attach the timing belt to the crankshaft pulley.
- Stage two: Attach the timing belt to the idler pulley.
- Stage three: Attach the timing belt to the left-hand camshaft pulley.
- Stage four: Attach the timing belt to the idler pulley.
- Stage five: Attach the timing belt to the RH camshaft pulley.
- Stage six: Attach the timing belt to the timing belt tensioner.

4.

CAUTION:

Make sure the timing belt tensioner window is aligned with the groove as illustrated.

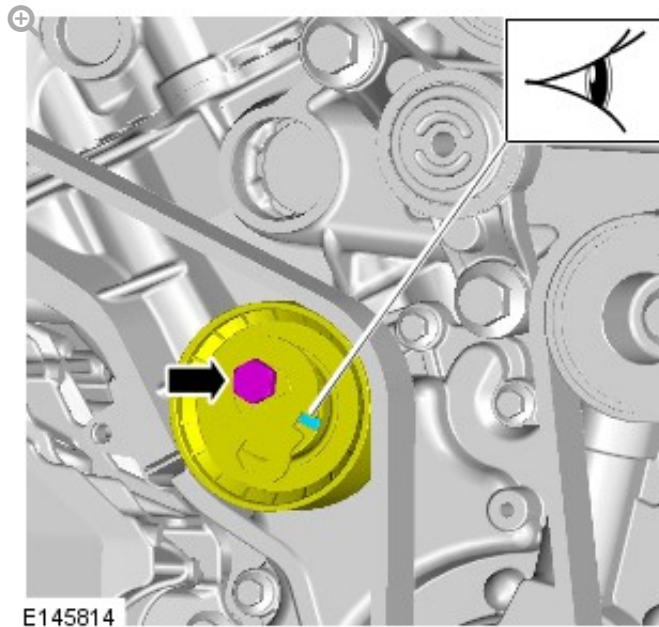


- Tension the timing belt.
- Rotate the tensioner assembly counter-clockwise.
- *Torque:*
 - Stage 1: **10 Nm**
 - Stage 2: **65°**

5.

CAUTION:


Do not use the special tools to lock the camshafts. Failure to follow this instruction may result in damage to the engine or the special tools.

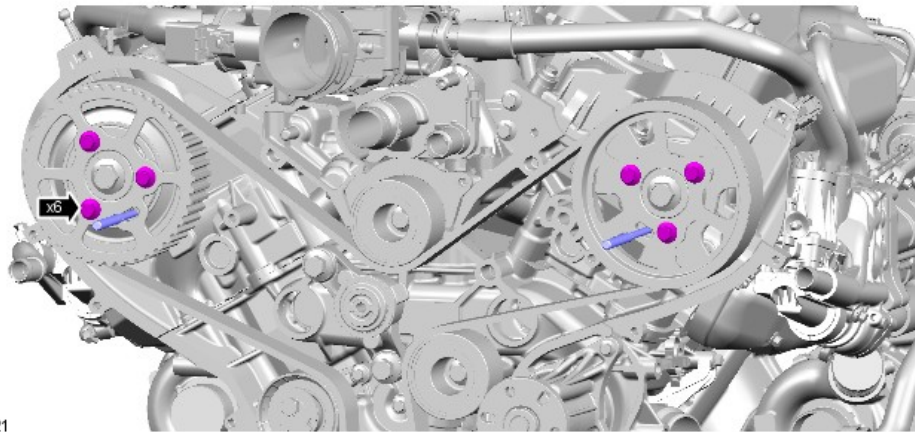

E145821

- Using a suitable tool, counterhold the camshaft pulley center retaining bolts.
- **Torque: 23 Nm**


6.

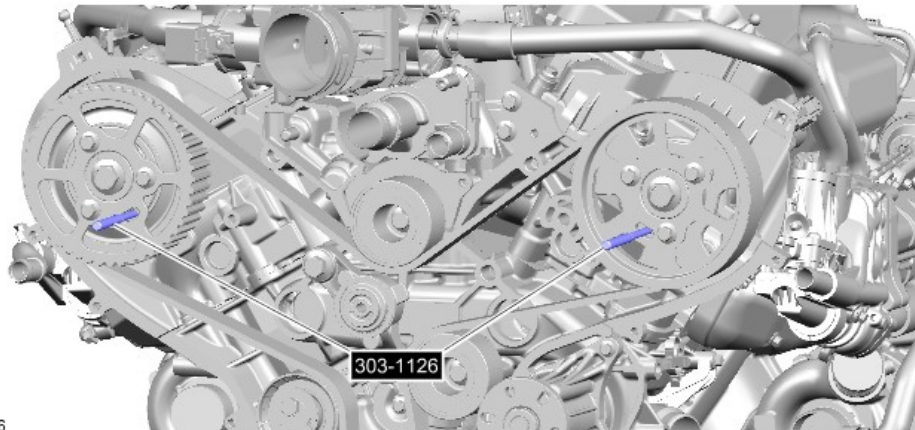

E145816

Special Tool(s): [303-1126](#)

7.

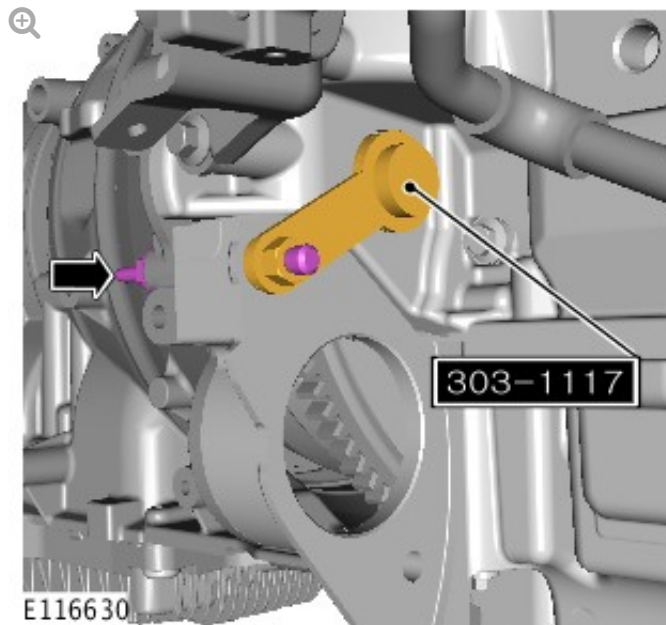

Special Tool(s): [303-1117](#)


8.

CAUTION:

Only rotate the crankshaft clockwise.


Rotate the engine two complete turns clockwise.

9.

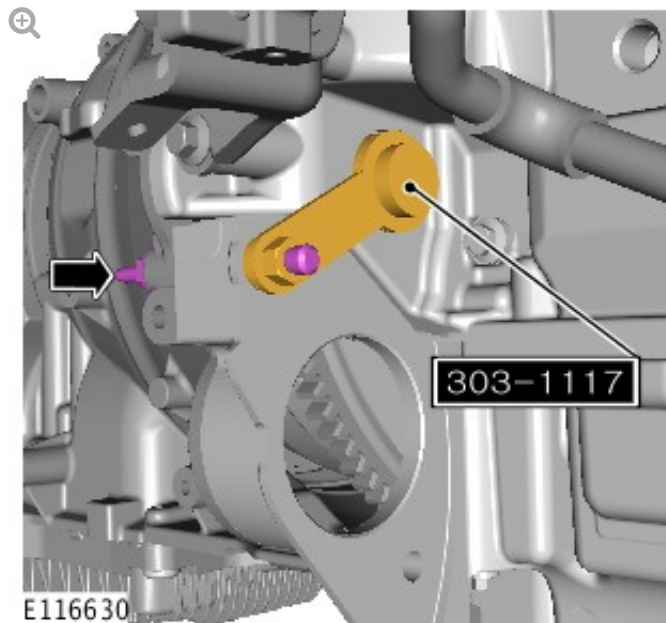


Special Tool(s): [303-1117](#)

10.

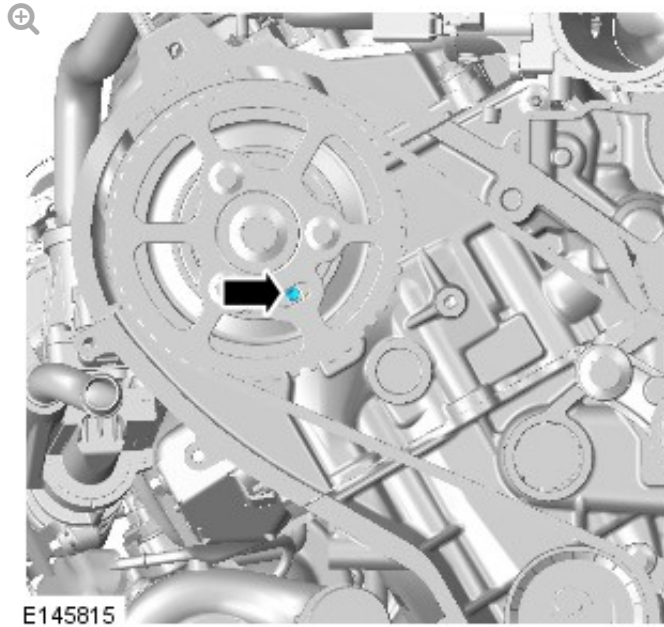


- Install the special tools to the exhaust camshaft pulleys.
- If the special tool does not fit correctly, repeat the timing belt installation procedure.
- Remove the special tools from the camshaft pulleys.

11.

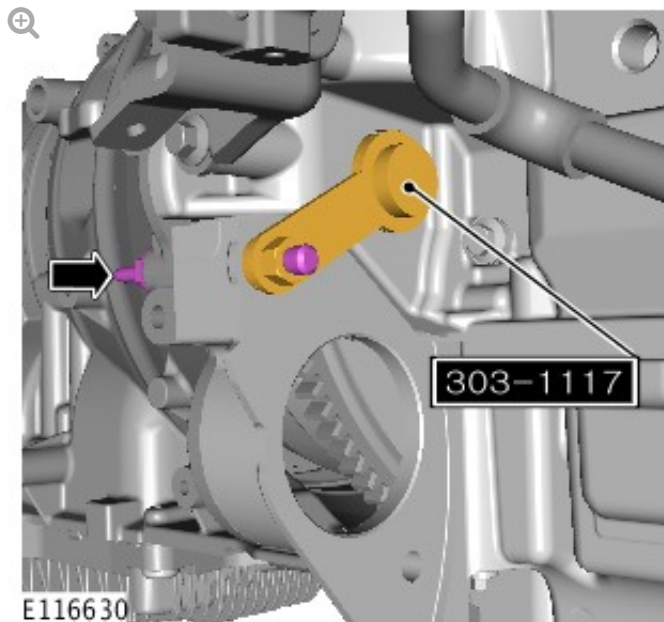

Special Tool(s): [303-1117](#)

12.

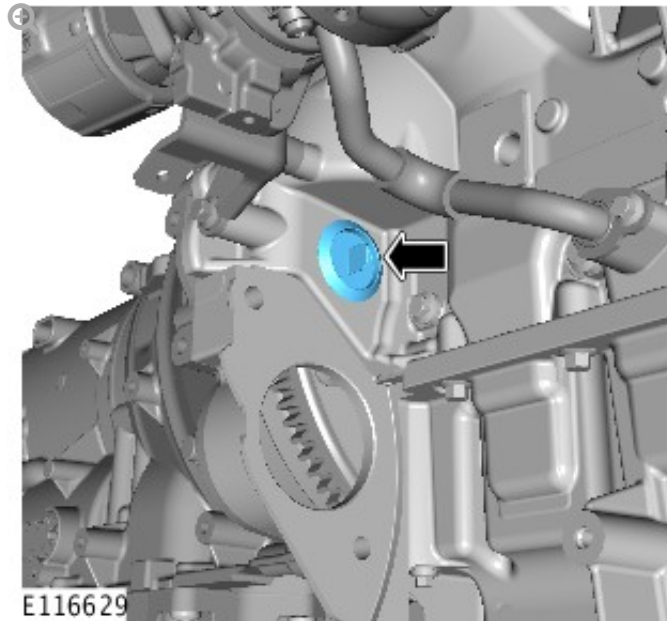

13. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).
14. Refer to: [Timing Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Timing Cover - TDV6 3.0L Diesel - Gen 2](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).