

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 303-01


ENGINE - TDV8 4.4L DIESEL

CRANKSHAFT PULLEY (G1509165)

REMOVAL AND INSTALLATION

12.21.01	PULLEY - CRANKSHAFT - RENEW	4400 CC, TDV8	2.9	USED WITHINS
----------	-----------------------------------	------------------	-----	-----------------

SPECIAL TOOL(S)

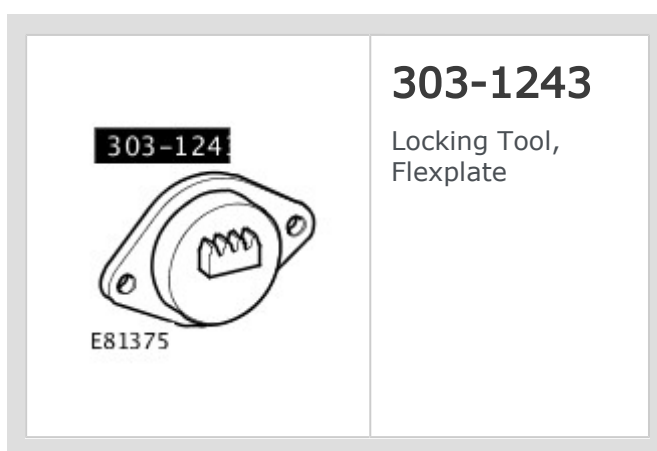

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 1	Renew Part	Crankshaft pulley bolt	1

REMOVAL

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.




WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.


3. Refer to: [Starter Motor](#) (303-06D Starting System - TDV8 4.4L Diesel, Removal and Installation).

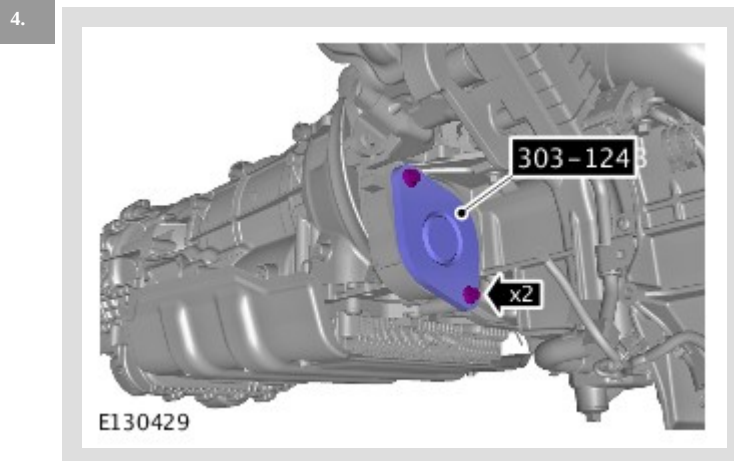


Special Tool(s): [303-1243](#)


5. Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).

6.

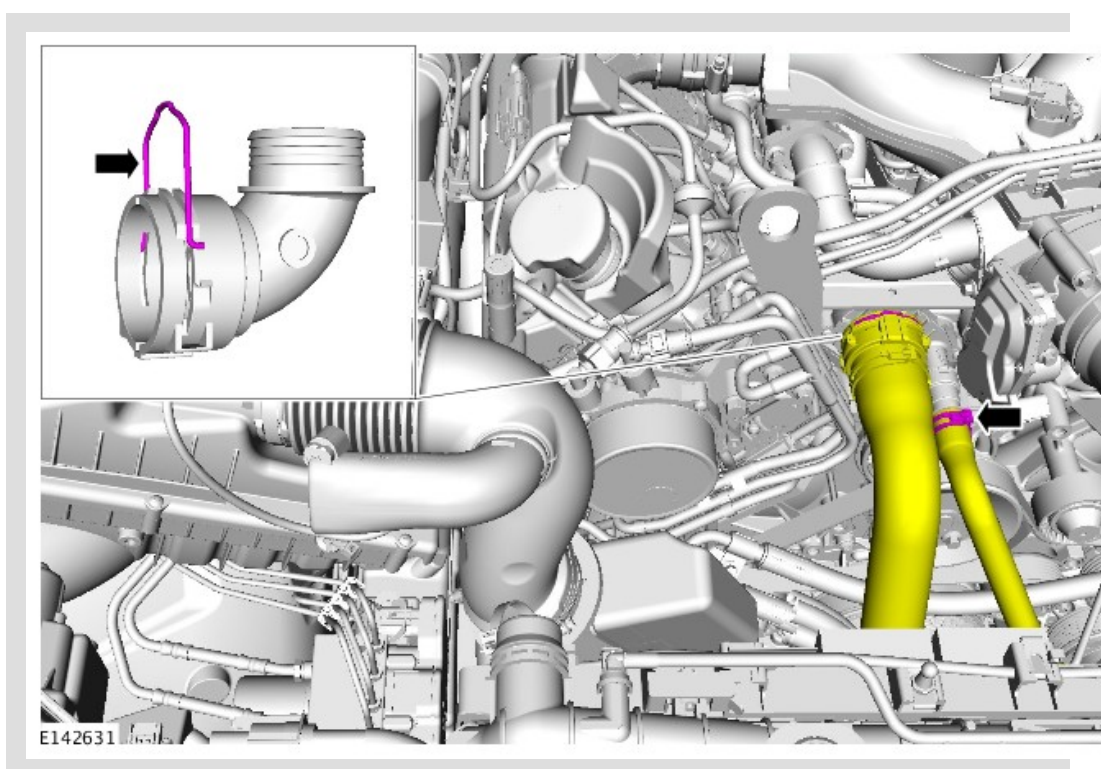

7.

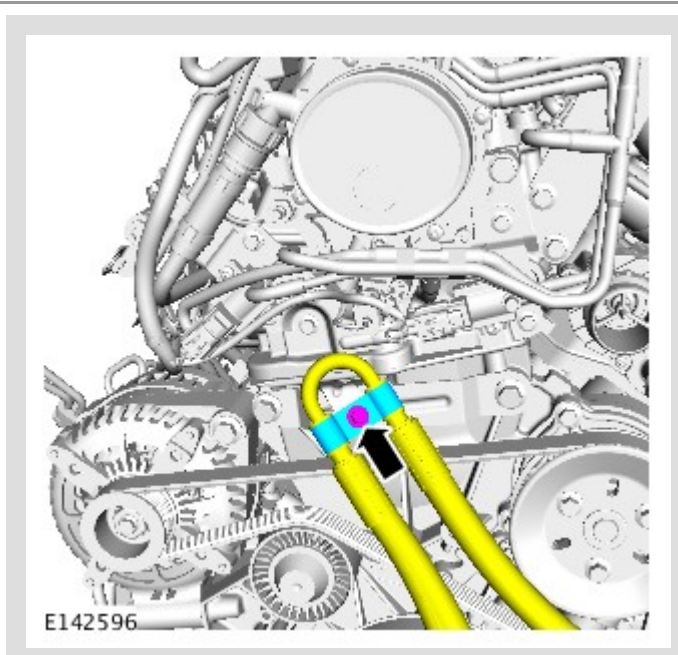

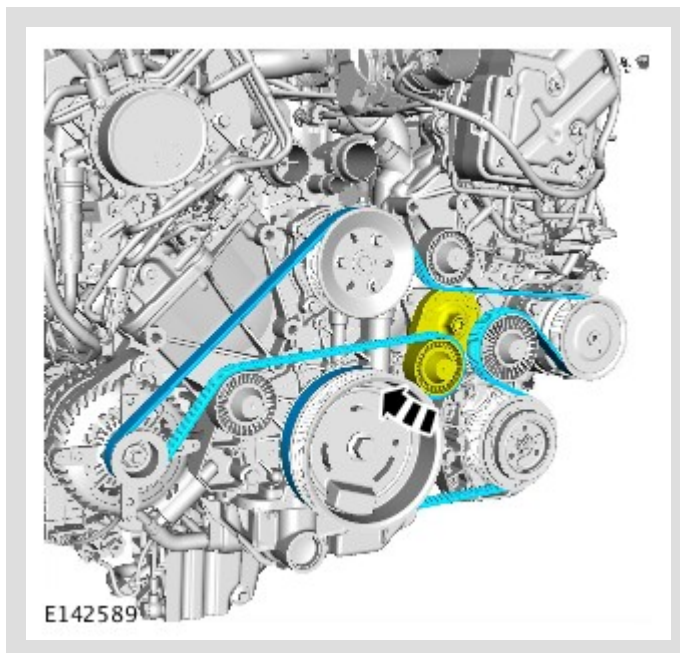


⚠ CAUTION:

Discard the bolt.

△ NOTE:

The crankshaft pulley bolt will be very tight.

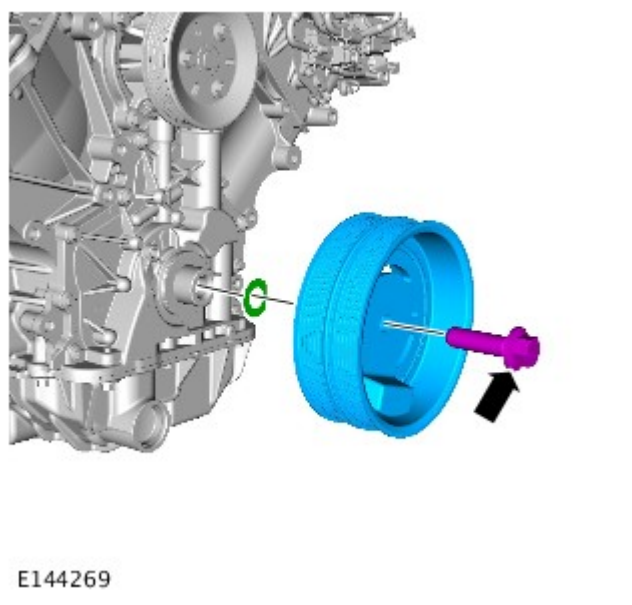

INSTALLATION

1.




CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Make sure that the washer is installed between the nose of the crankshaft and the crankshaft pulley.
- Make sure that a new crankshaft pulley bolt is installed.



NOTE:

The use of a torque multiplier capable of 600Nm will be required.

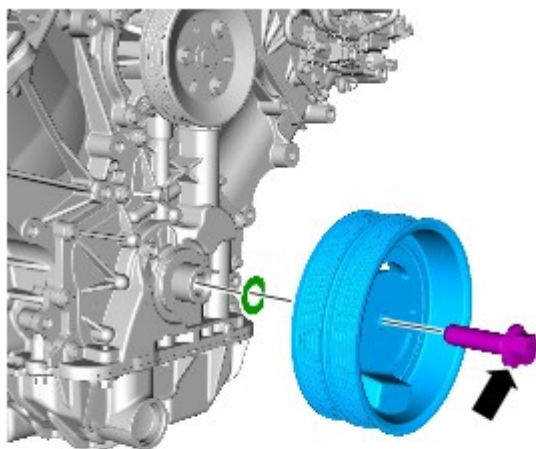

E144269

Renew Part: *Crankshaft pulley bolt* : 1 .


Torque:

Stage 1: 100 Nm

Stage 2: 103°


Stage 3: 35°

2.

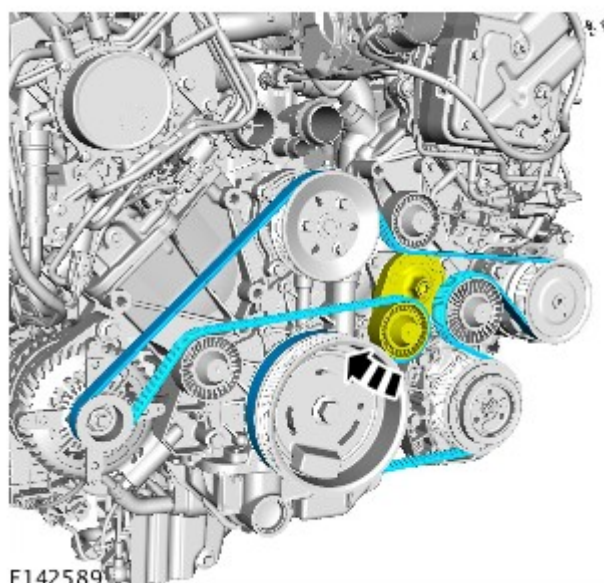


E142589

3.

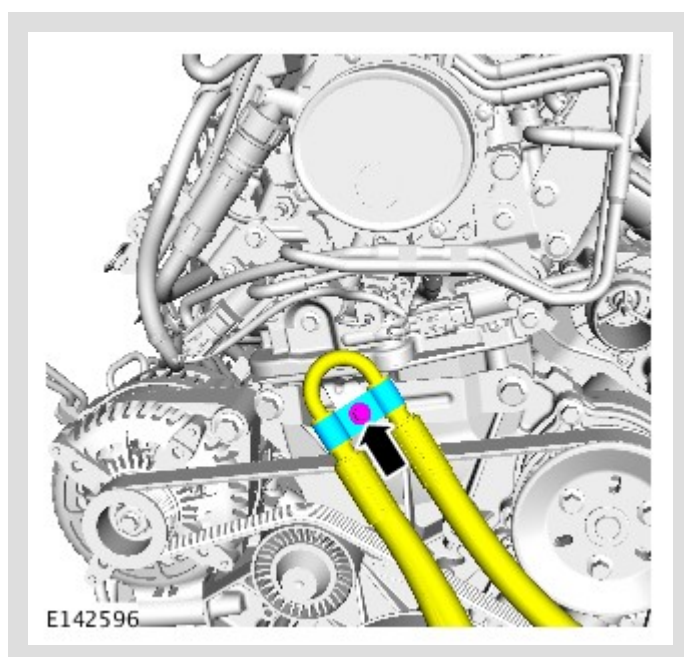


Torque: 10 Nm

4.

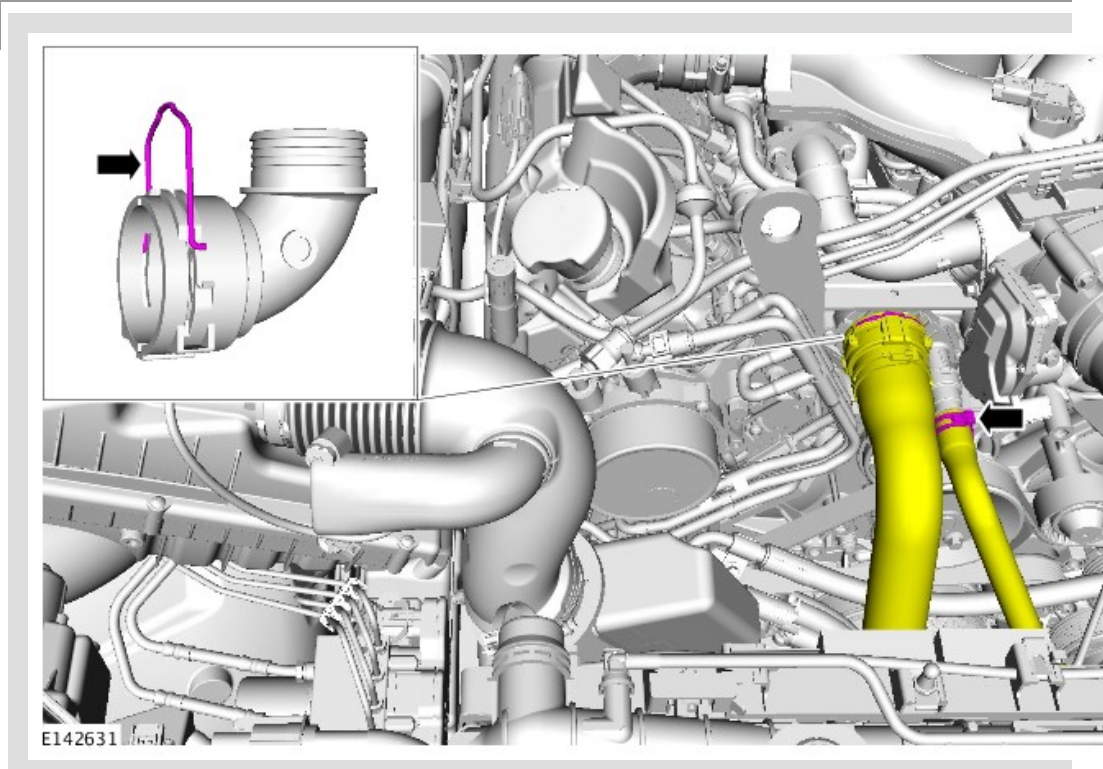

-
5. Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).
-

6.

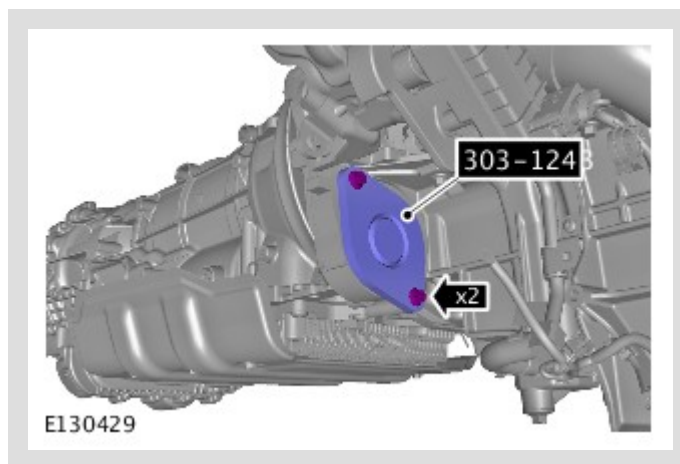

Special Tool(s): [303-1243](#)

-
7. Refer to: [Starter Motor](#) (303-06D Starting System - TDV8 4.4L Diesel, Removal and Installation).
-

8. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).