

PUBLISHED: 28-SEP-2015
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

ENGINE (G1509362)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)



E115255

303-1435

Engine Lifting Brackets
Rear



E115254

303-1436

Engine Lifting Bracket
Front

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.

- Some components shown removed for clarity.

1.



WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2.




NOTE:

This step requires the aid of another technician.

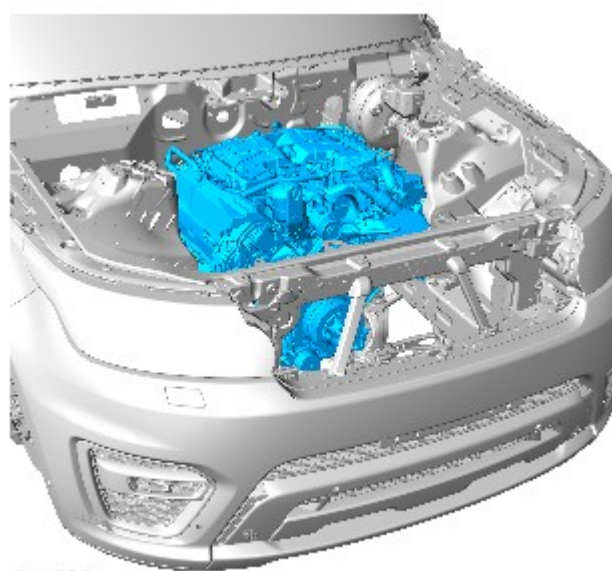


3.

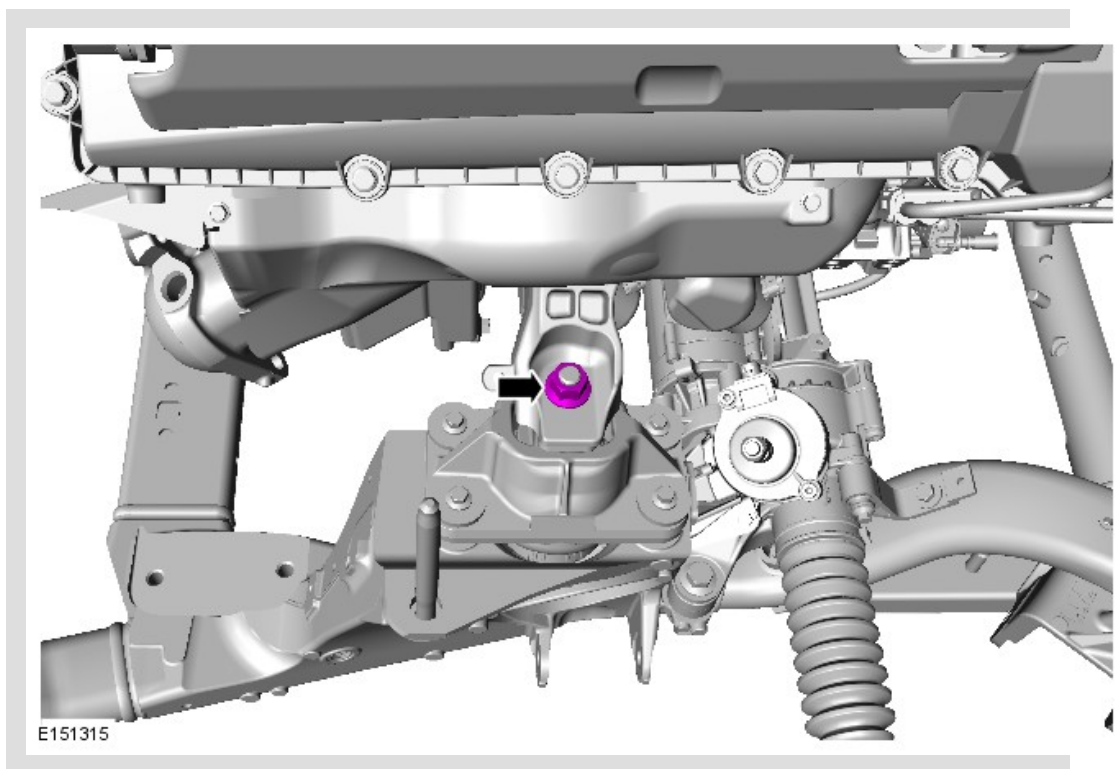


Torque: 110 Nm

4.

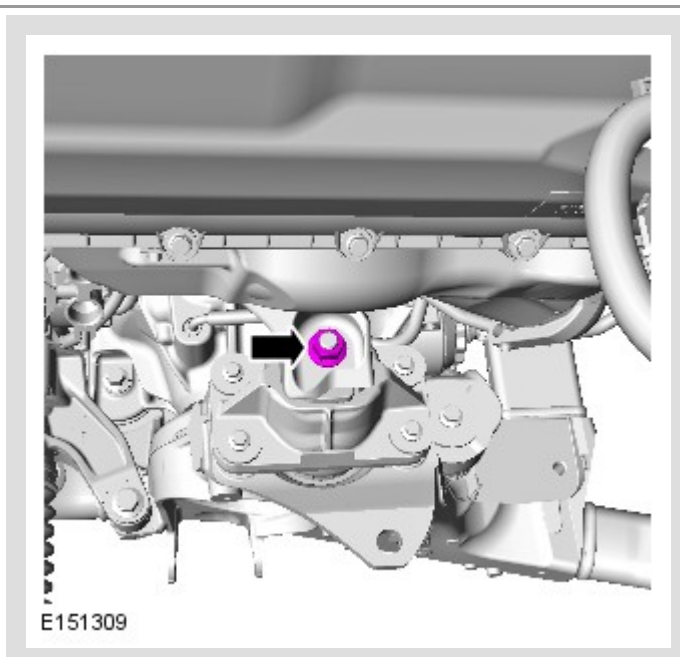


Torque: 110 Nm

5.

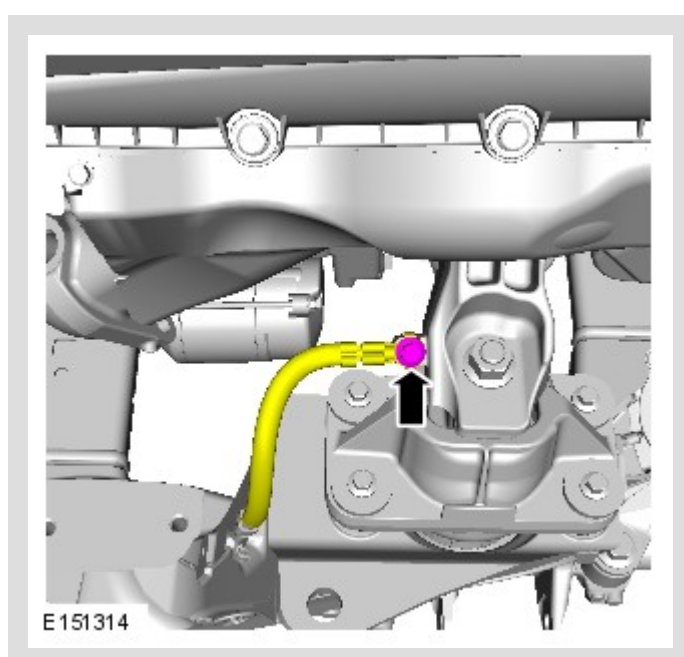


Torque: 9 Nm

6.

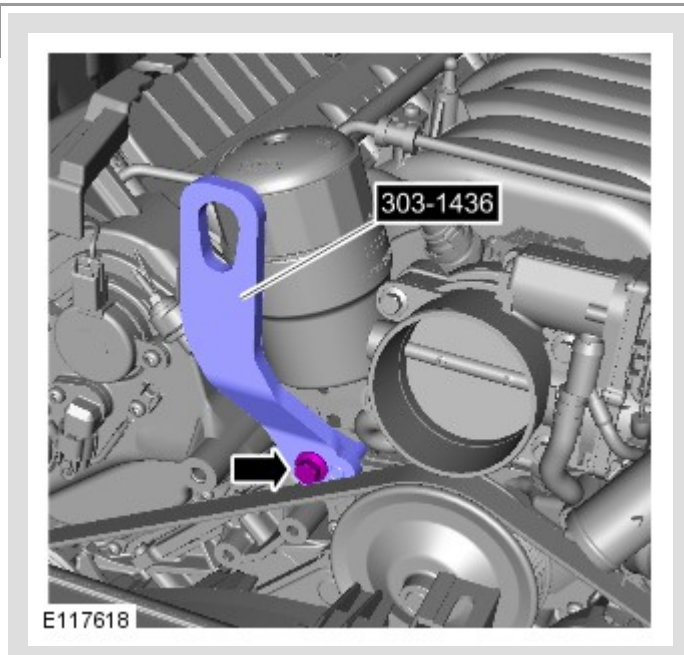


7.

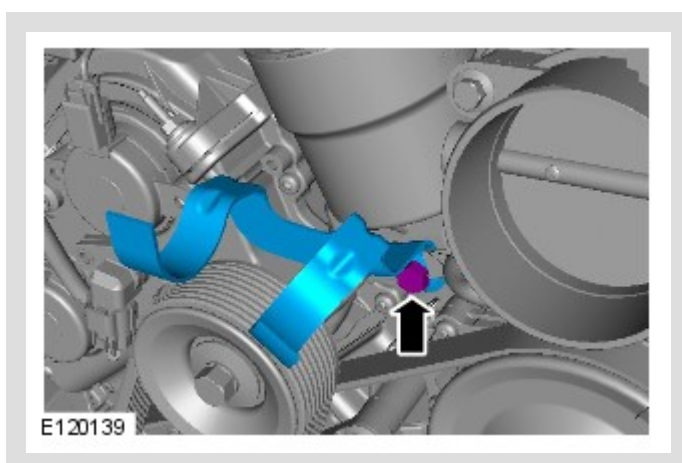


Torque: 25 Nm

8.

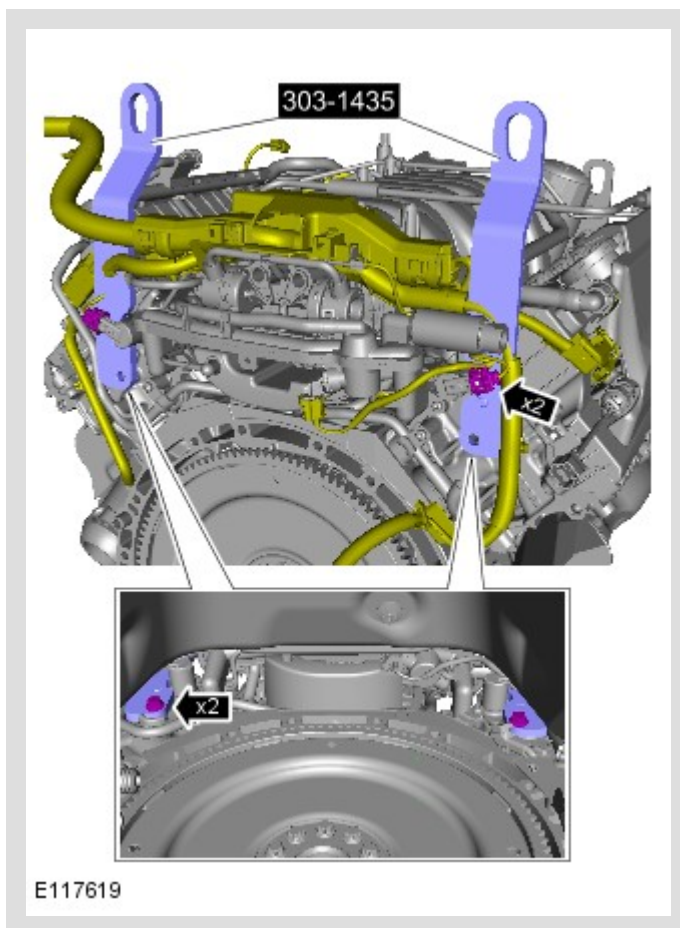


Special Tool(s): [303-1435](#)

9.

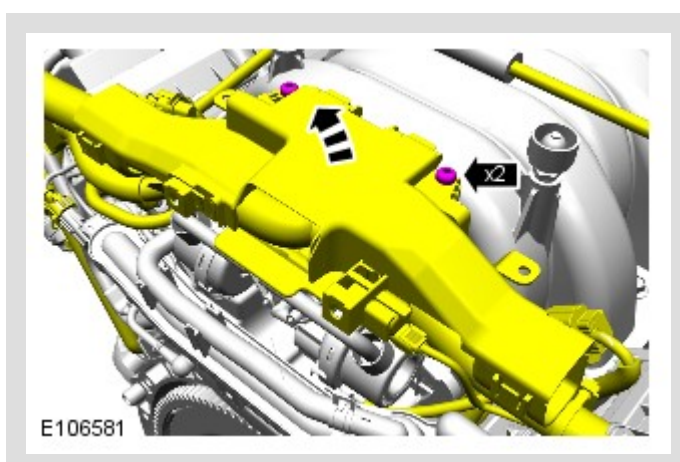


Torque: 10 Nm

10.

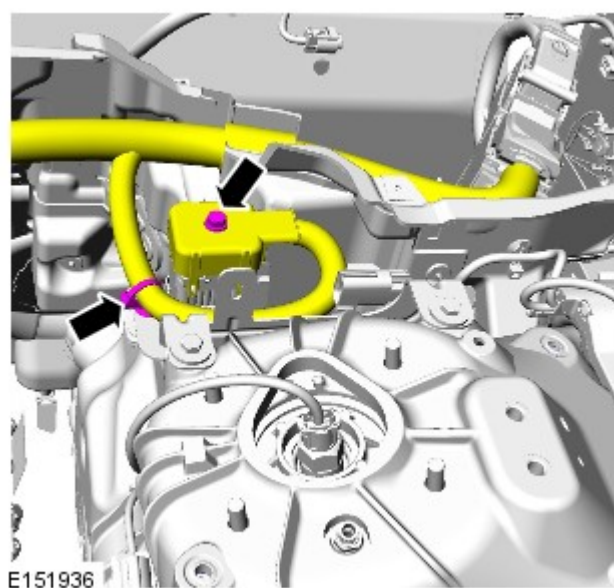


Torque: 7 Nm

11.

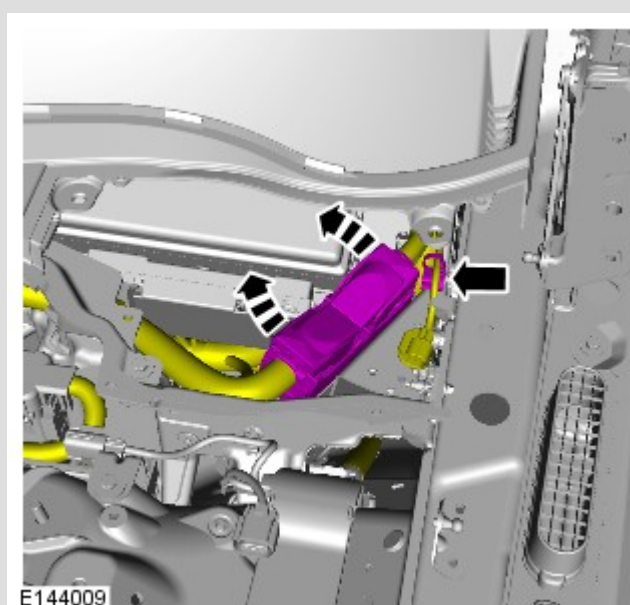


12.

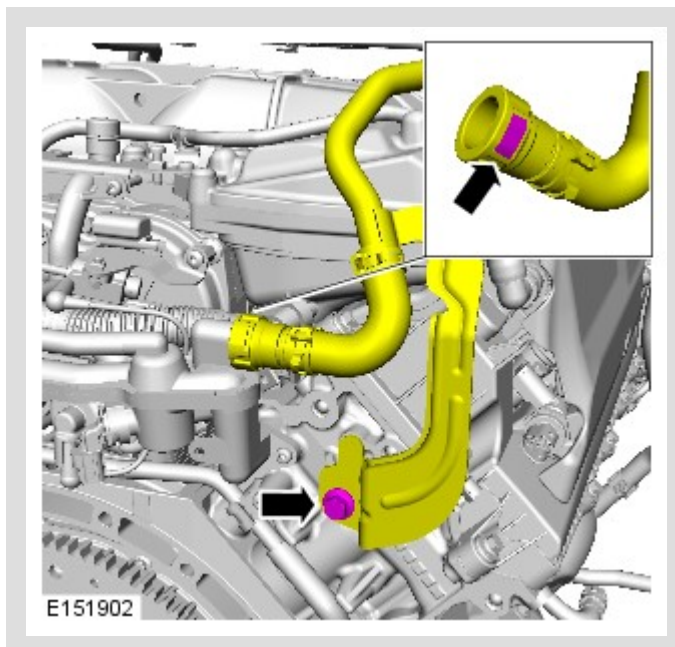


Torque: 25 Nm

13.

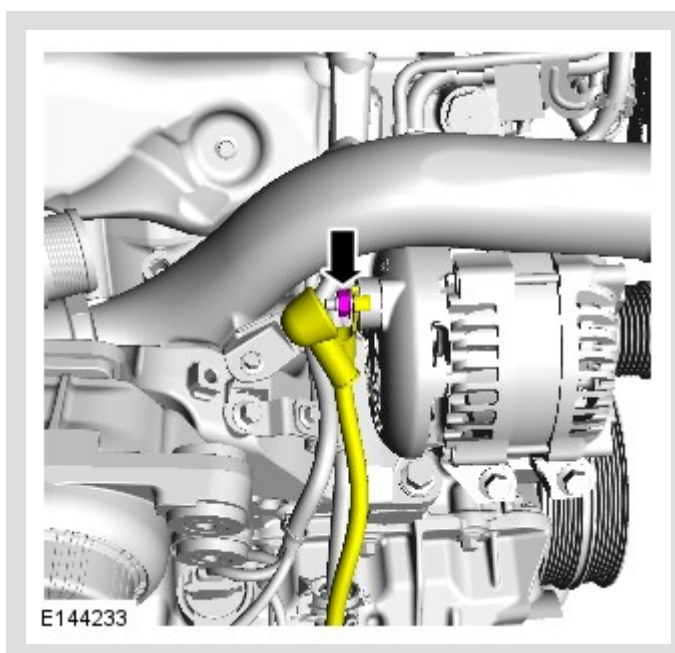


Torque: 12 Nm

14.

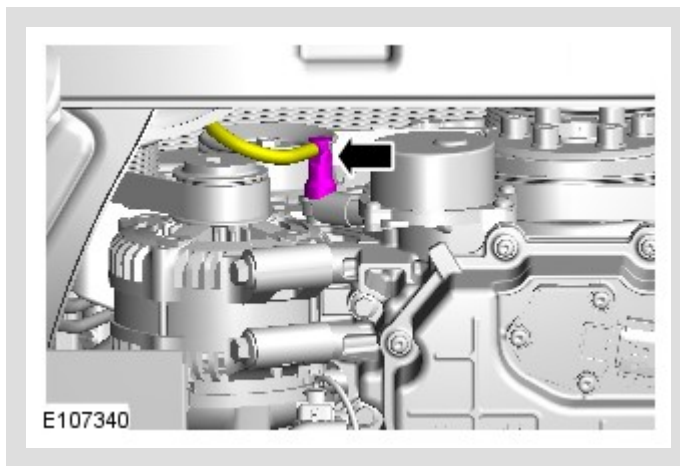


15.

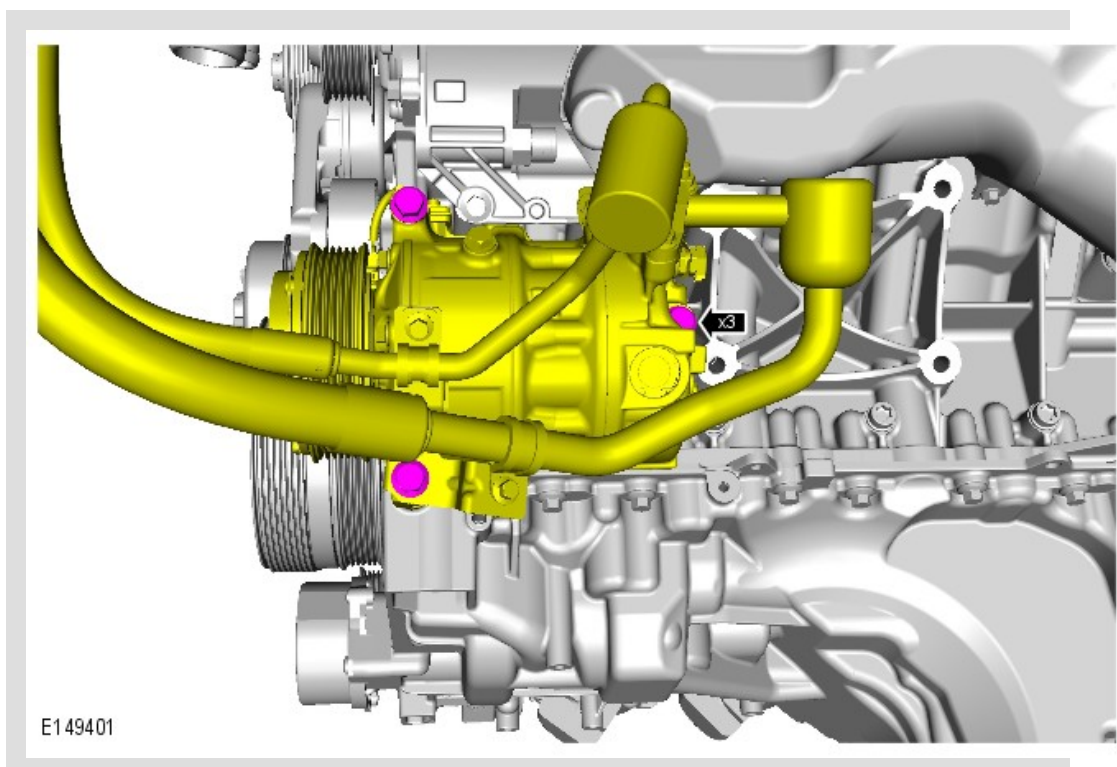


Torque: 25 Nm

16.

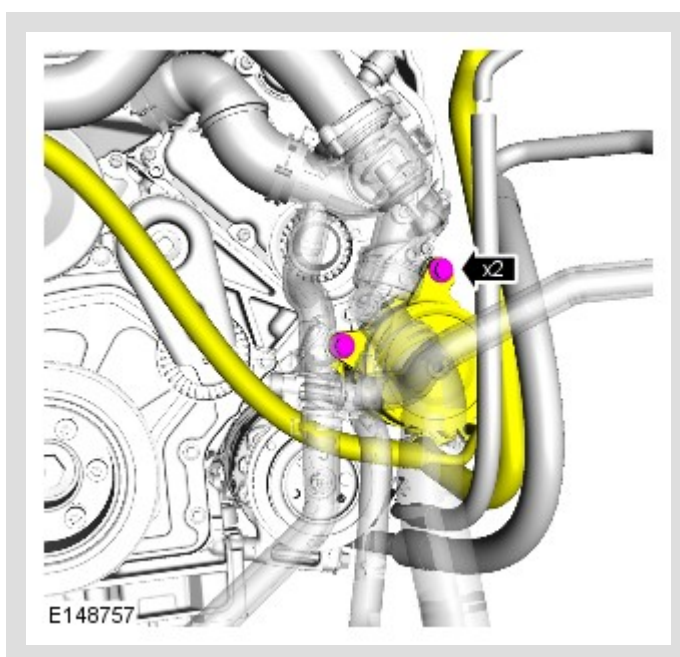


Torque: 22 Nm

17.

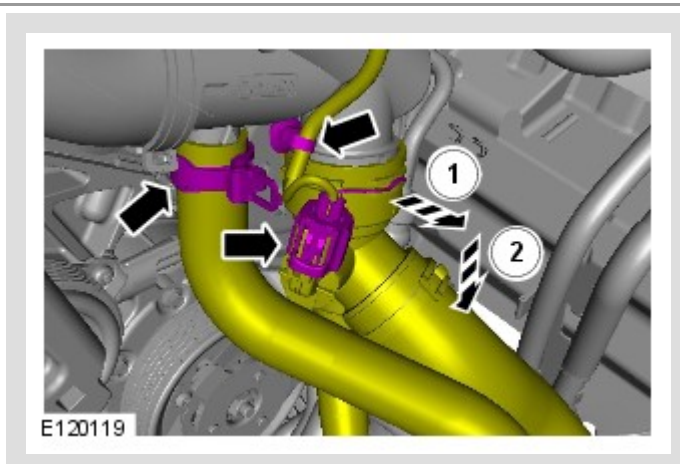


18.

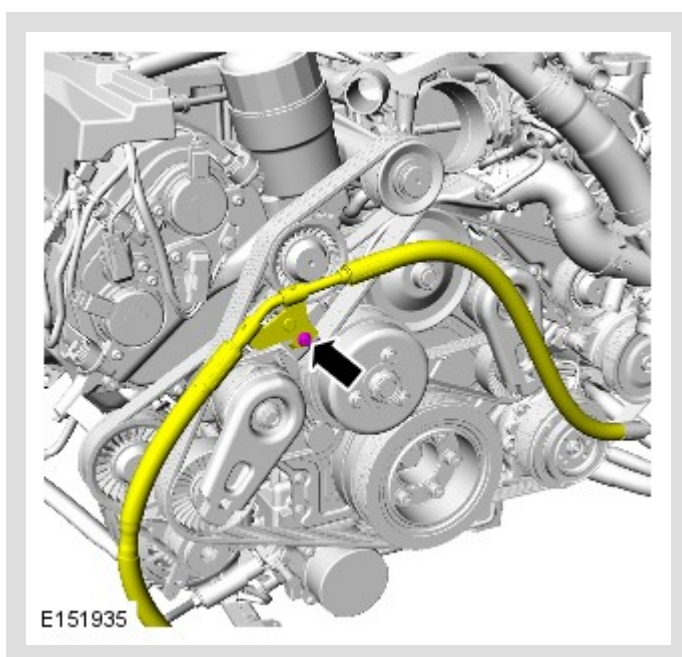


Torque: 10 Nm

19.

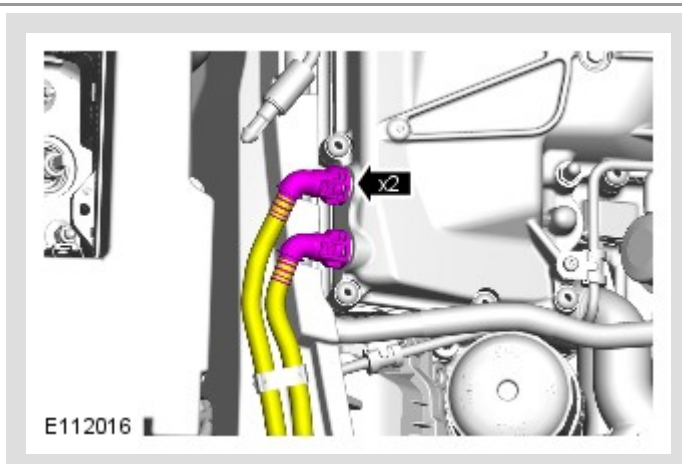

20.

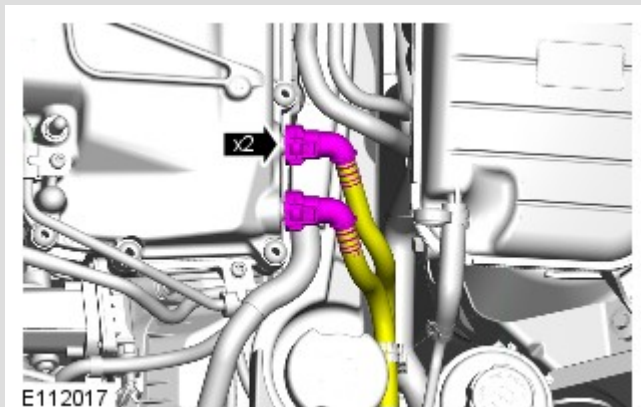

21.




WARNING:

Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.




CAUTION:


Be prepared to collect escaping fuel.

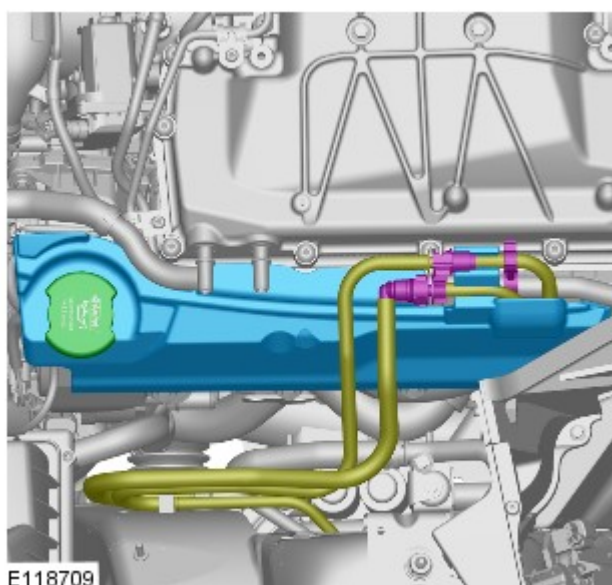

22.

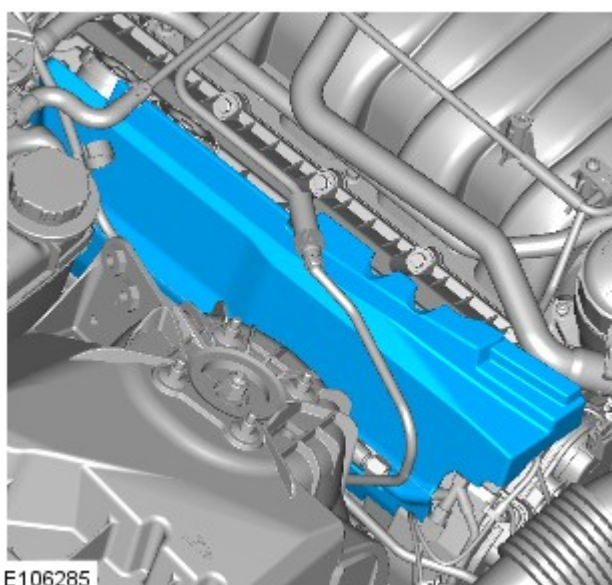


23.

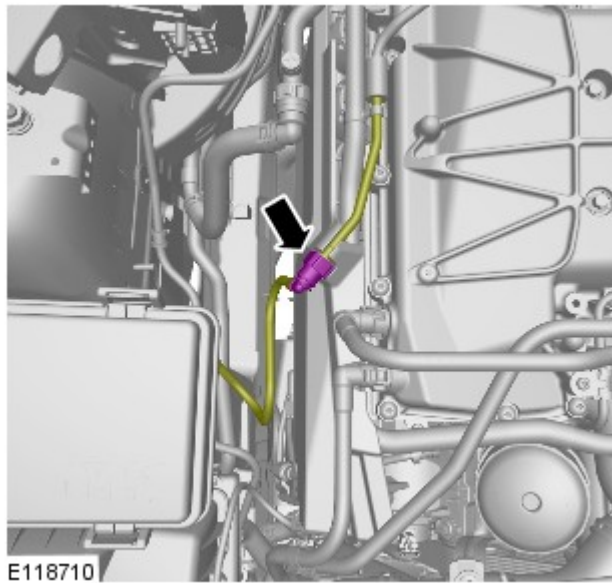

24.

 NOTE:


Left hand drive only.

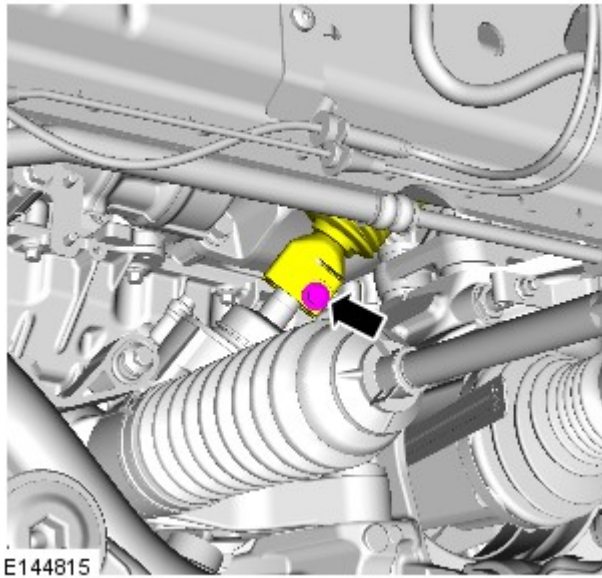

Install a new bolt.

Torque: 30 Nm

25.

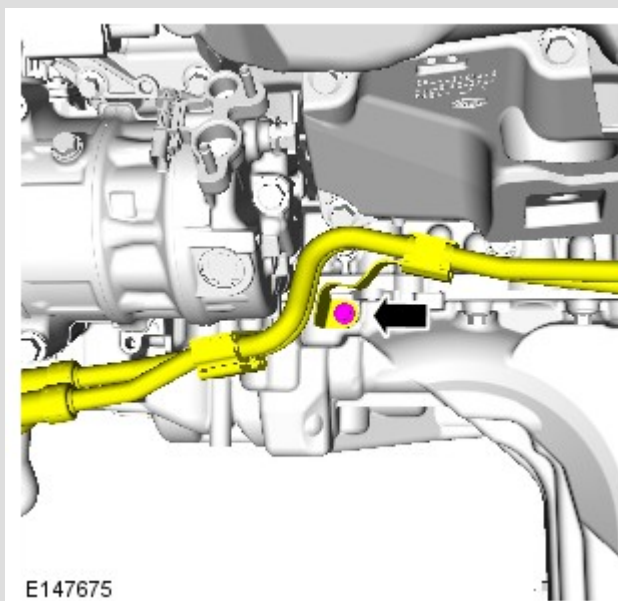

Torque: 9 Nm

26. Refer to: Transmission - V8 5.0L Petrol/V8 S/C 5.0L Petrol (307-01 Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).

27. Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

28. Refer to: Radiator - V8 S/C 5.0L Petrol (303-03 Engine Cooling - V8 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

29. Refer to: Hood (501-02 Front End Body Panels, Removal and Installation).

30. Refer to: Secondary Bulkhead Center Panel - V8 S/C 5.0L Petrol (501-02 Front End Body Panels, Removal and Installation).

31. Reconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

32. Refer to: Engine Oil Draining and Filling (303-01 Engine - V8 5.0L Petrol, General Procedures).