

PUBLISHED: 28-APR-2017  
2014.0 RANGE ROVER (LG), 303-01


ENGINE - V8 S/C 5.0L PETROL

# **LEFT EXHAUST MANIFOLD** (G1509348)

## REMOVAL AND INSTALLATION


|          |                                                                |                                    |   |                 |  |
|----------|----------------------------------------------------------------|------------------------------------|---|-----------------|--|
| 30.15.10 | MANIFOLD<br>-<br>EXHAUST<br>- LH<br>/FRONT<br>/EACH -<br>RENEW | 5000 CC, AJ<br>V8,<br>SUPERCHARGED | 4 | USED<br>WITHINS |  |
|----------|----------------------------------------------------------------|------------------------------------|---|-----------------|--|

## SPECIAL TOOL(S)

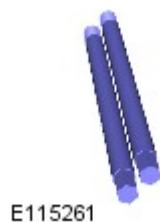

## 303-1444-01

Exhaust Manifold  
Installation Guide Pins -  
Threaded

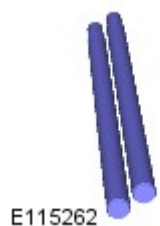

## 303-1444-02

Exhaust Manifold  
Installation Guide Pins -  
Unthreaded

### PART(S)

| STEP                | PART NAME               | QUANTITY |
|---------------------|-------------------------|----------|
| Installation Step 2 | Exhaust manifold gasket | 1        |
| Installation Step 4 | Exhaust manifold bolts  | 1        |

### REMOVAL

#### NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

- 2.



**WARNING:**

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

- 3.

Refer to: Exhaust System (309-00 Exhaust System - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

- 4.



**NOTE:**

If equipped with Dynamic Response.

Refer to: Thermostat Housing - V8 S/C 5.0L Petrol (303-03 Engine Cooling - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

- 5.


Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

- 6.



**NOTE:**


If equipped with Dynamic Response.

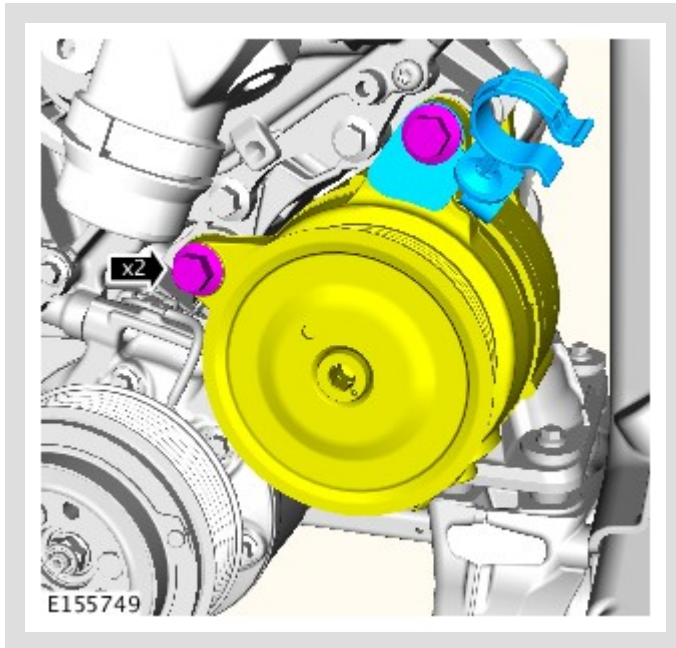

7.

 **NOTE:**

Loosen the bolts, but do not fully remove.

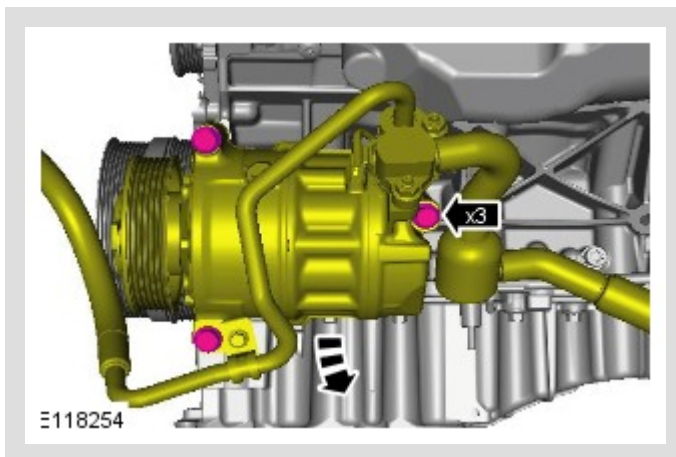


8.




#### NOTE:


If equipped with Dynamic Response.

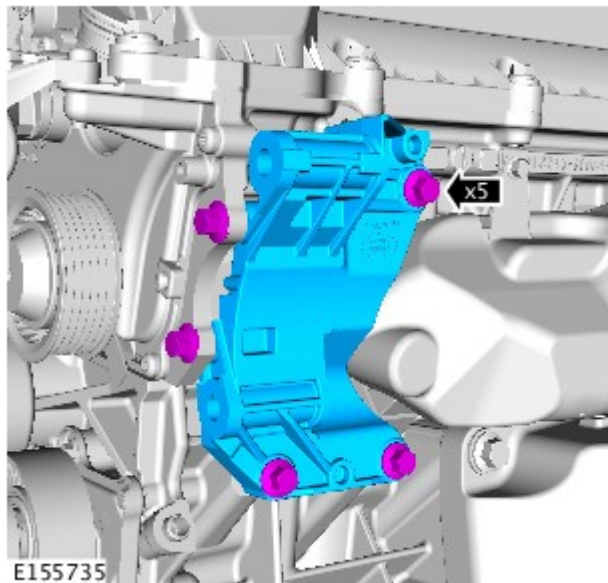

9.

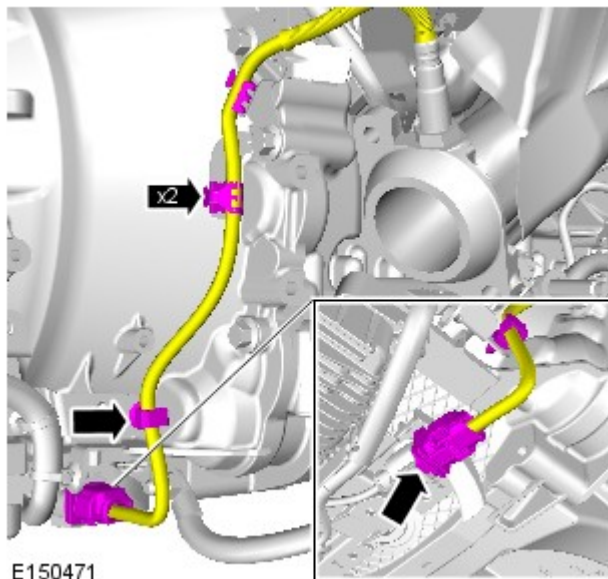

10.

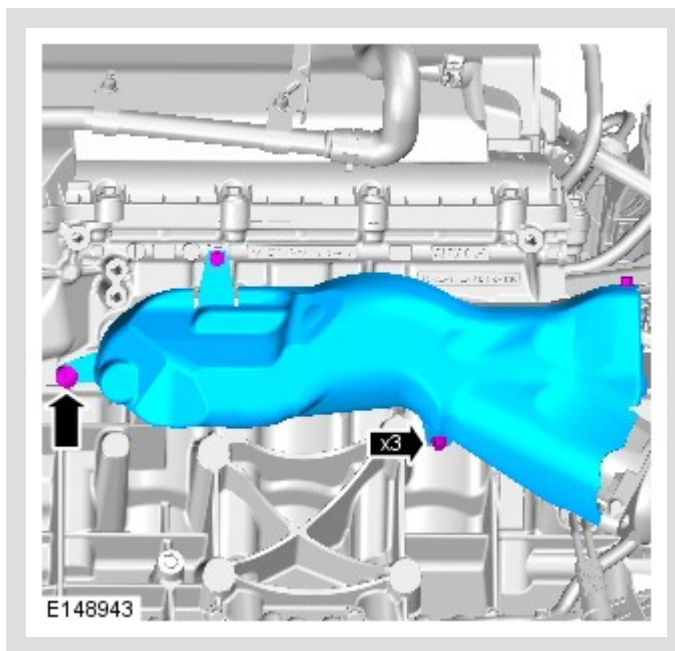


11.

**⚠ CAUTION:**

Discard the bolts.

**⚠ NOTES:**


- Discard the gasket.
- Make sure that the position of the spacers is noted before removal of the manifold.

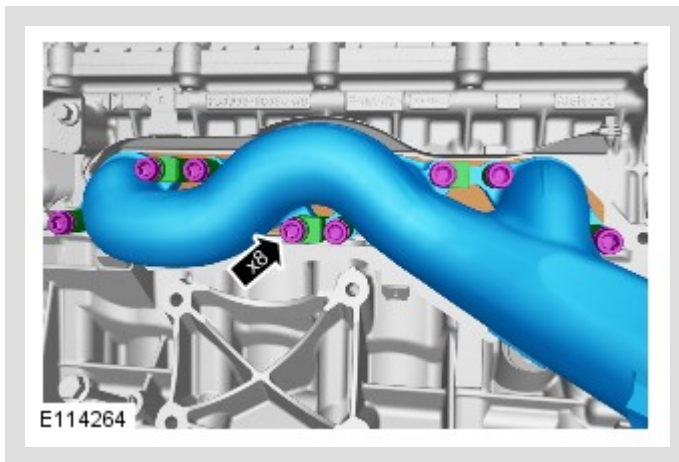

12.

 **NOTE:**

Do not disassemble further if the component is removed for access only.

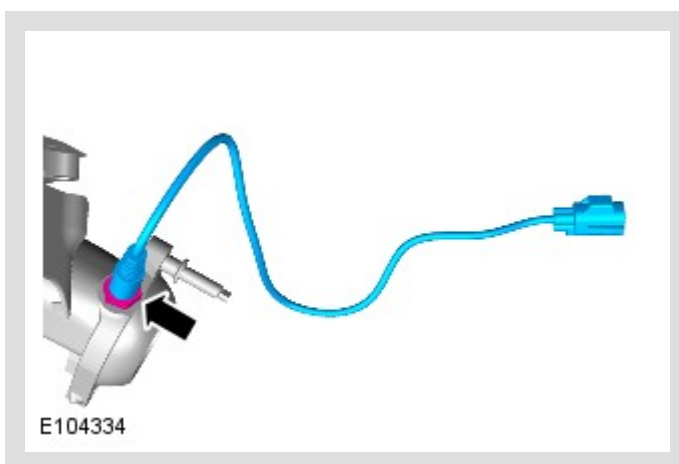

## INSTALLATION

1.






#### CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- Make sure the anti-seize compound does not contact the HO2S tip.



#### NOTE:

If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.

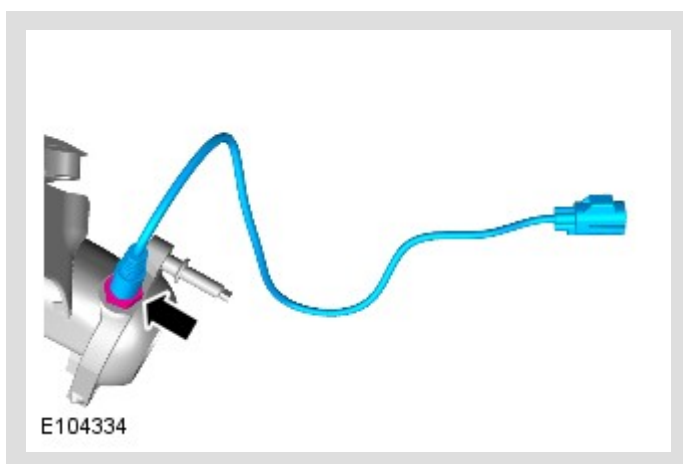


*Torque: 45 Nm*

2.



#### NOTE:

Install a new gasket.

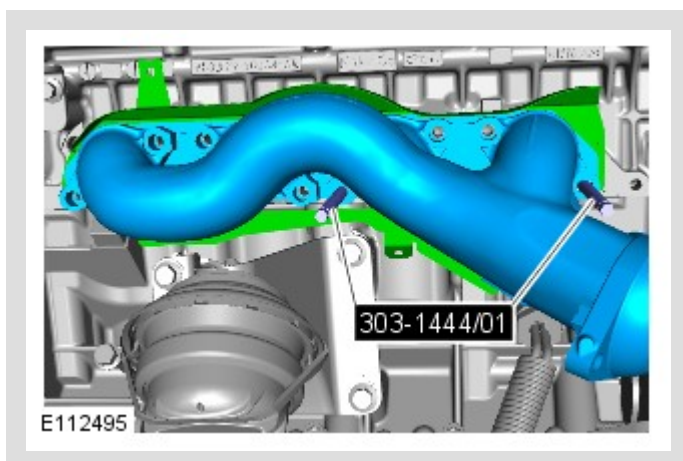


*Special Tool(s):* [303-1444-01](#)

3.

 **NOTE:**

If a new cylinder head is installed use the special tools in the illustration.

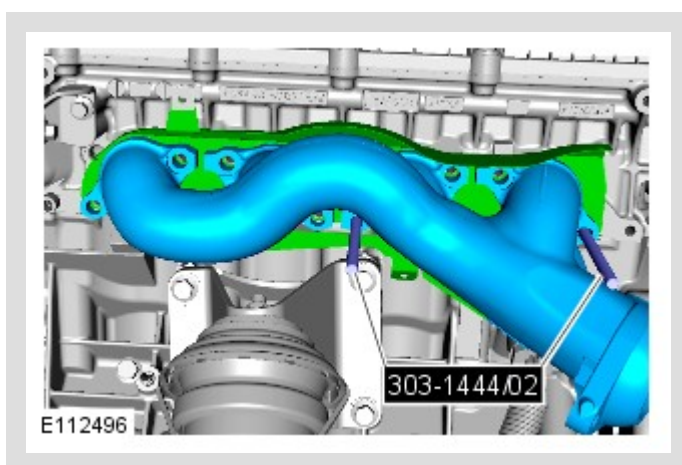

Special Tool(s): 303-1444-02


4.

 **CAUTION:**

Make sure that new bolts are installed.


 **NOTE:**

Install the spacers in the noted position.

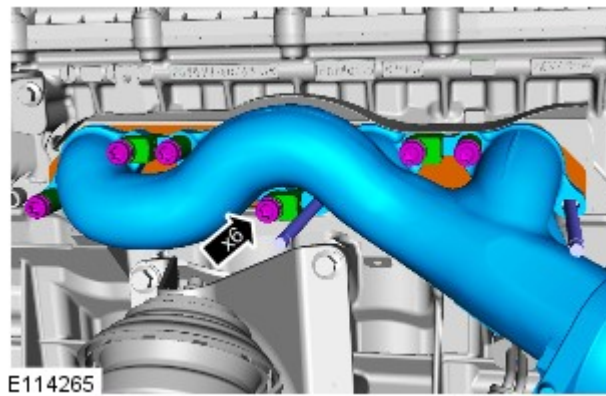

Renew Part: *Exhaust manifold bolts* Quantity: *1* .  
Torque: *10 Nm*

5.

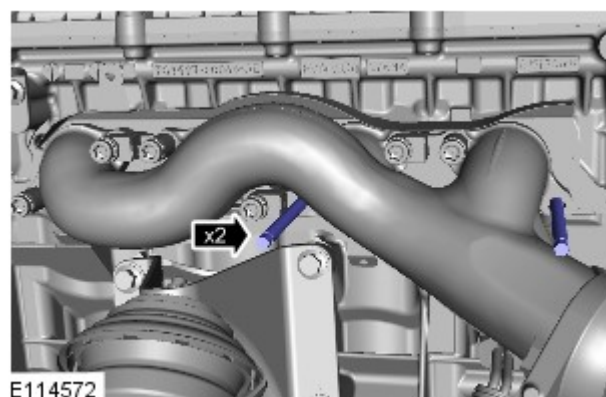


Remove the special tool.

6.


#### NOTES:

- Make sure that new bolts are installed.
- Install the spacers in the noted position.

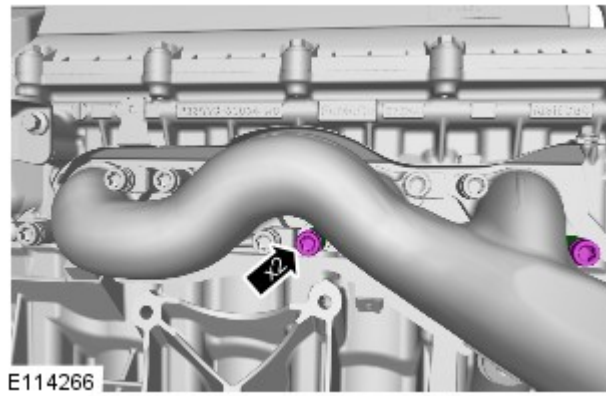


*Torque: 10 Nm*

7.

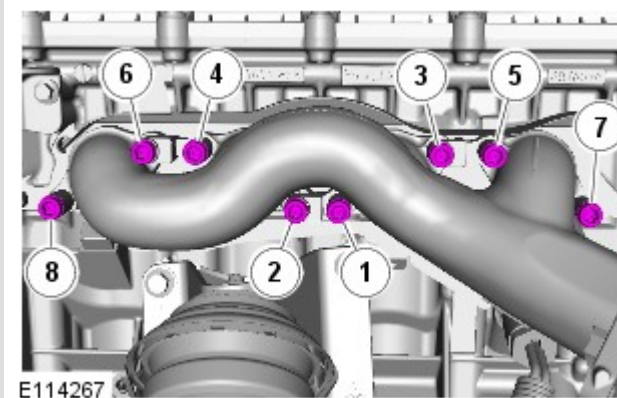

*Torque: 18 Nm*

8.

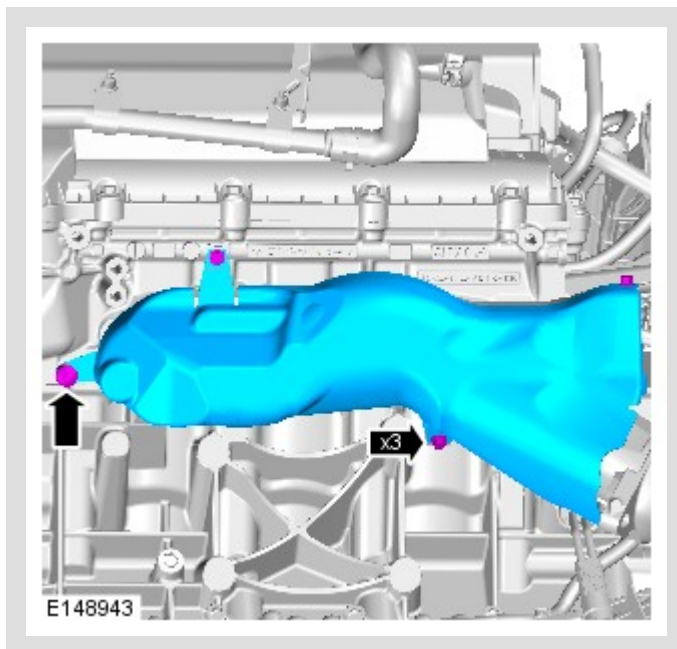


*Torque:*

Bolt 6.3 x 13 3 Nm

M8 25 Nm


9.

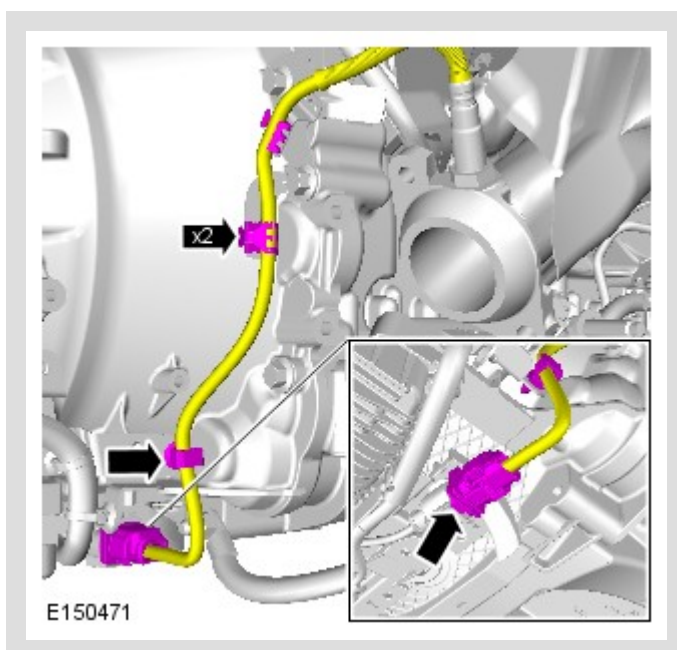

10.


 NOTE:

If equipped with Dynamic Response.

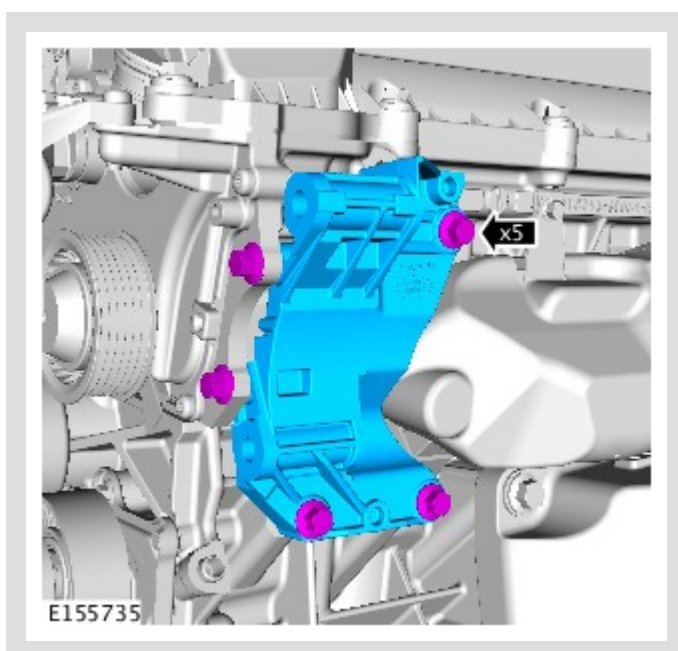

*Torque: 48 Nm*

11.

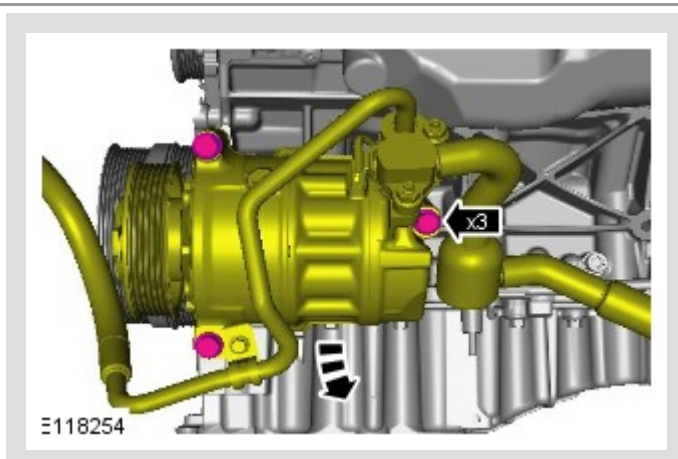


*Torque: 25 Nm*

12.

 **NOTE:**

If equipped with Dynamic Response.

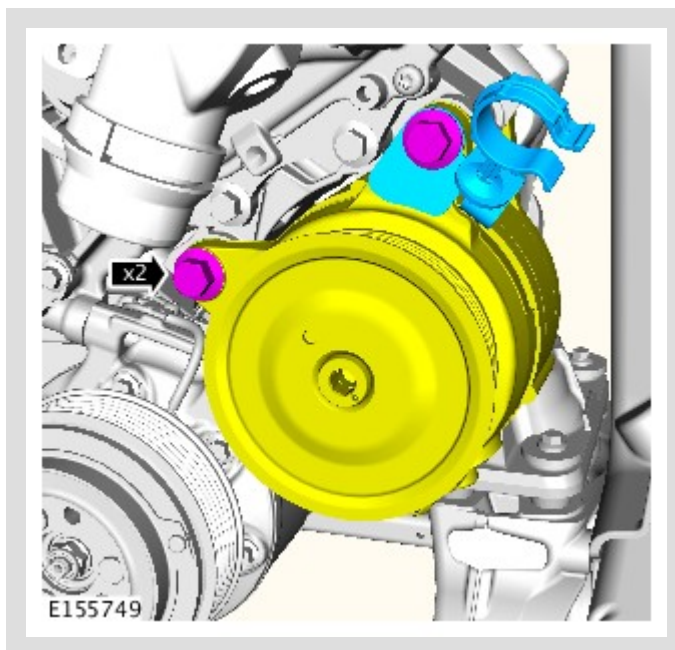

*Torque: 48 Nm*

13.

Refer to: Accessory Drive Belt - V8 S/C 5.0L Petrol (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

14.

 **NOTE:**

If equipped with Dynamic Response.

Refer to: Thermostat Housing - V8 S/C 5.0L Petrol (303-03 Engine Cooling - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).

15.

---

Refer to: Exhaust System (309-00 Exhaust System - V8 N/A 5.0L Petrol/V8 S /C 5.0L Petrol, Removal and Installation).

- 
16. Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).