

PUBLISHED: 22-AUG-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

RIGHT ENGINE MOUNT (G1509312)

REMOVAL AND INSTALLATION

12.45.12	MOUNTING - RH - RENEW	5000 CC, AJ V8, SUPERCHARGED	2.5	USED WITHINS
----------	-----------------------------	------------------------------------	-----	-----------------

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 7	Steering column lower shaft lower bolt	1


REMOVAL

NOTE:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Remove the battery ground cable.
Refer to: Battery and Cables (414-01, Description and Operation).

- 2.

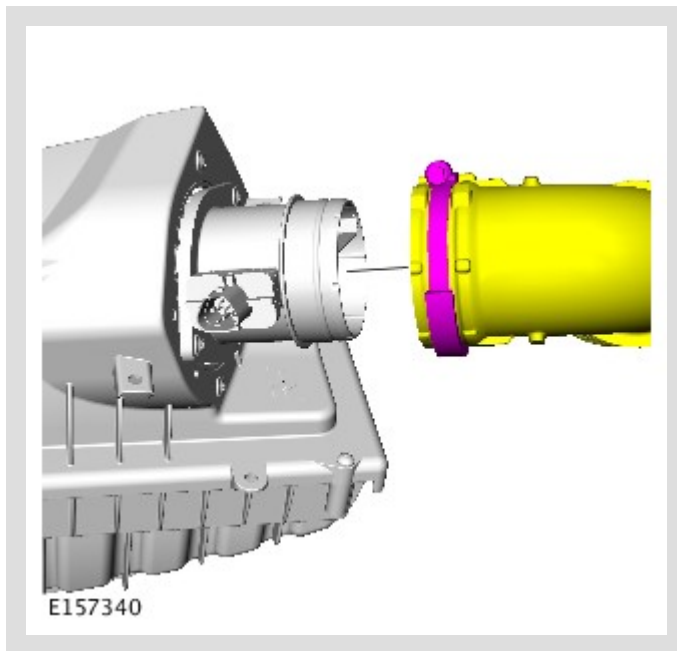

3.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

4.

Remove the exhaust system.


Refer to: Exhaust System (309-00C, Removal and Installation).

5.

Remove the starter motor.


Refer to: Starter Motor (303-06C, Removal and Installation).

6.

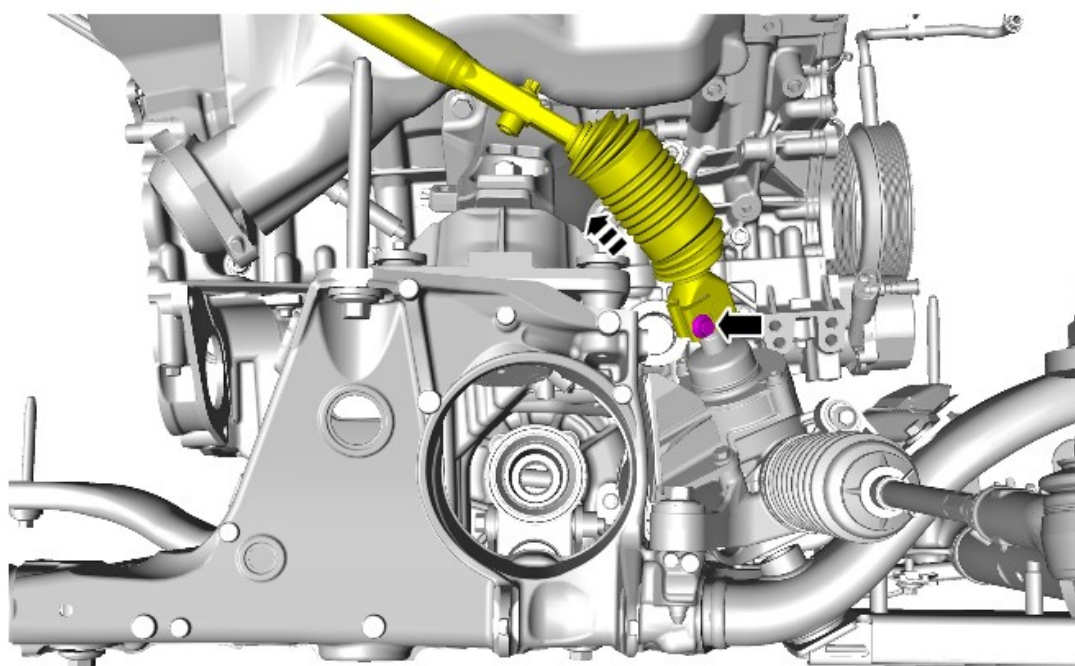


E151313

7.

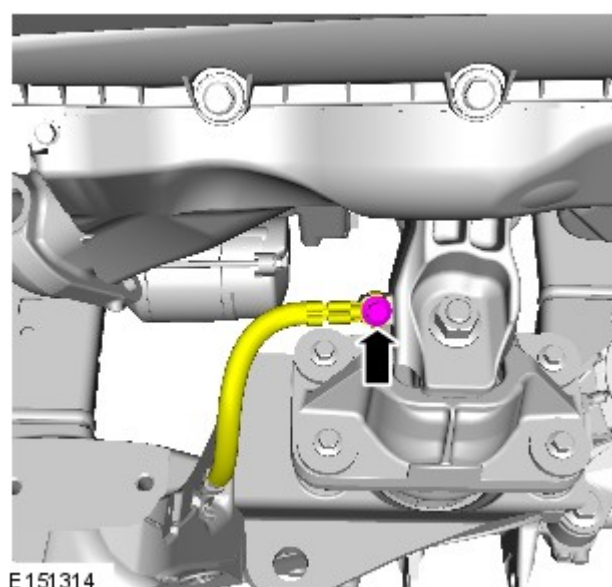

E151314

8.

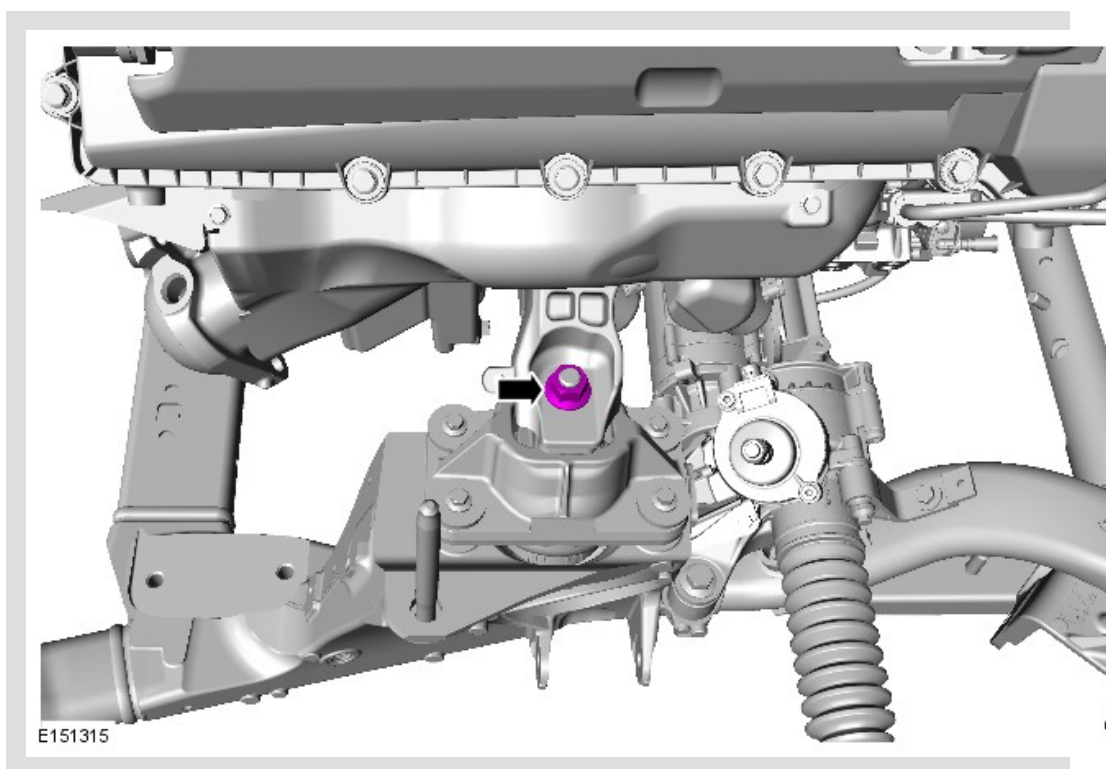


9.




CAUTION:


Use a wooden block to protect the oil pan when supporting the engine.

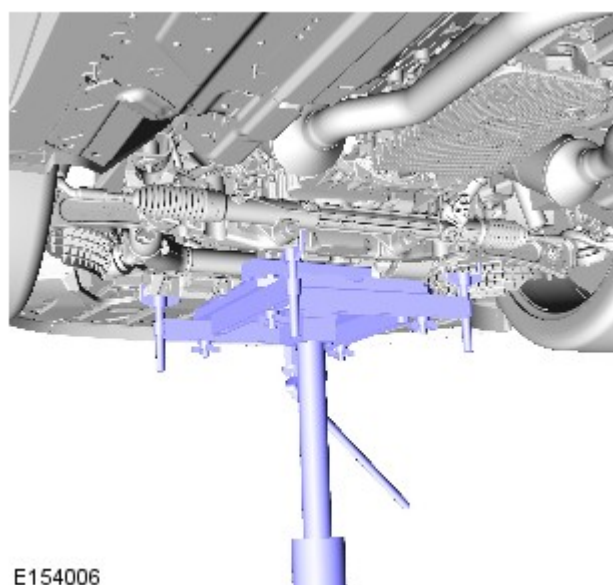


10.

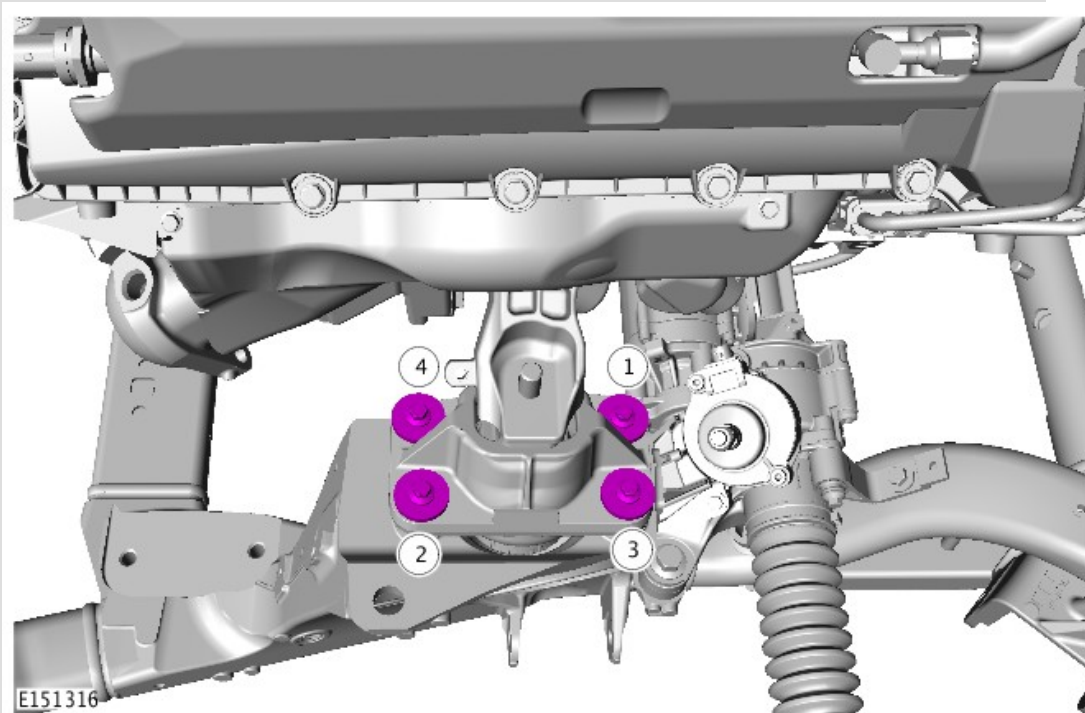

11.

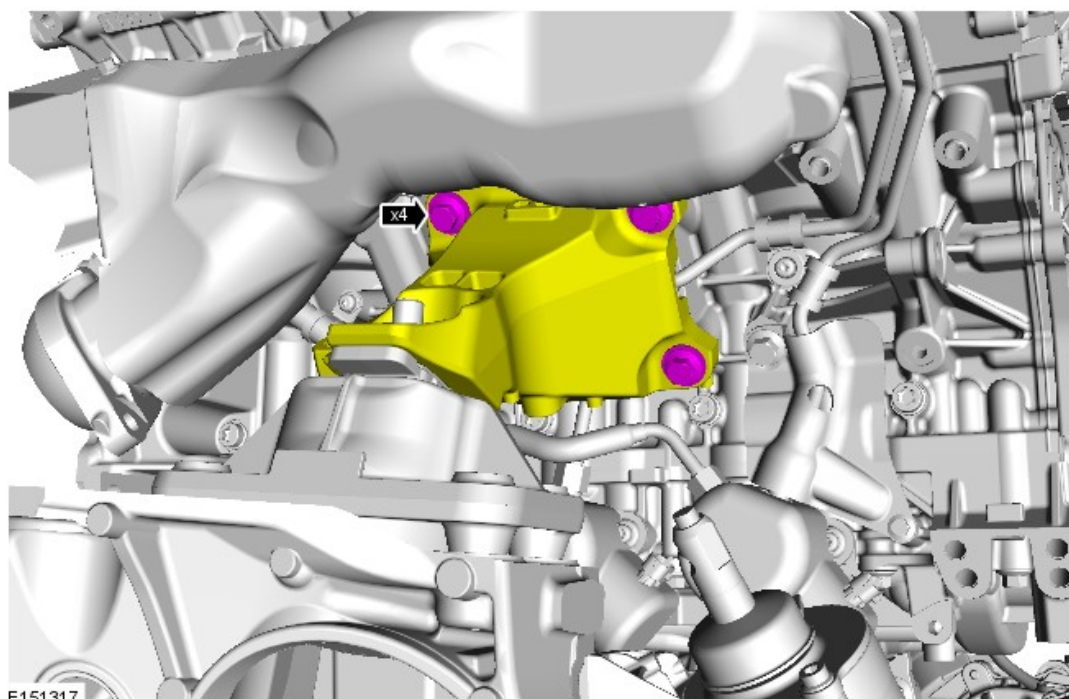


12.

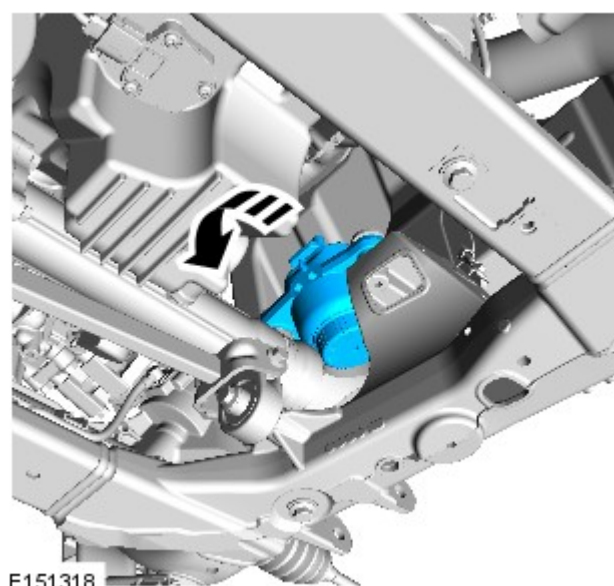


INSTALLATION

1.

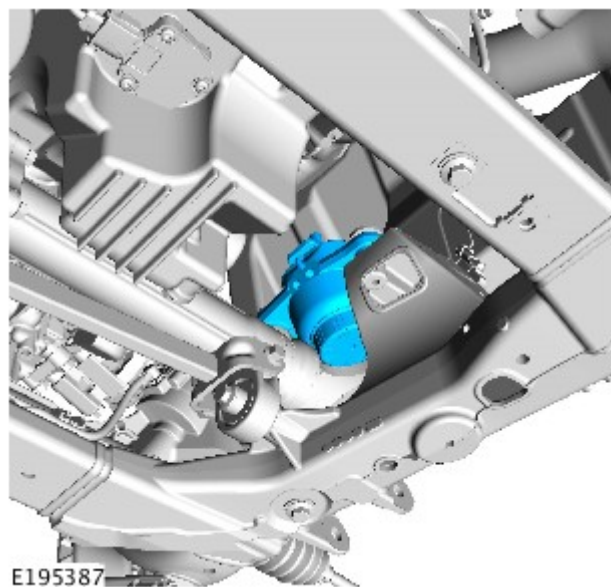


2.

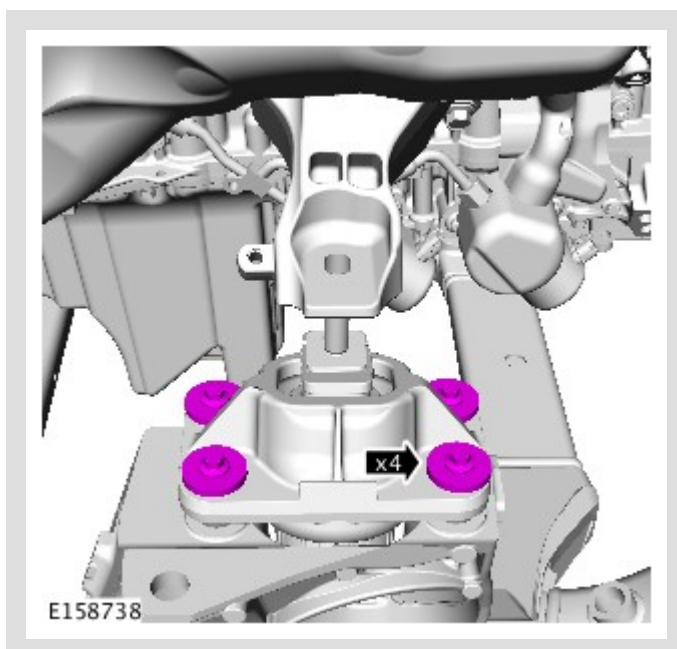

Only tighten the bolts finger-tight at this stage.

3.

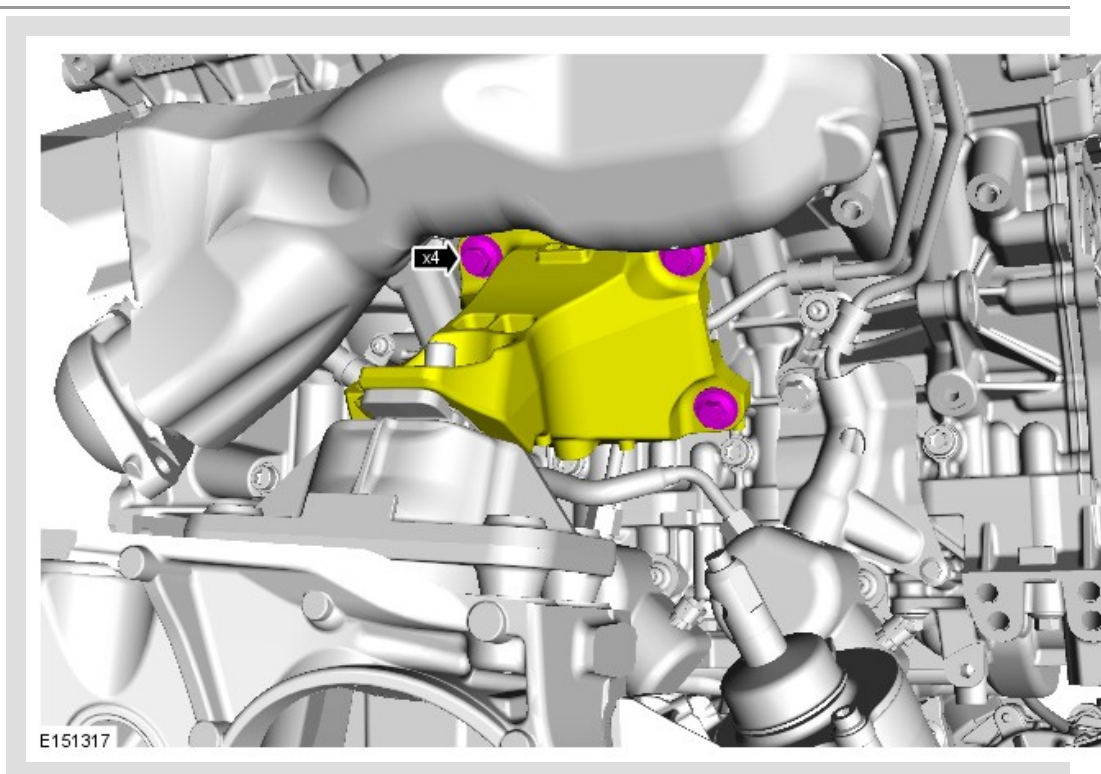


Torque:


Stage 1: **45 Nm**

Stage 2: **60°**

4.

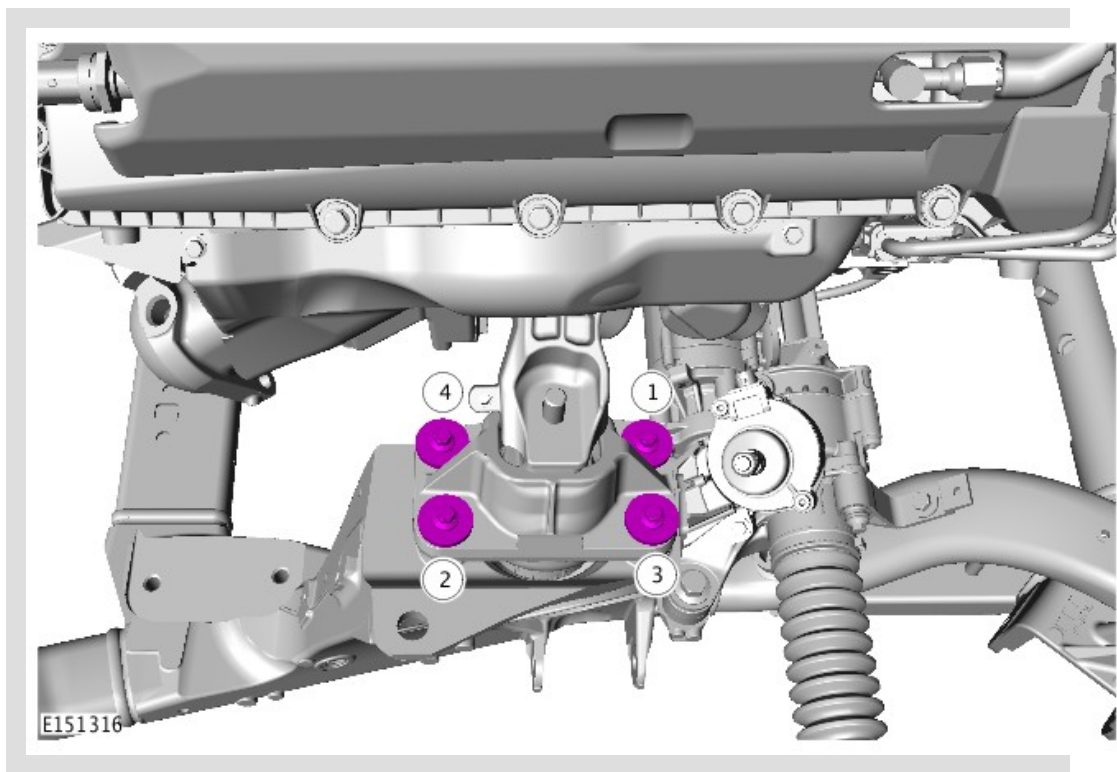


Torque: 32 Nm

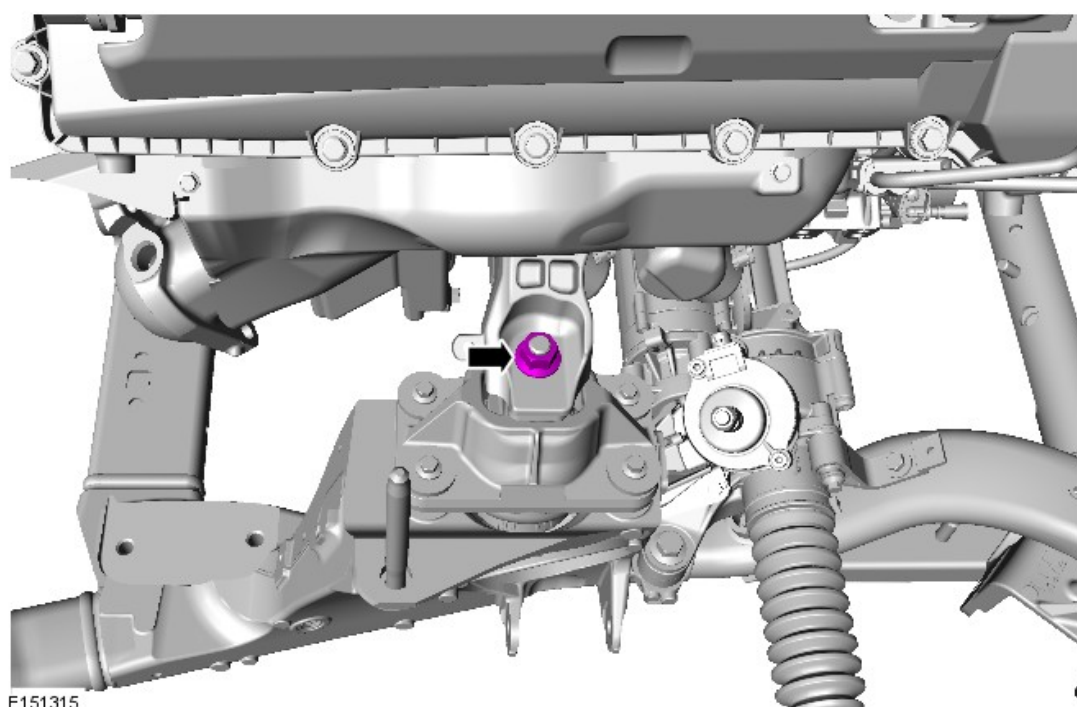

E151315

Torque: 110 Nm


6.

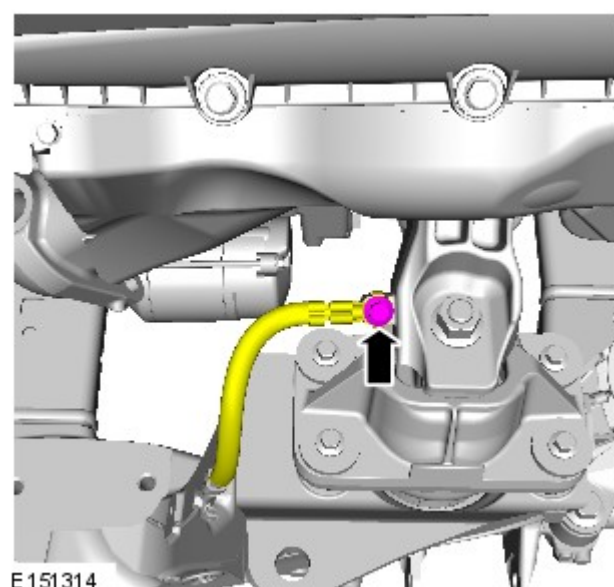

E151314

Torque: 9 Nm

7.

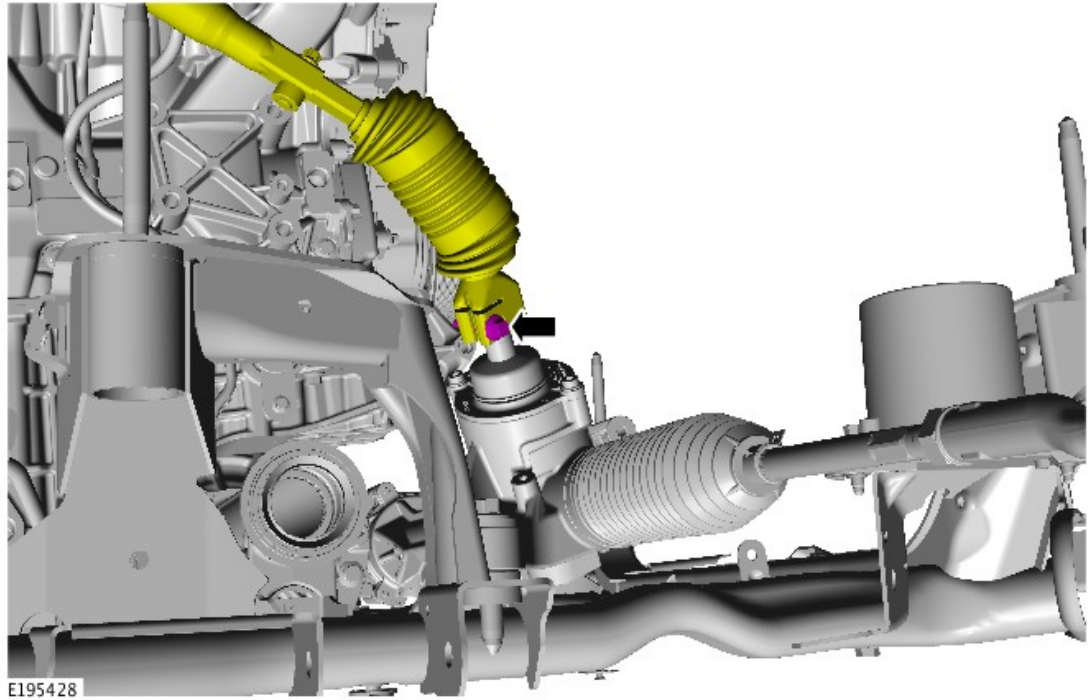

- Renew Part: *Steering column lower shaft lower bolt* Quantity: *1* .
- Torque: 30 Nm

8.

Install the starter motor.


Refer to: Starter Motor (303-06C, Removal and Installation).

9.

Install the exhaust system.

Refer to: Exhaust System (309-00C, Removal and Installation).

10.

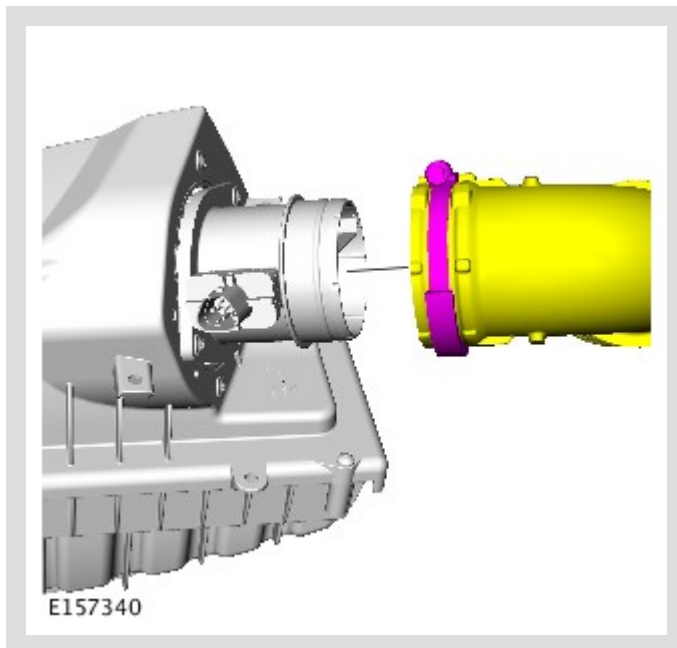

-
11. Connect the battery ground cable.
Refer to: Battery and Cables (414-01, Description and Operation).