

PUBLISHED: 30-AUG-2017
2014.0 RANGE ROVER (LG), 303-01

ENGINE - V8 S/C 5.0L PETROL

TIMING COVER (G1509355)

REMOVAL AND INSTALLATION

12.65.01	COVER - TIMING GEARS - RENEW	5000 CC, AJ V8, SUPERCHARGED	11	USED WITHINS
----------	---------------------------------------	------------------------------------	----	-----------------

SPECIAL TOOL(S)



303-1433

Lower Timing Cover
Alignment tool

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.

**WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: Crankshaft Pulley (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).


4. Refer to: Left Valve Cover (303-01 Engine - V6 S/C 3.0L Petrol, Removal and Installation).

5. Refer to: Right Valve Cover (303-01 Engine - V6 S/C 3.0L Petrol, Removal and Installation).


6. Refer to: Cooling System Partial Draining and Vacuum Filling (303-03 Engine Cooling - TDV8 4.4L Diesel, General Procedures).

7. Refer to: Brake Vacuum Pump - V6 S/C 3.0L Petrol /V8 S/C 5.0L Petrol (206-07 Power Brake Actuation, Removal and Installation).

8.

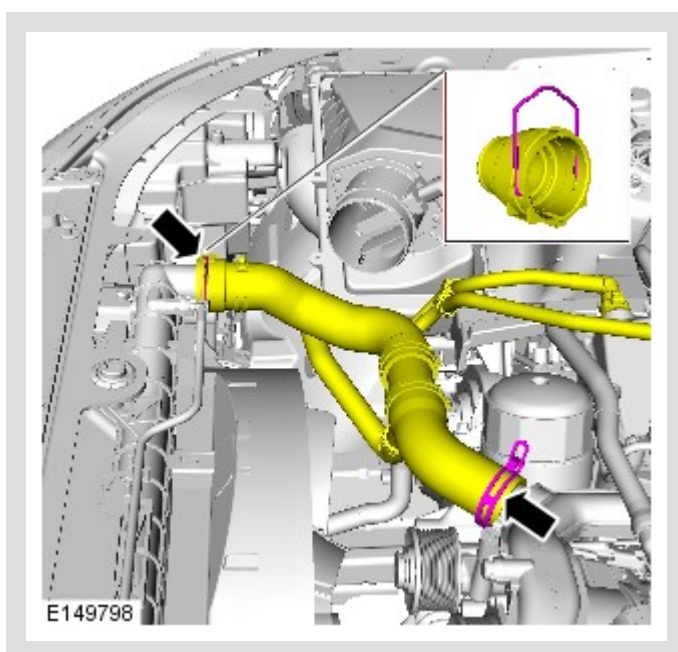

9.

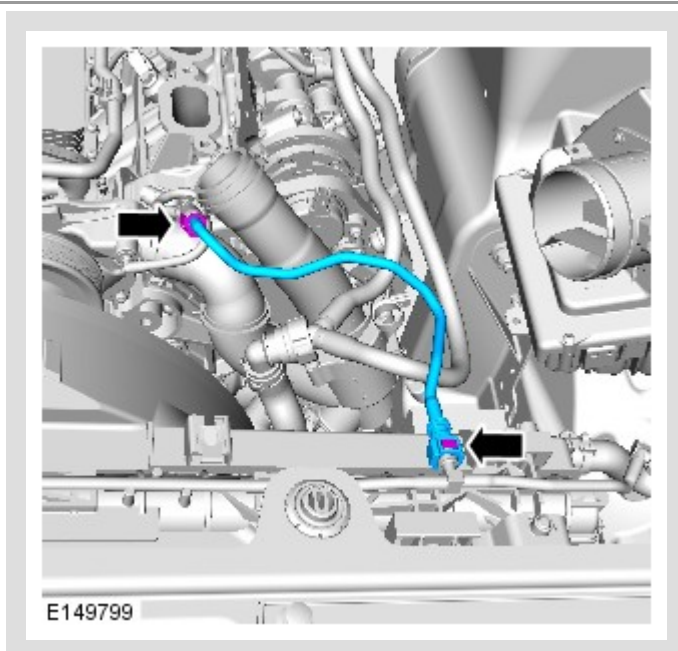


10.




CAUTION:


Be prepared to collect escaping coolant.

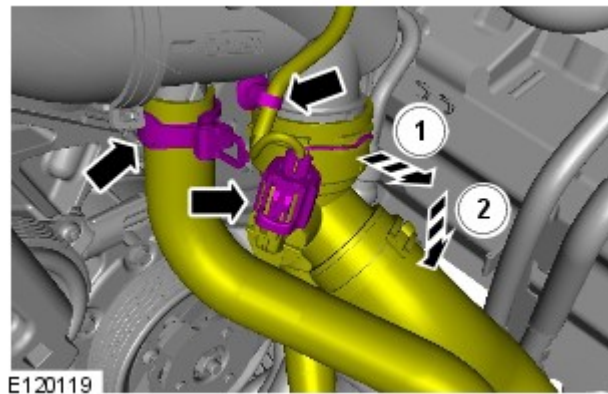


11.

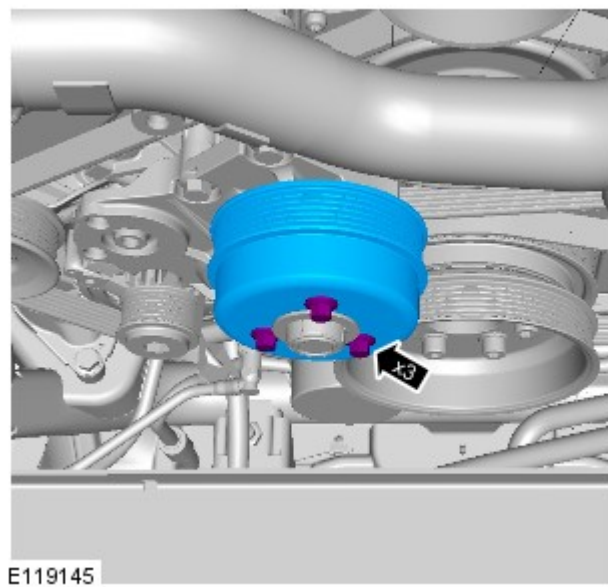


12.

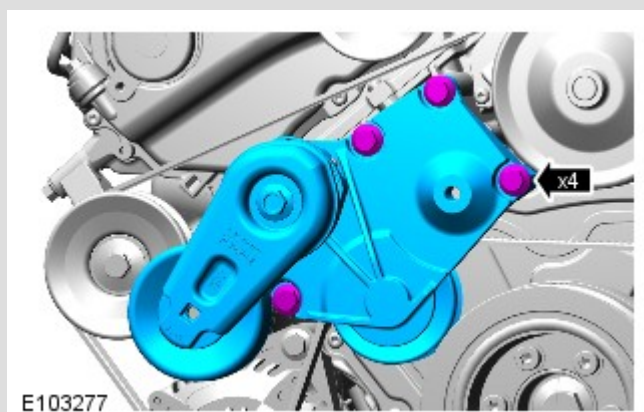


13.

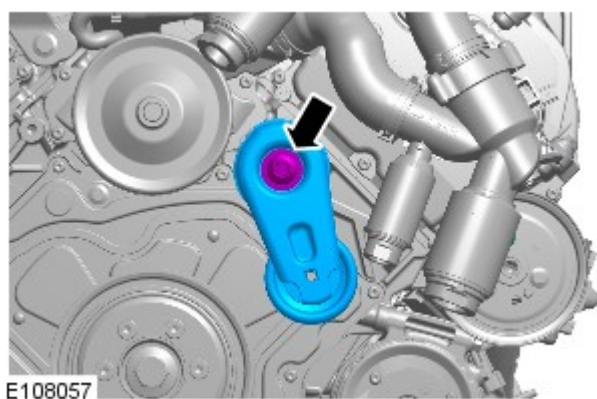

14.

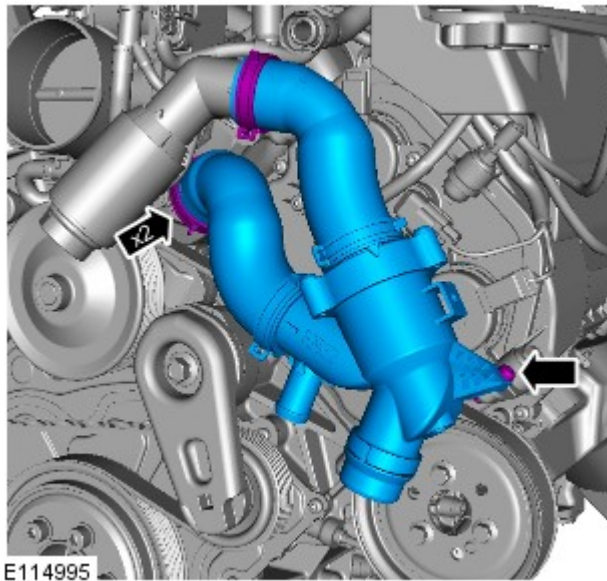


15.

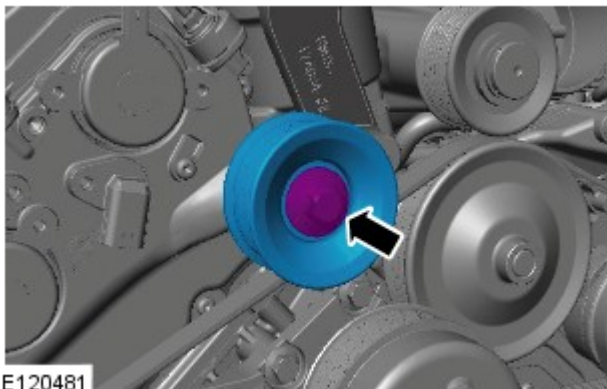

16.




17.

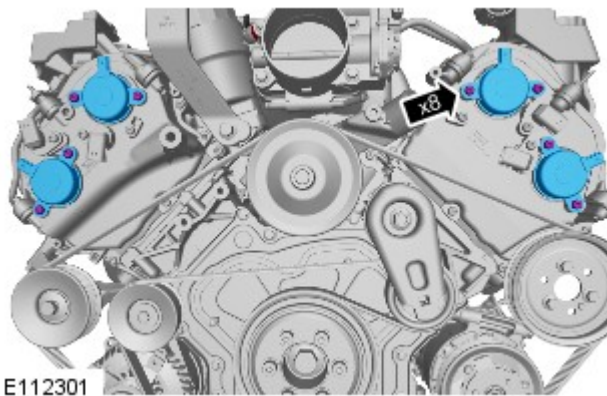

18.



19.

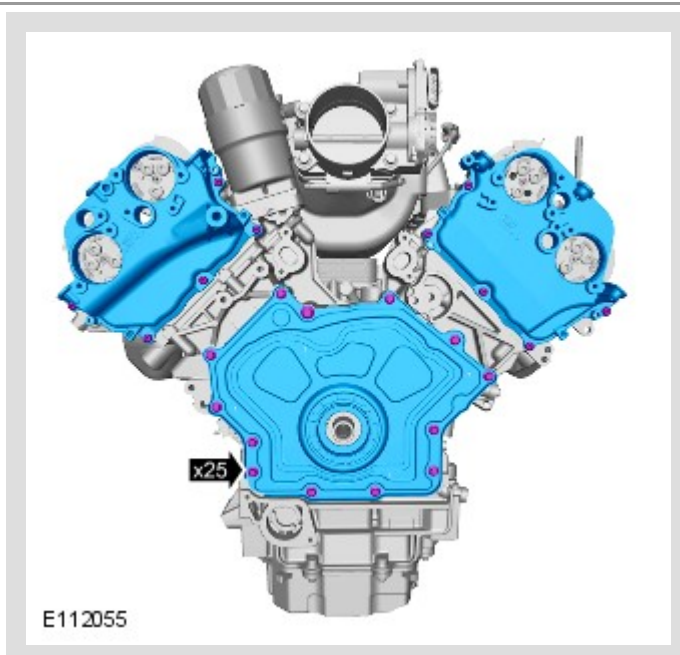


INSTALLATION

1.



CAUTION:

Make sure that the mating faces are clean and free of foreign material.

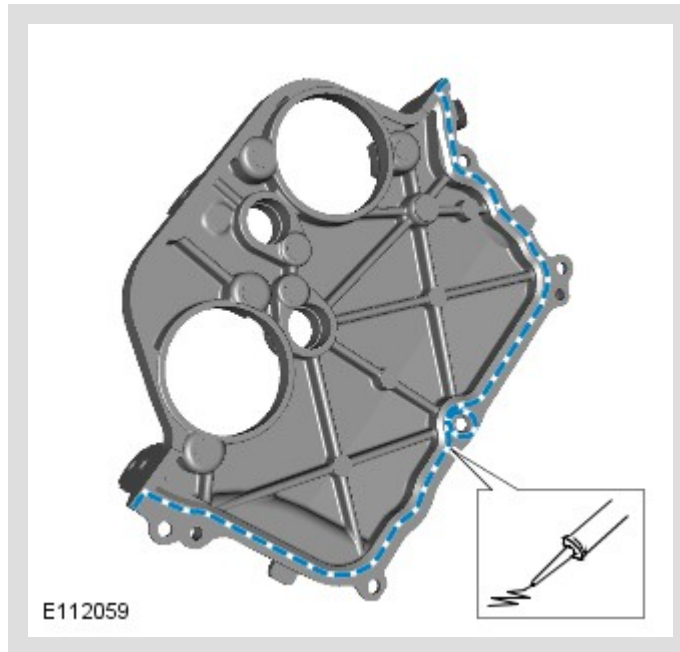


- Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G or Loctite 5900) to the areas shown, and tighten the bolts within 7 minutes.

2.

⚠ CAUTION:

Make sure that the mating faces are clean and free of foreign material.

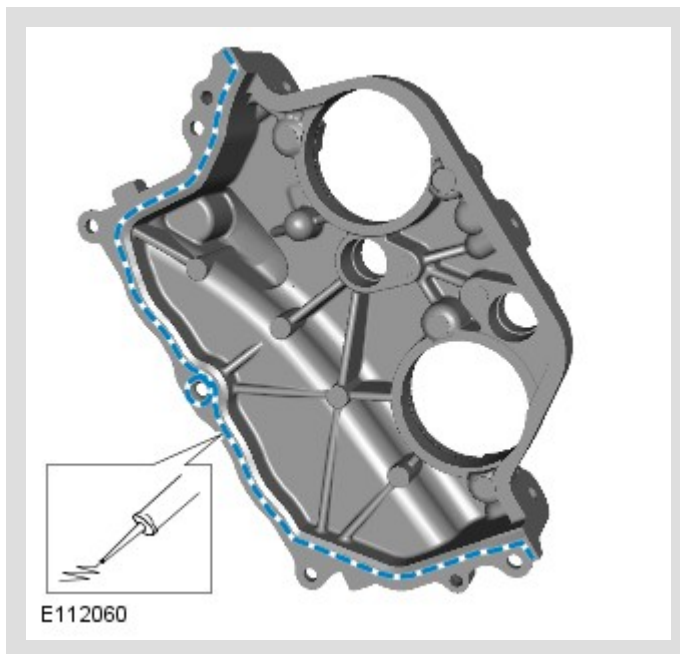


- Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G or Loctite 5900) to the areas shown, and tighten the bolts within 7 minutes.

3.

NOTE:

Tighten the bolts in the indicated sequence.

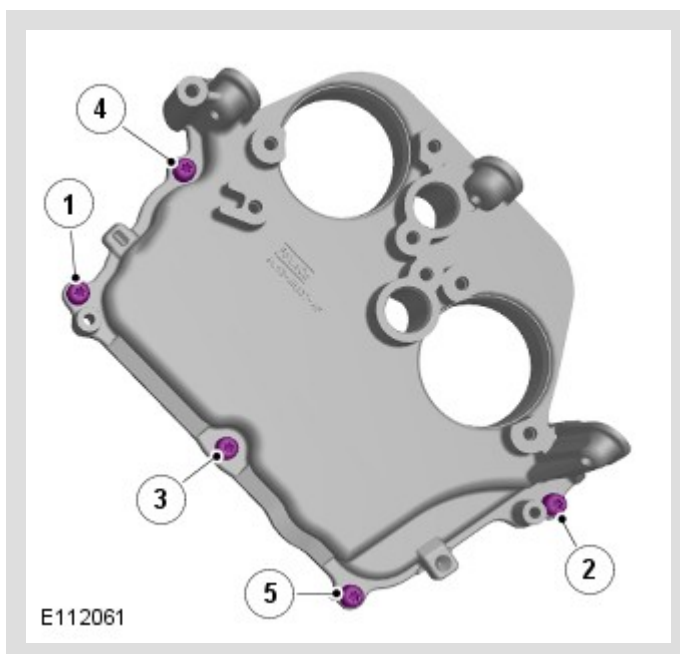


Torque: 12 Nm

4.

NOTE:

Tighten the bolts in the indicated sequence.

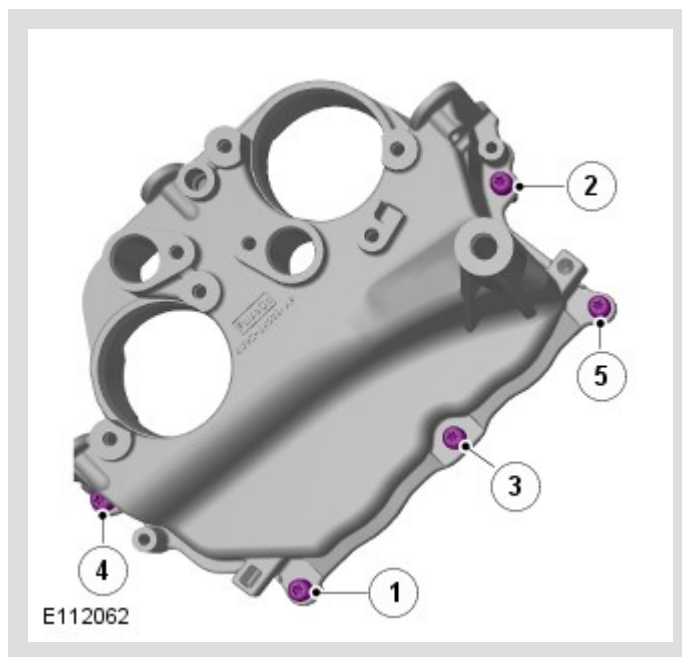


Torque: 12 Nm

5.

⚠ CAUTION:

Make sure that the mating faces are clean and free of foreign material.

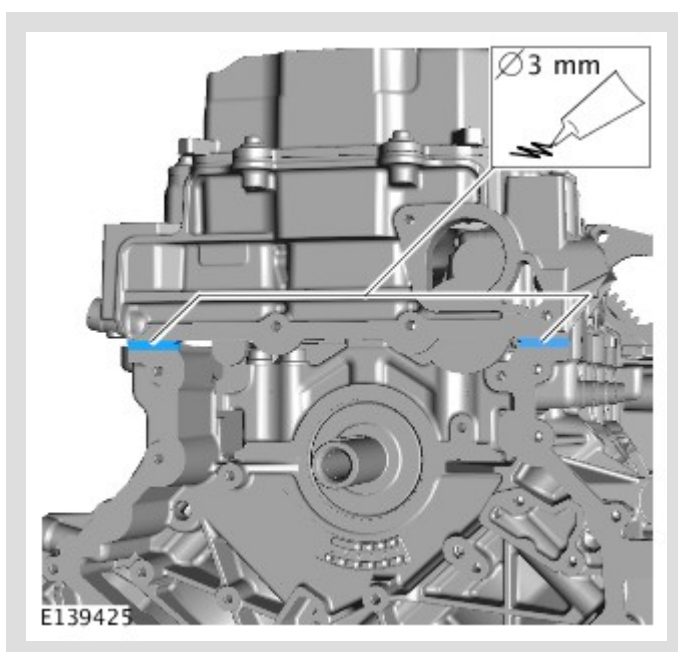


Apply RTV sealant WSE-M4G323-A6 (Loctite 5901G or Loctite 5900) to the areas shown, and tighten the bolts within 7 minutes.

6.




CAUTION:

Make sure that the mating faces are clean and free of foreign material.

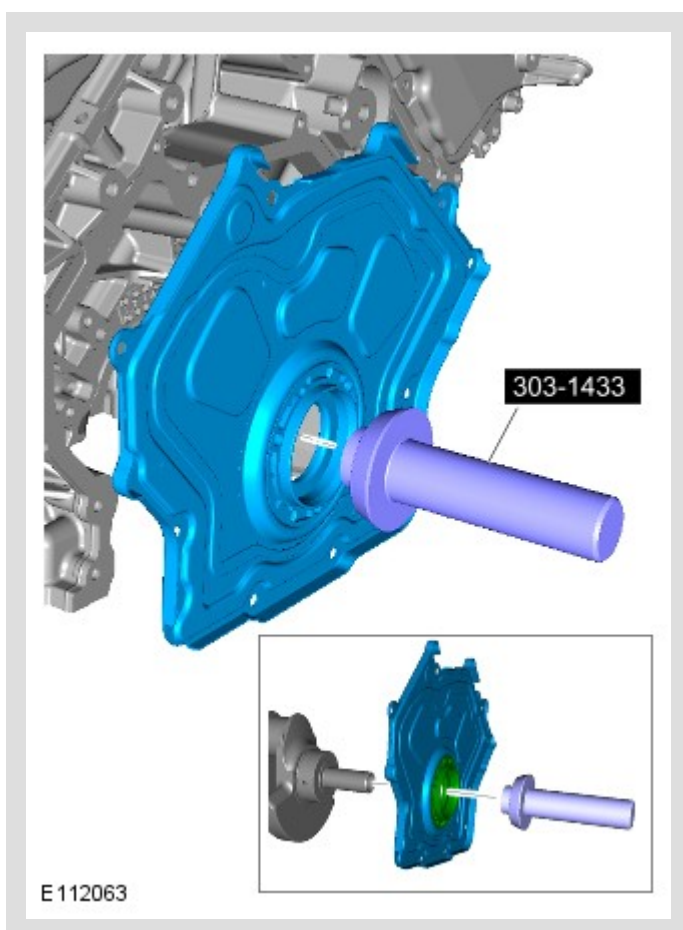

Install the bolts, but do not tighten fully at this stage.

Special Tool(s): 303-1433

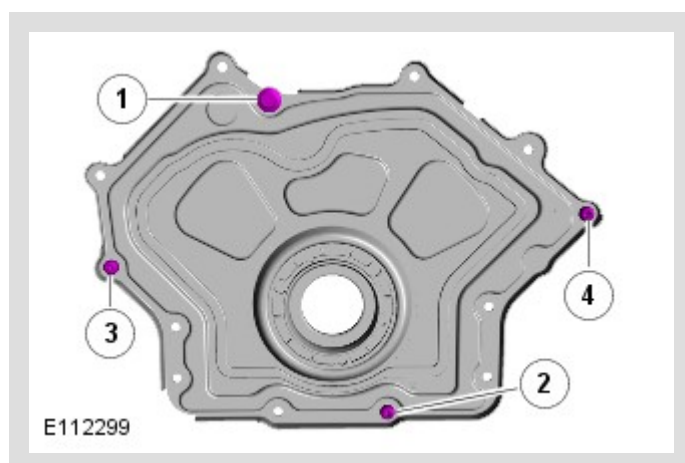


Torque:

M6 12 Nm

M8 20 Nm

8.

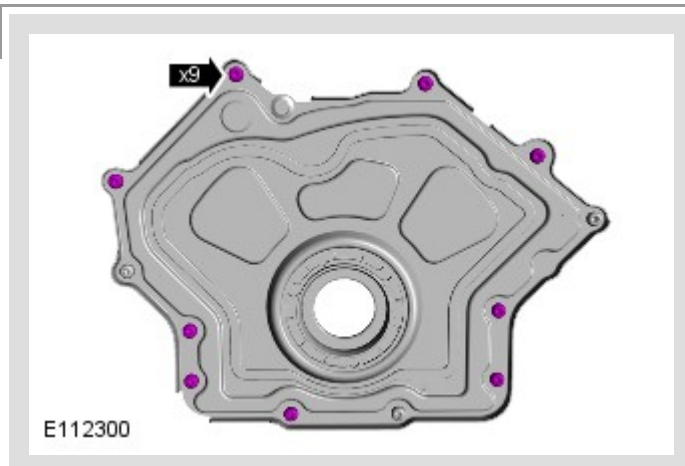

Torque: 12 Nm

9.




Torque: 12 Nm

10.




Torque: 25 Nm

11.

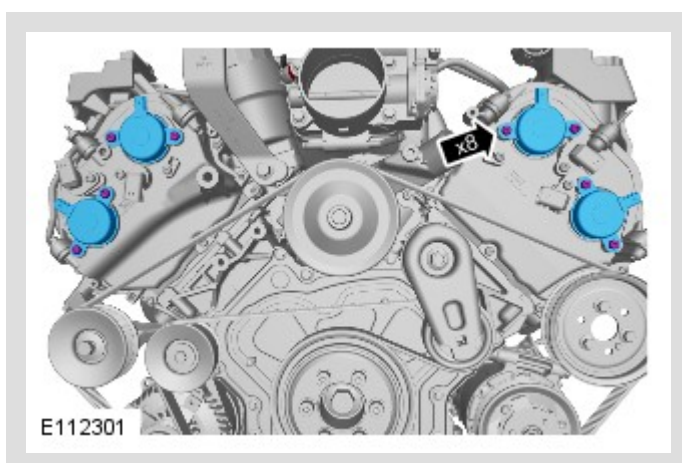

Torque: 12 Nm

12.

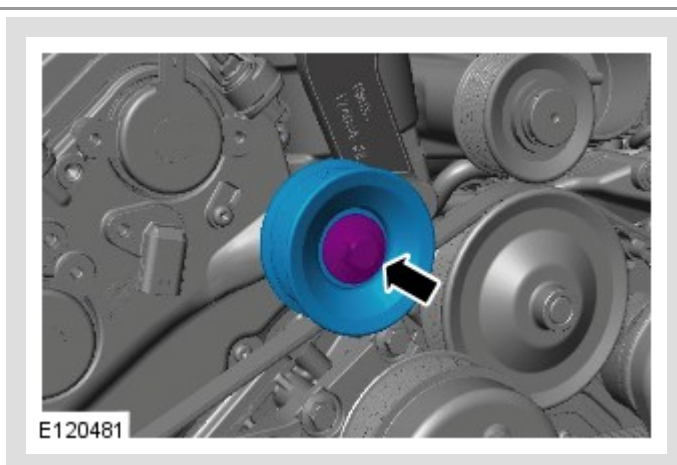


Torque: 40 Nm

13.


 **NOTE:**

Install the bolt finger tight before final tightening.

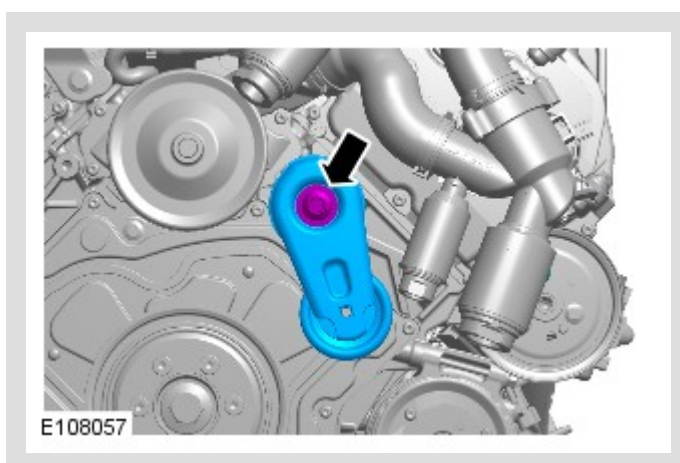


Torque: 40 Nm

14.

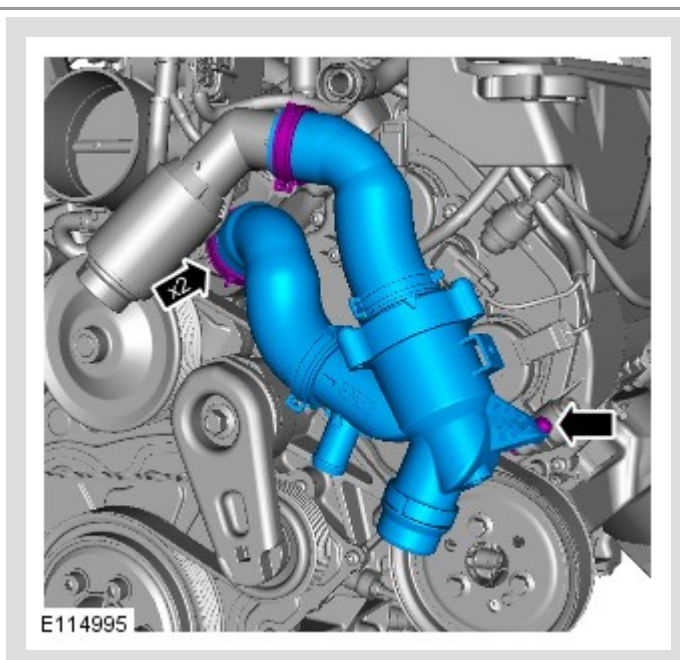


15.

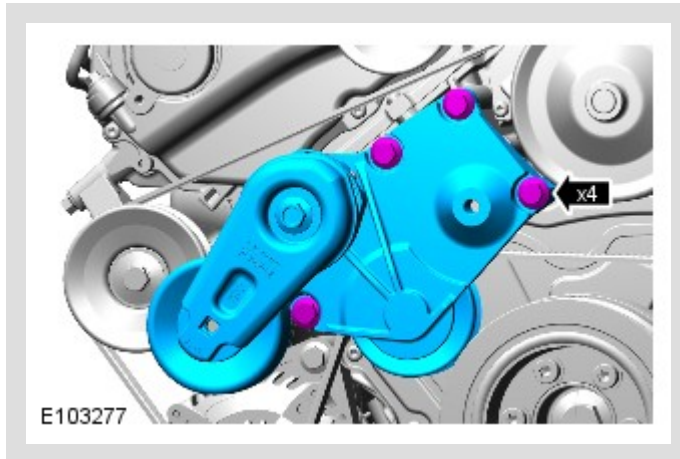


Torque: 25 Nm

16.

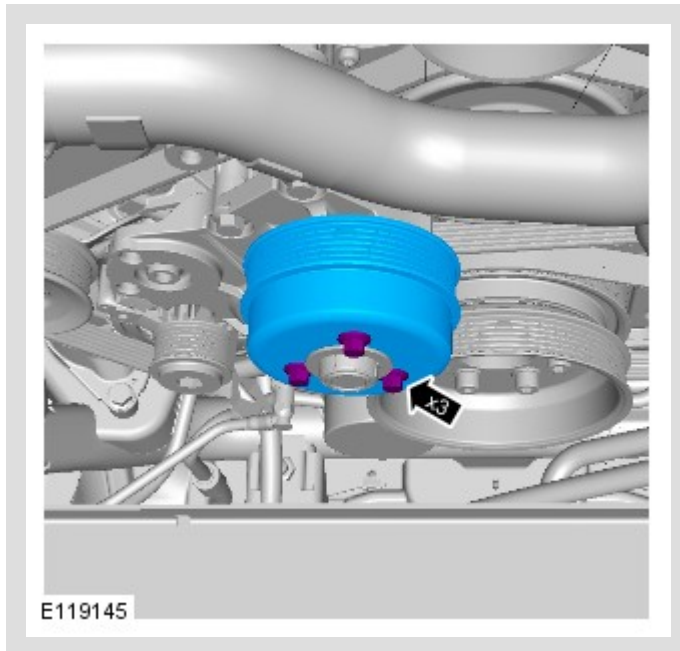


Torque: 25 Nm


17.

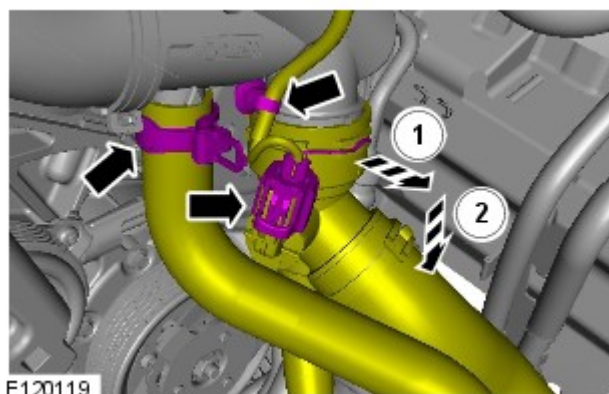

18.

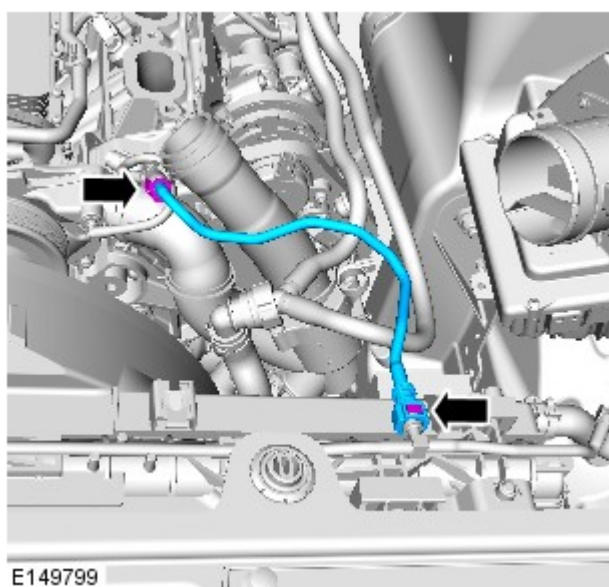

19.

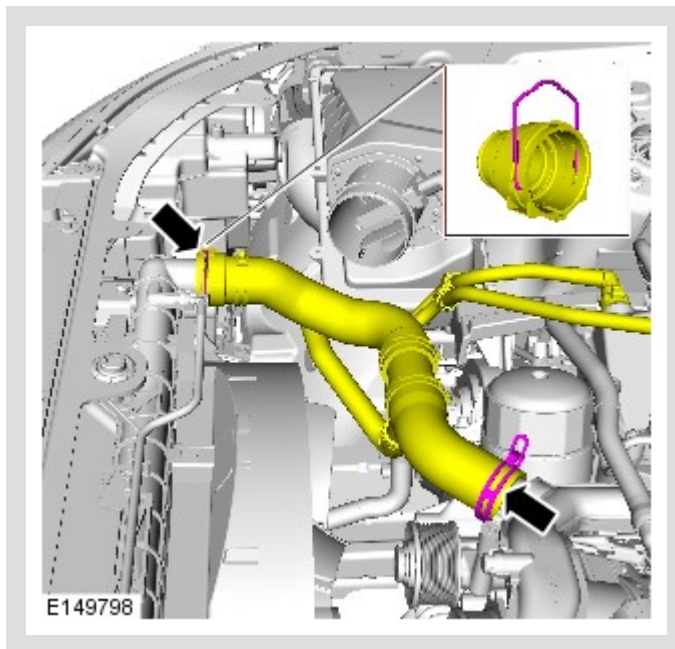

-
20. Refer to: Brake Vacuum Pump - V6 S/C 3.0L Petrol /V8 S/C 5.0L Petrol (206-07 Power Brake Actuation, Removal and Installation).
-
21. Refer to: Crankshaft Pulley (303-01 Engine - V8 S/C 5.0L Petrol, Removal and Installation).
-
22. Refer to: Left Valve Cover (303-01 Engine - V6 S/C 3.0L Petrol, Removal and Installation).
-
23. Refer to: Right Valve Cover (303-01 Engine - V6 S/C 3.0L Petrol, Removal and Installation).
-
24. Refer to: Cooling System Partial Draining and Vacuum Filling (303-03 Engine Cooling - TDV8 4.4L Diesel, General Procedures).
-
25. Connect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

