

2016.0 RANGE ROVER (LG), 303-03

ENGINE COOLING - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

RADIATOR [G1509371]

REMOVAL AND INSTALLATION

26.40.01	RADIATOR ASSEMBLY - RENEW	3000 CC, TDV6, DIESEL	2.6	USED WITHINS	+
----------	---------------------------	-----------------------	-----	--------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 4	Renew Part	Air conditioning pipes to condenser O-ring seals
Removal Step 6	Renew Part	Air conditioning pipes to condenser O-ring seals

REMOVAL

NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Refer to: [Air Conditioning System Recovery, Evacuation and](#)

[Charging](#) (412-00 Climate Control System - General Information, General Procedures).

2. Refer to: [Cooling Fan](#) (303-03G Engine Cooling - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).


3.

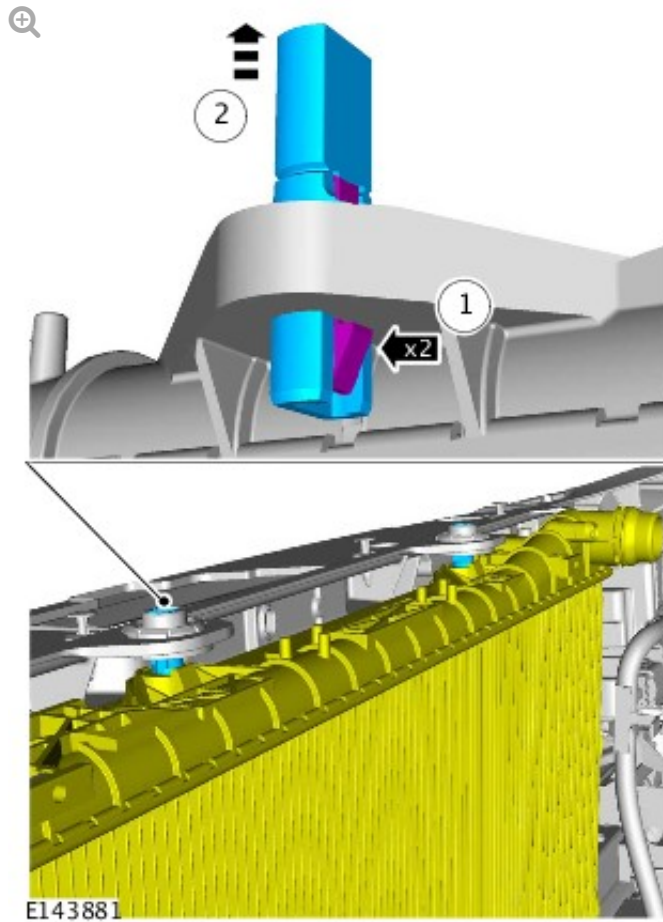

4.

CAUTIONS:


- Make sure that all openings are sealed.
- Remove and discard the O-ring seals.

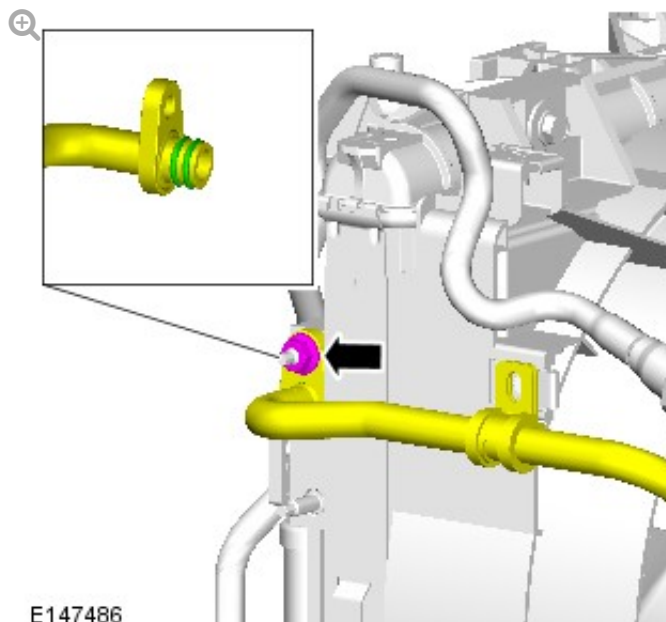

Renew Part: *Air conditioning pipes to condenser O-ring seals.*

Torque: 8 Nm



5.

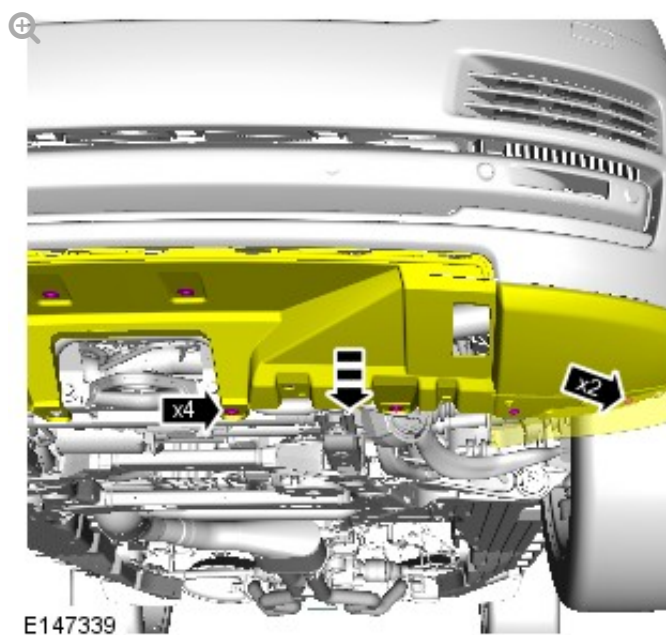

6.

CAUTION:

Remove and discard the O-ring seals.

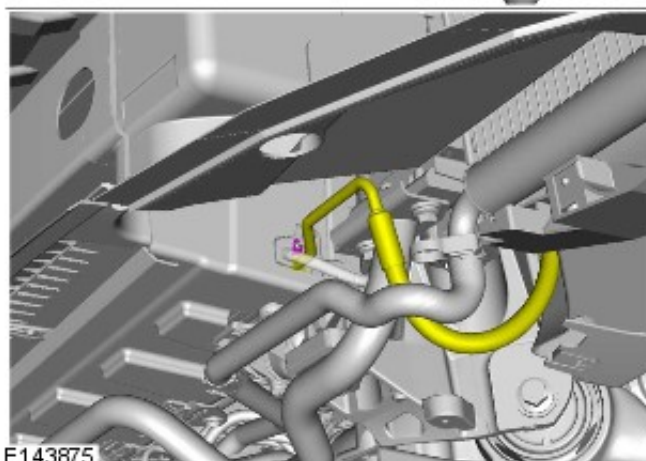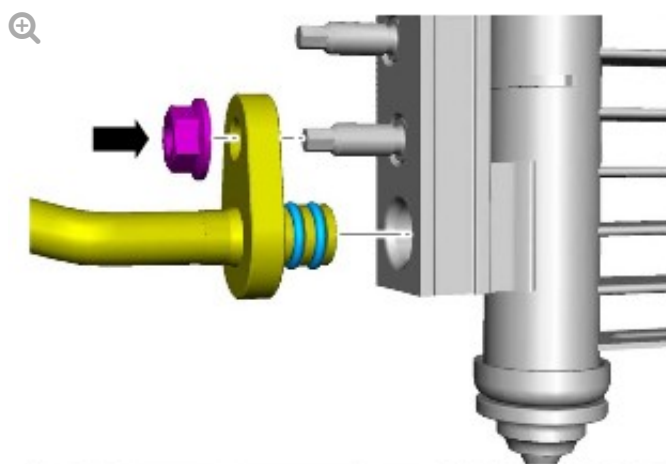


E143875

Renew Part: *Air conditioning pipes to condenser O-ring seals.*


Torque: 8 Nm

7.

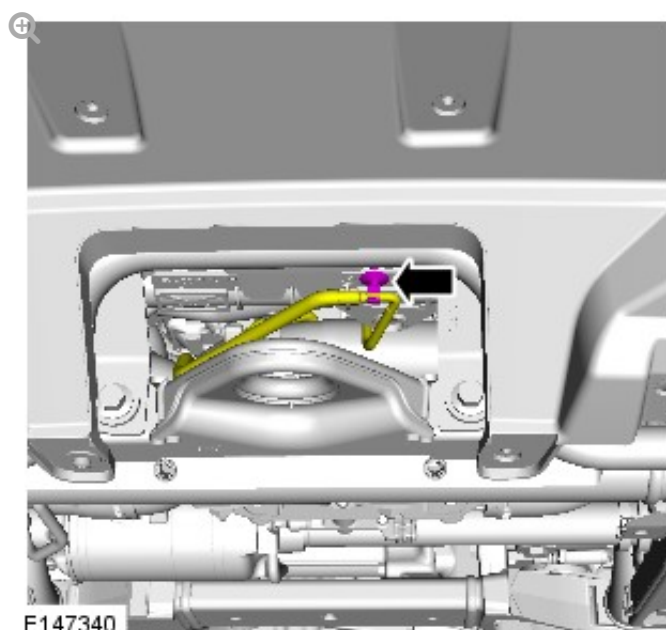

E147340

8.

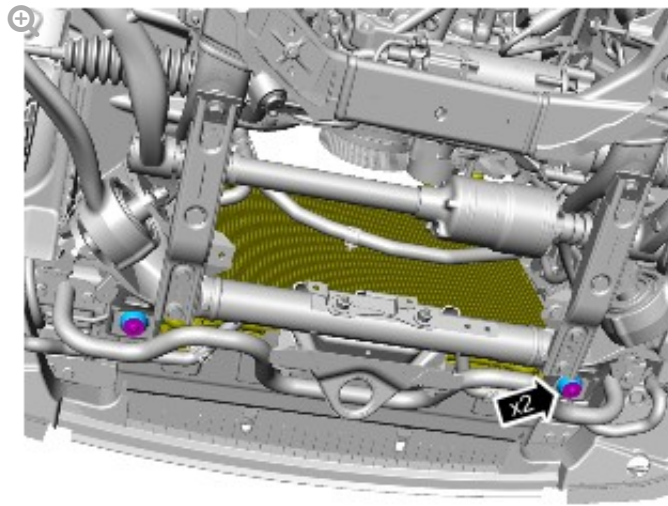


E143877

Torque: 15 Nm

9.

NOTE:


If equipped.

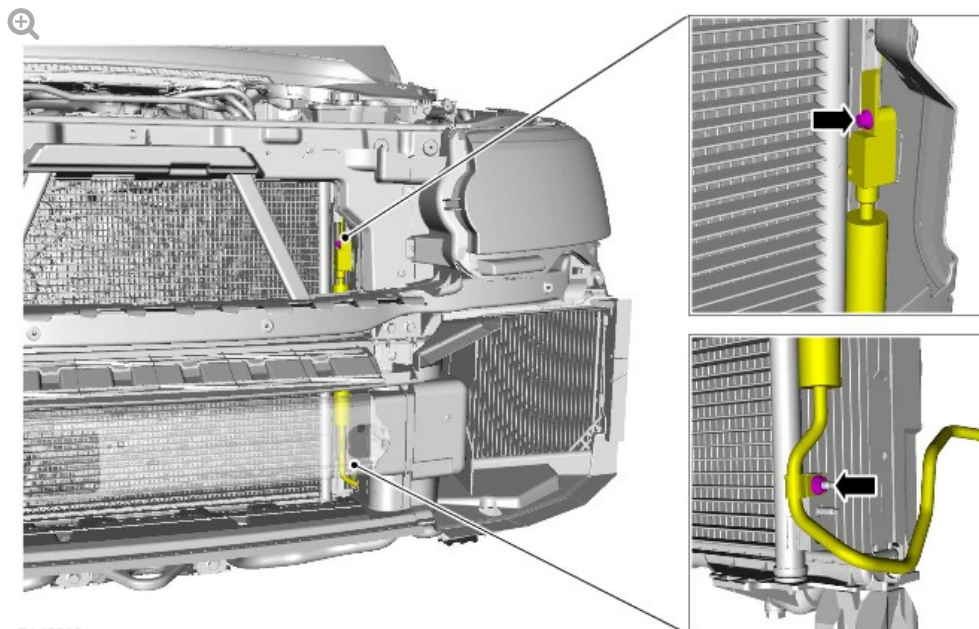

E143863

Torque: 7 Nm



10.

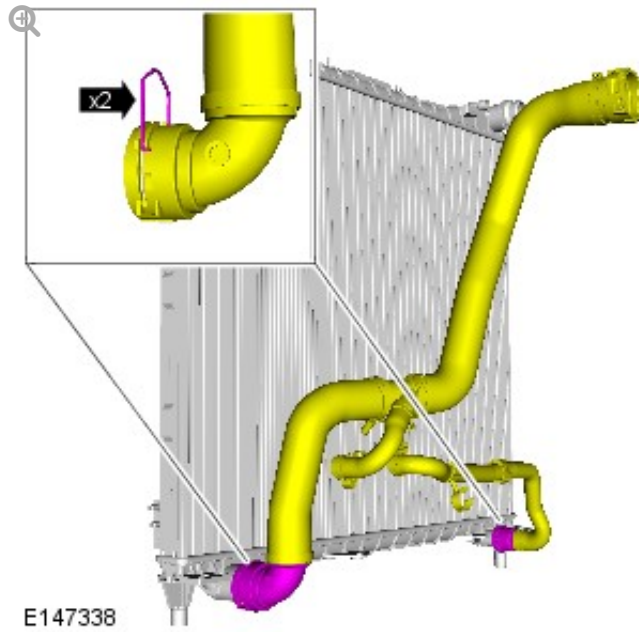

11.

CAUTION:


Always protect the cooling pack elements to prevent accidental damage.

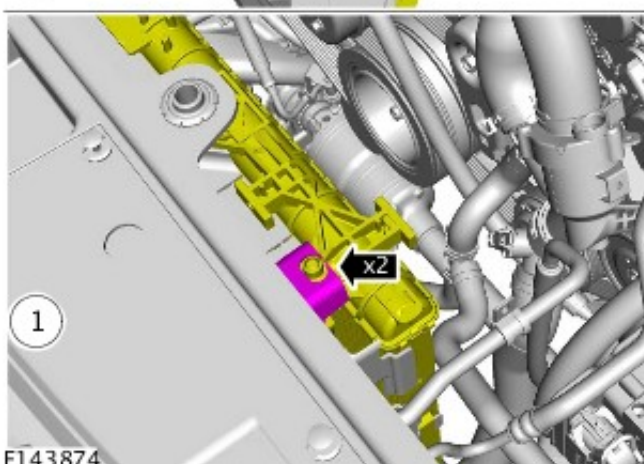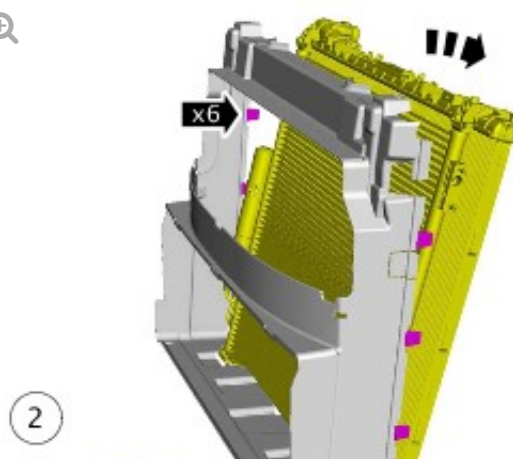

12.


CAUTION:

Always protect the cooling pack elements to prevent accidental damage.

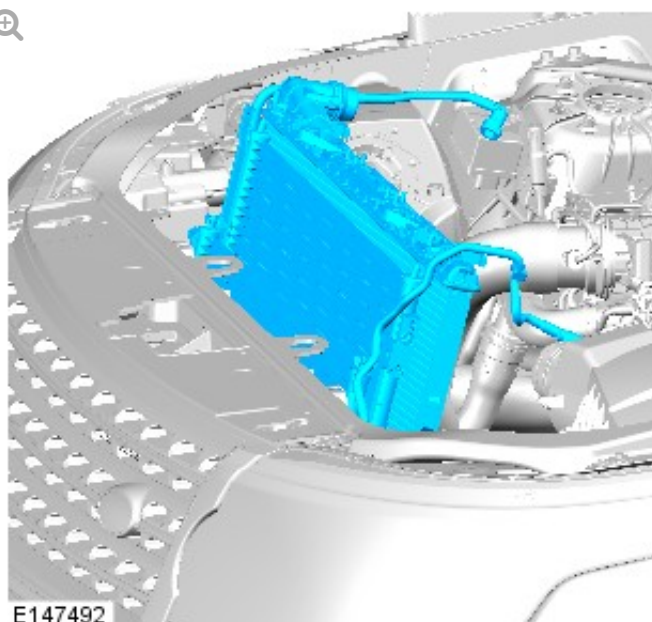


E147492

13.

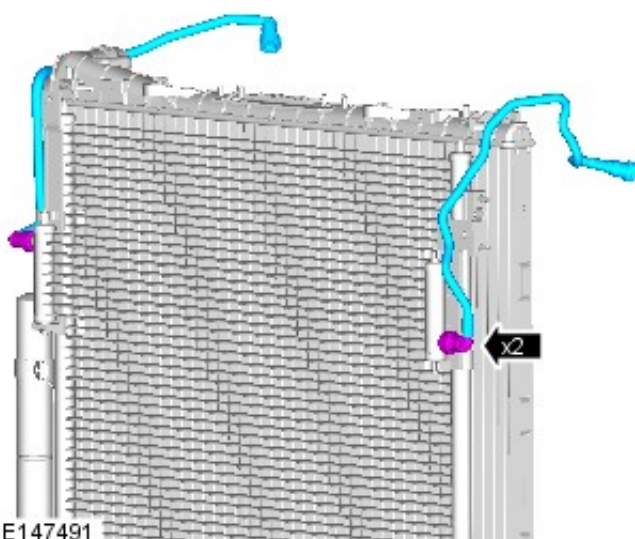


E147491


14.

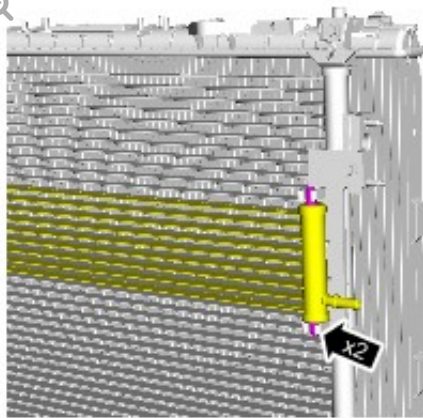

E147343

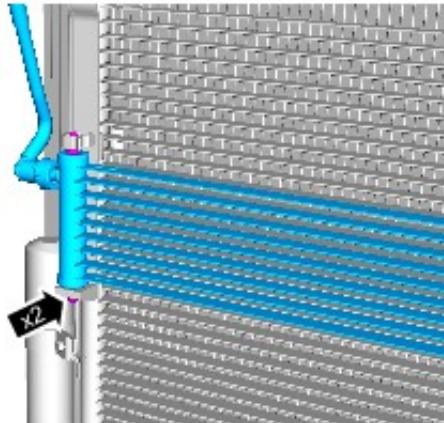


15.

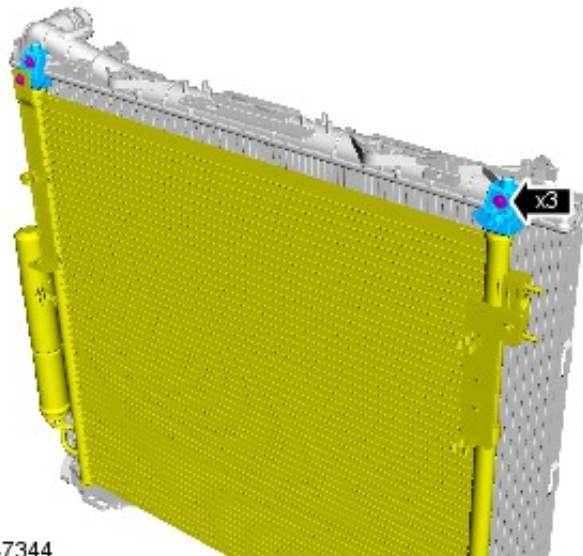

E147344

Torque: 4.5 Nm

16.

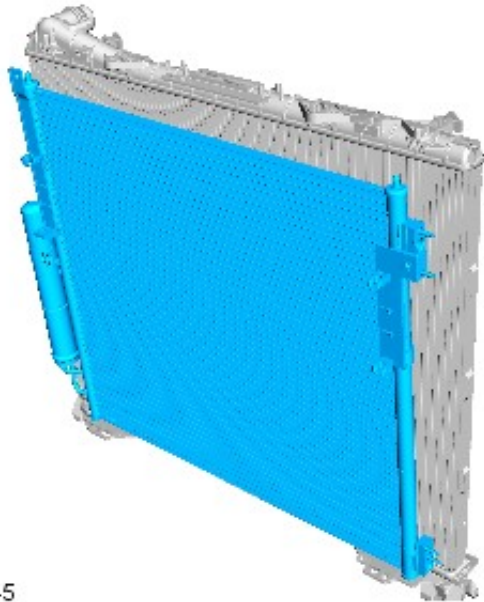

E147345

INSTALLATION

1. To install, reverse the removal procedure.