

PUBLISHED: 08-DEC-2014
2015.0 RANGE ROVER (LG), 303-03

ENGINE COOLING - TDV8 4.4L DIESEL

COOLING FAN (G1509380)

REMOVAL AND INSTALLATION

26.25.39	FAN AND MOTOR - ASSEMBLY - ENGINE COMPARTMENT - RENEW	4400 CC, TDV8	1.9	USED WITHINS	
----------	--	------------------	-----	-----------------	--

REMOVAL



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

All vehicles

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (501-03 Body Closures, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

4.

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel - Gen 1.5, General Procedures).


-
5. Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

-
6. Refer to: [Right Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

-
7. Refer to: Coolant Expansion Tank (303-03 Engine Cooling - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).


Cold climate vehicles

1.

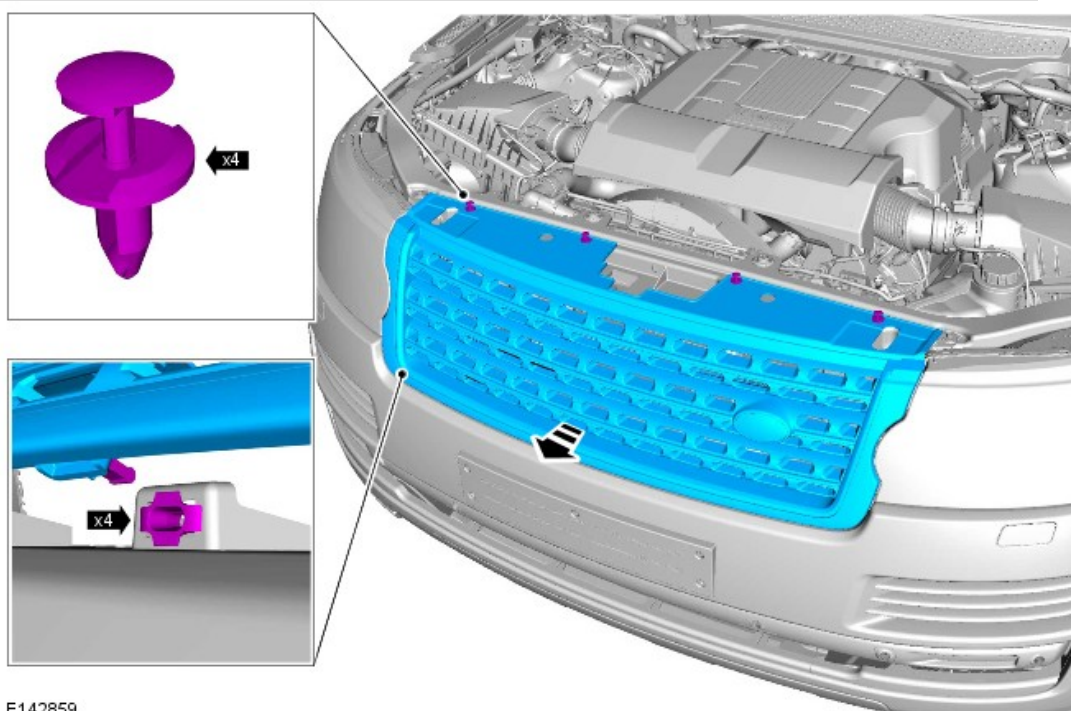

Cold climate vehicles


1.

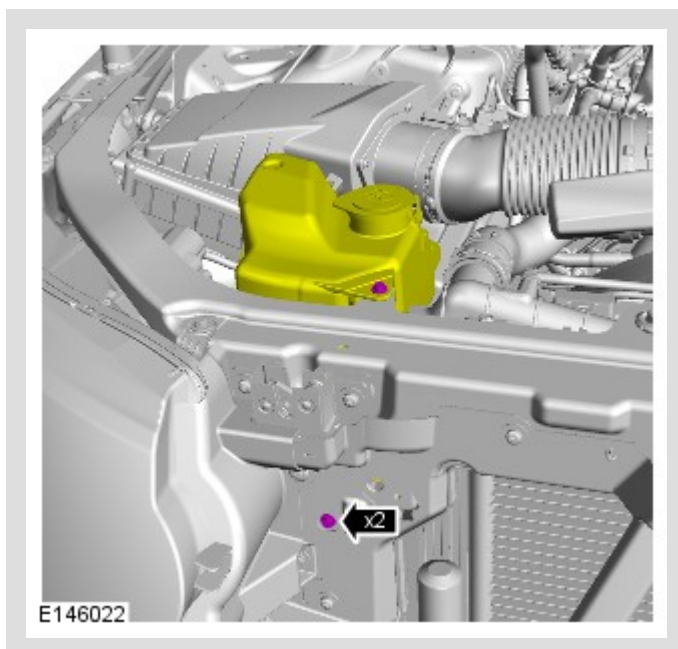

Torque: 7 Nm


All vehicles

1.

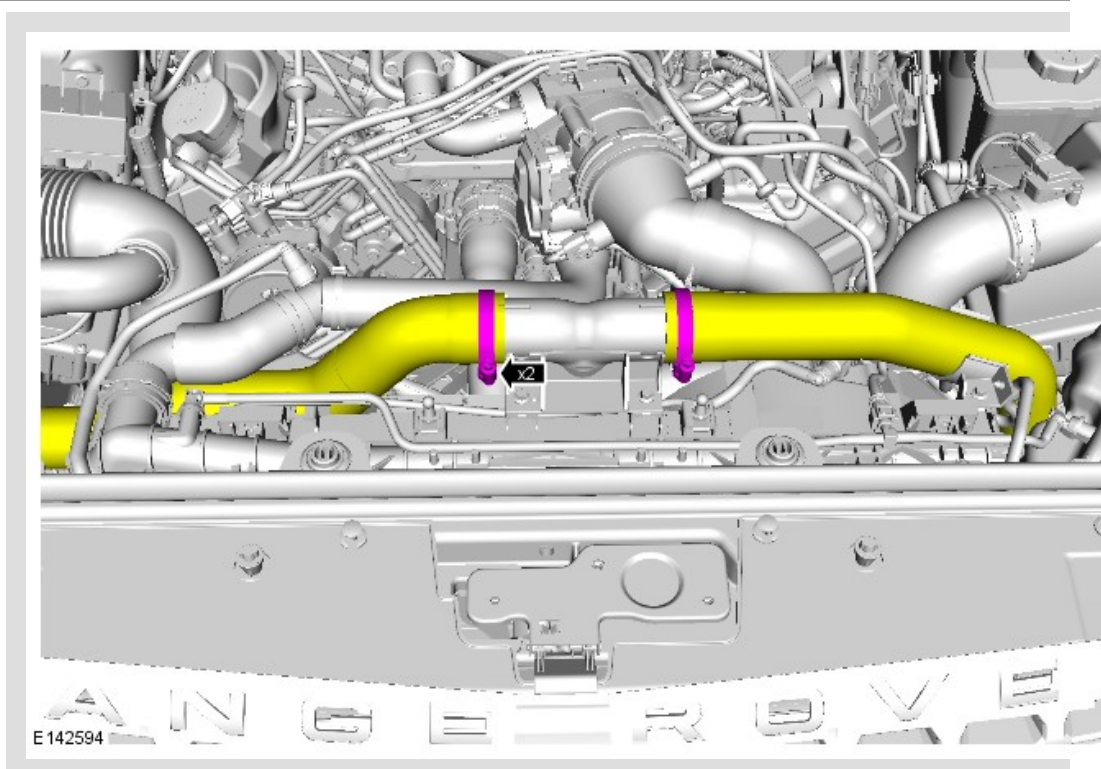

Torque: 5 Nm

2.

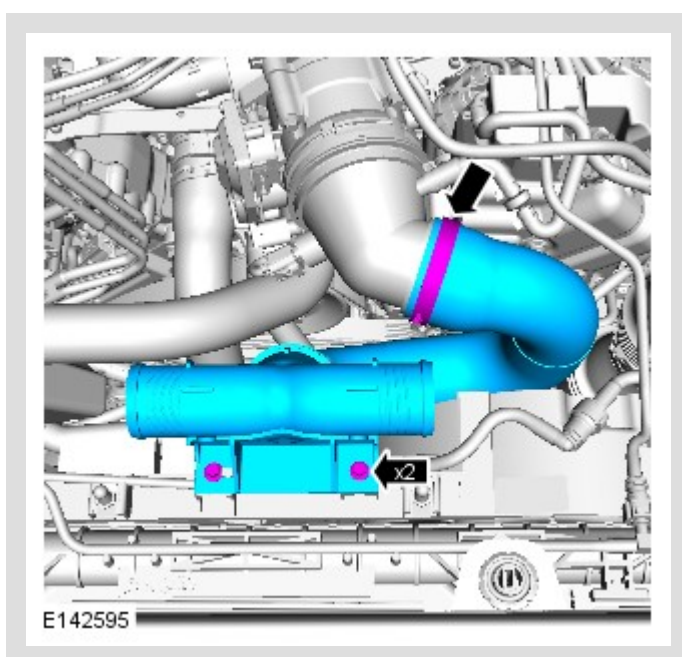


Torque:


Clamp **3.5 Nm**

Bolt **8 Nm**

3.

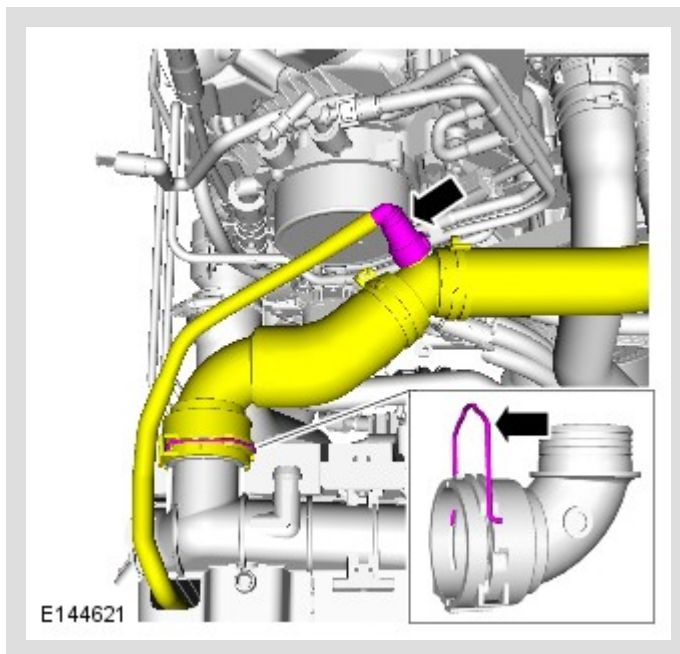


4.

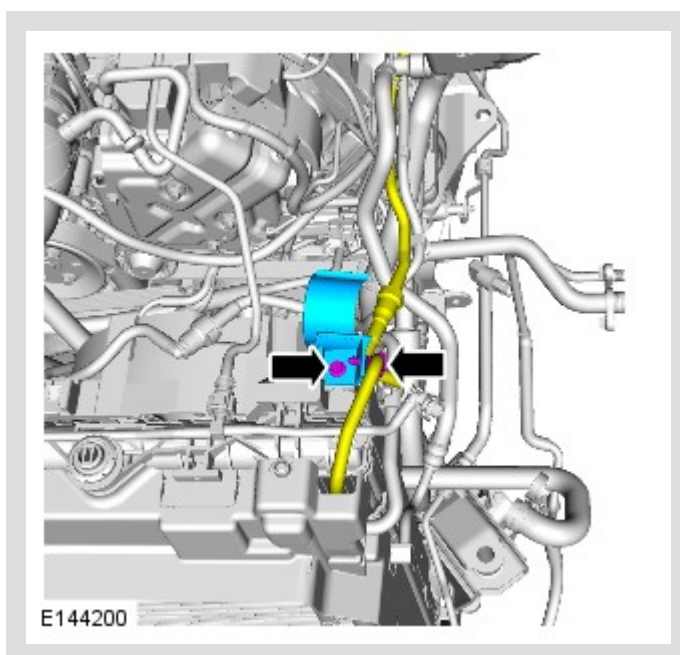


Torque: 7 Nm

5.

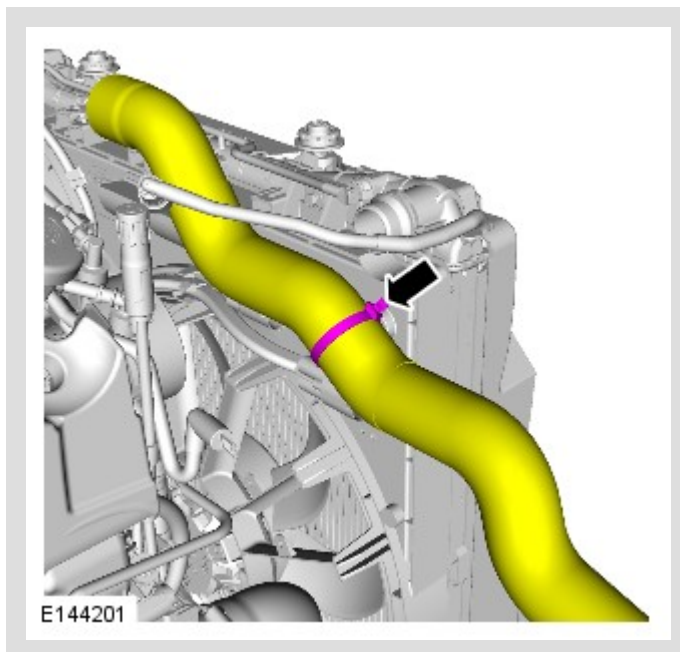


6.

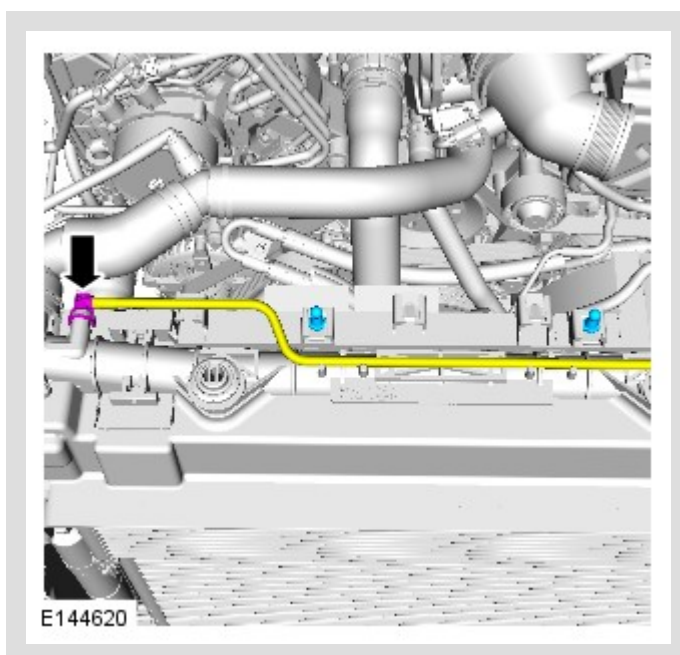


Torque: 7 Nm


7.

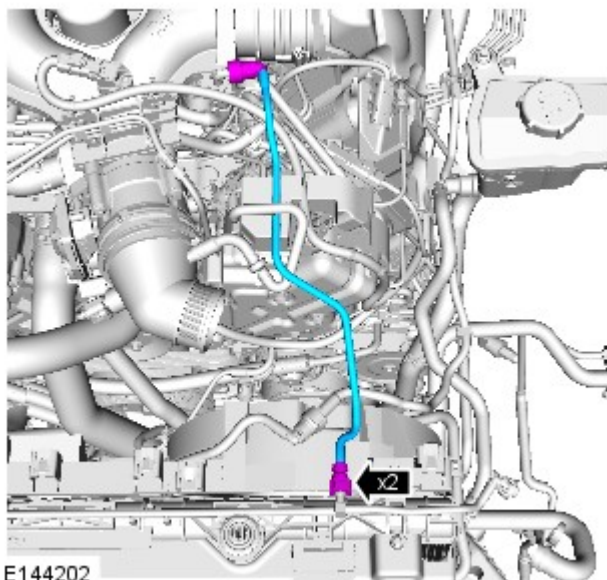


8.

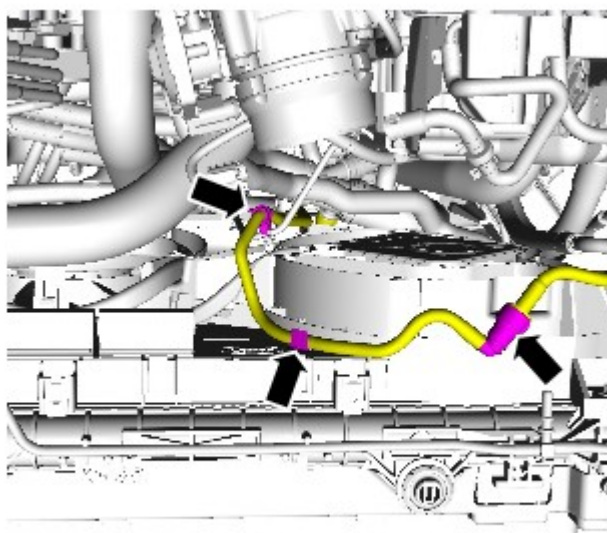

9.

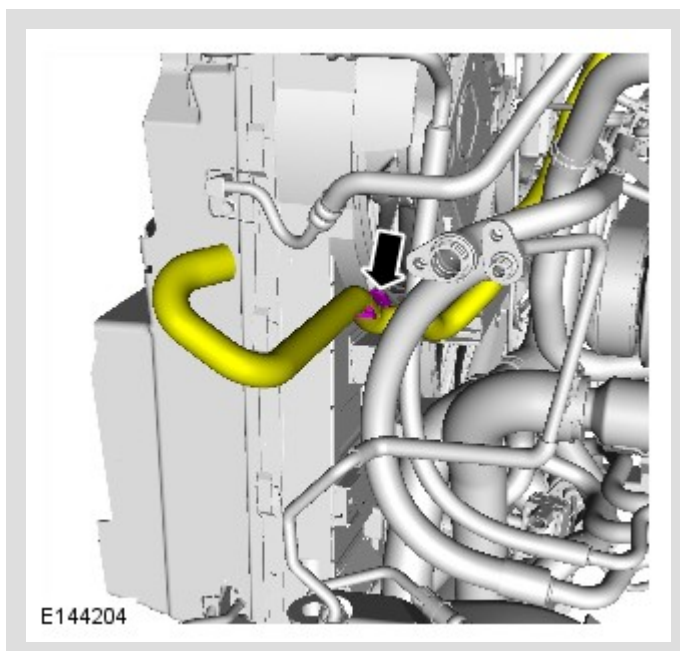


10.

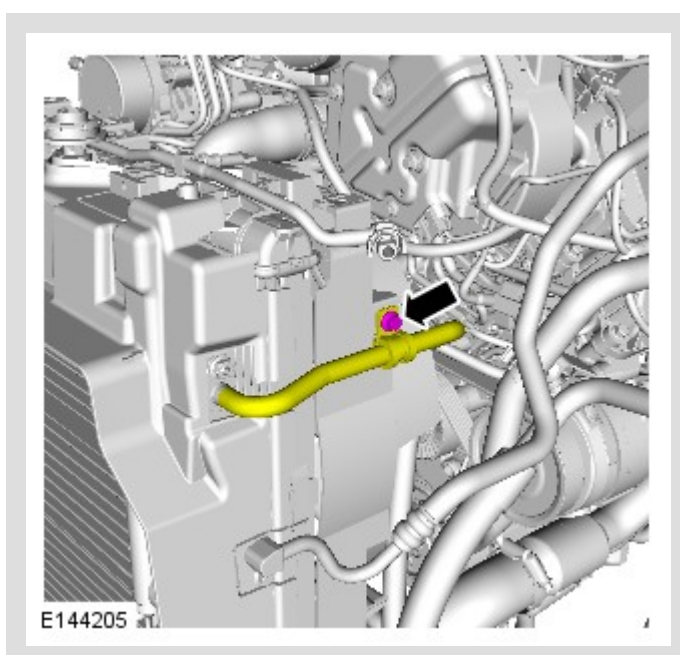


Torque: 7 Nm


11.

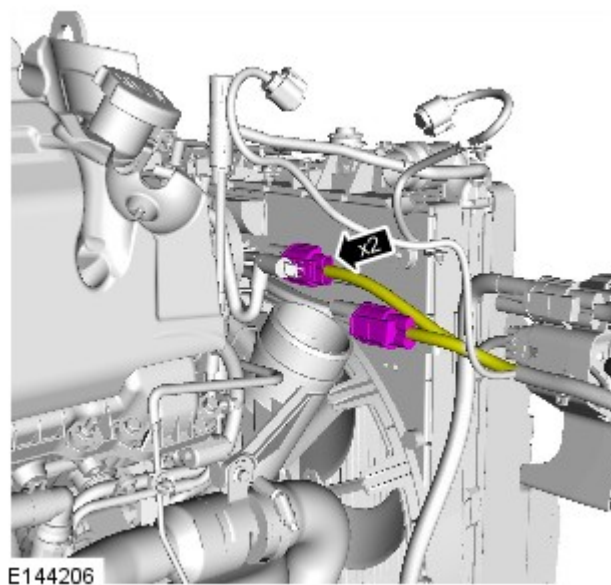

12.

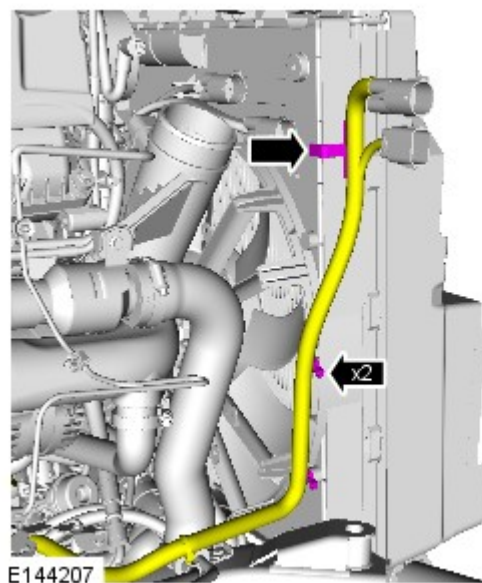


13.

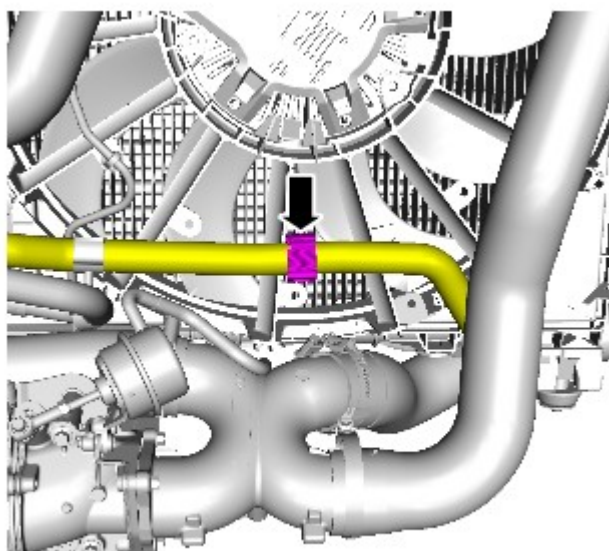


E144208

14.

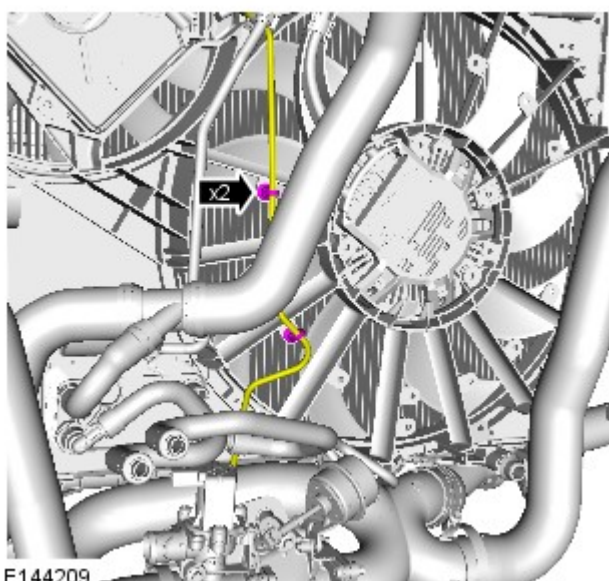


E144209

15.

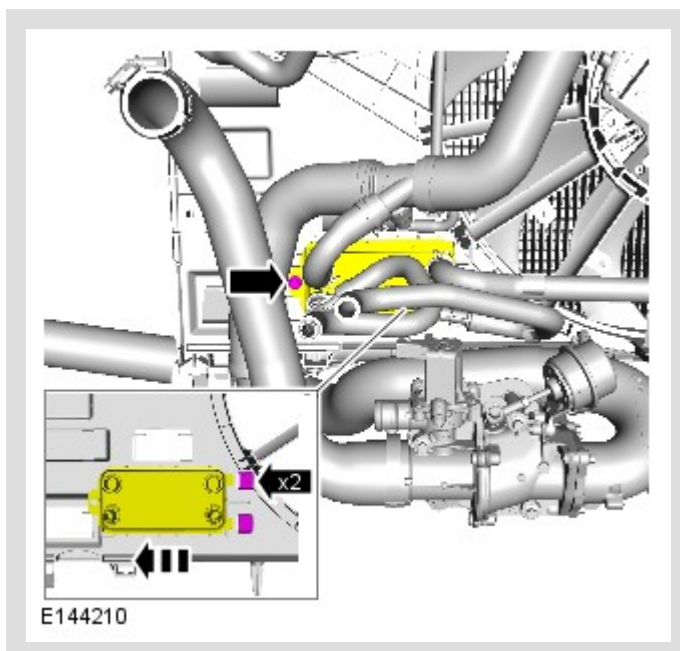

Torque: 10 Nm

16.

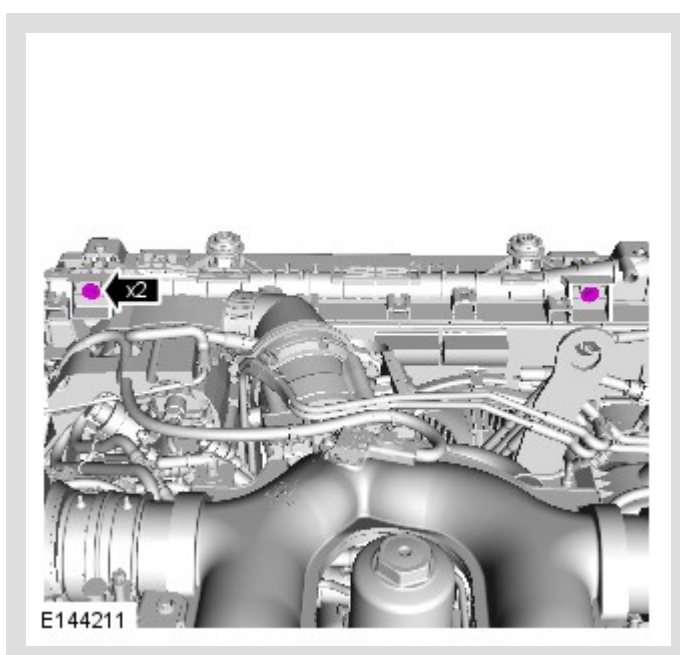

Torque: 7 Nm

17.




CAUTION:

Protect the radiator during this operation.



NOTE:

With assistance remove the component.

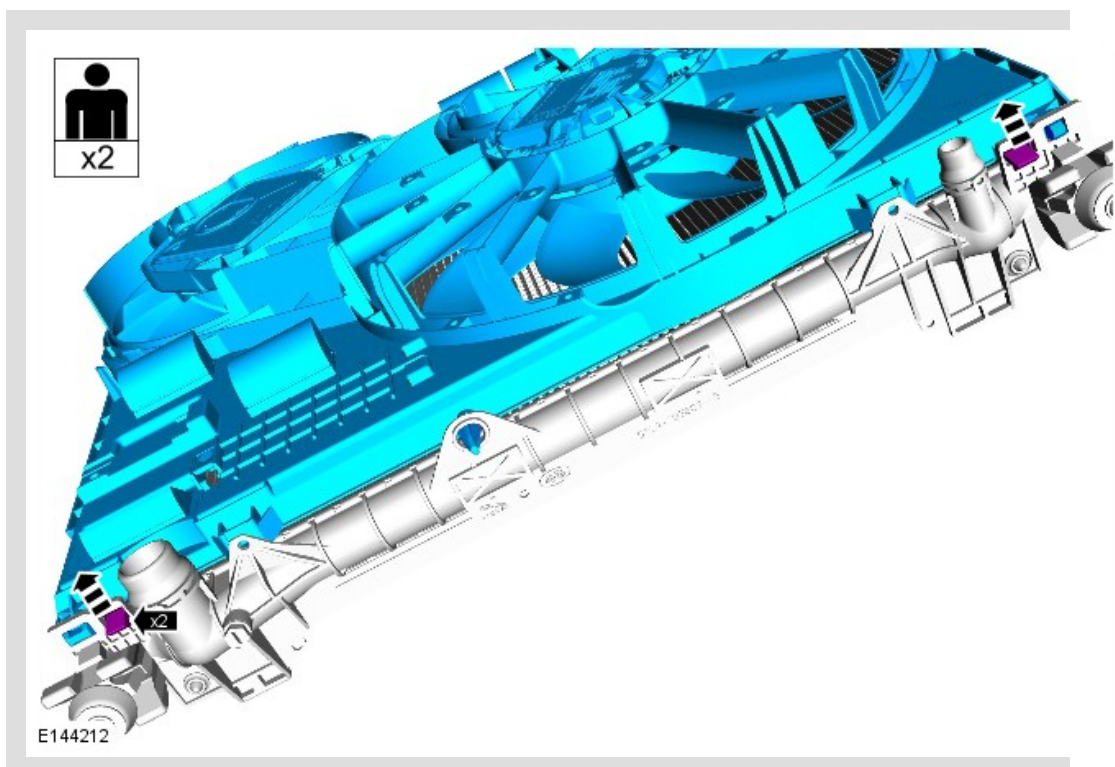

- Release both locking tangs.

INSTALLATION

1. To install, reverse the removal procedure.