


PUBLISHED: 23-AUG-2012

2014.0 RANGE ROVER (LG), 303-08

ENGINE EMISSION CONTROL - V8 S/C 5.0L PETROL

DESCRIPTION AND OPERATION

COMPONENT LOCATION

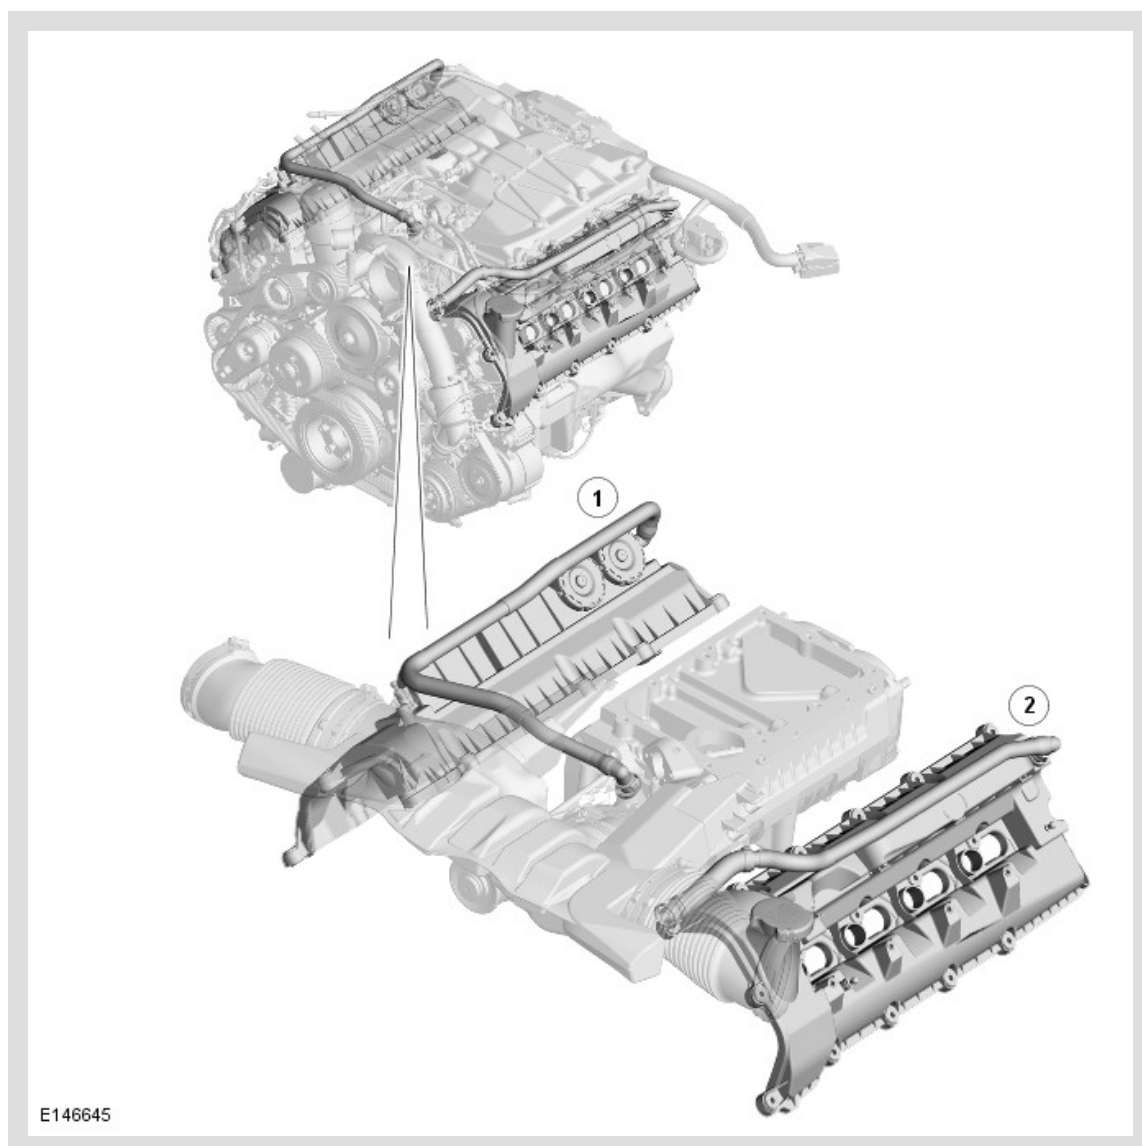

ITEM	DESCRIPTION
1	Part load breather
2	Full load breather


OVERVIEW

The engine emission control system reduces the level of hydrocarbon emissions released to atmosphere from the engine. The engine emission control system consists

of a PCV (positive crankcase ventilation) system with part and full load breathers. Piston blow-by gases are drawn through the breathers into the engine air intake and added to the air charge. The resultant depression in the engine sump, front covers and camshaft covers reduces the load on the joint seals in those areas.

DESCRIPTION

PART LOAD BREATHER

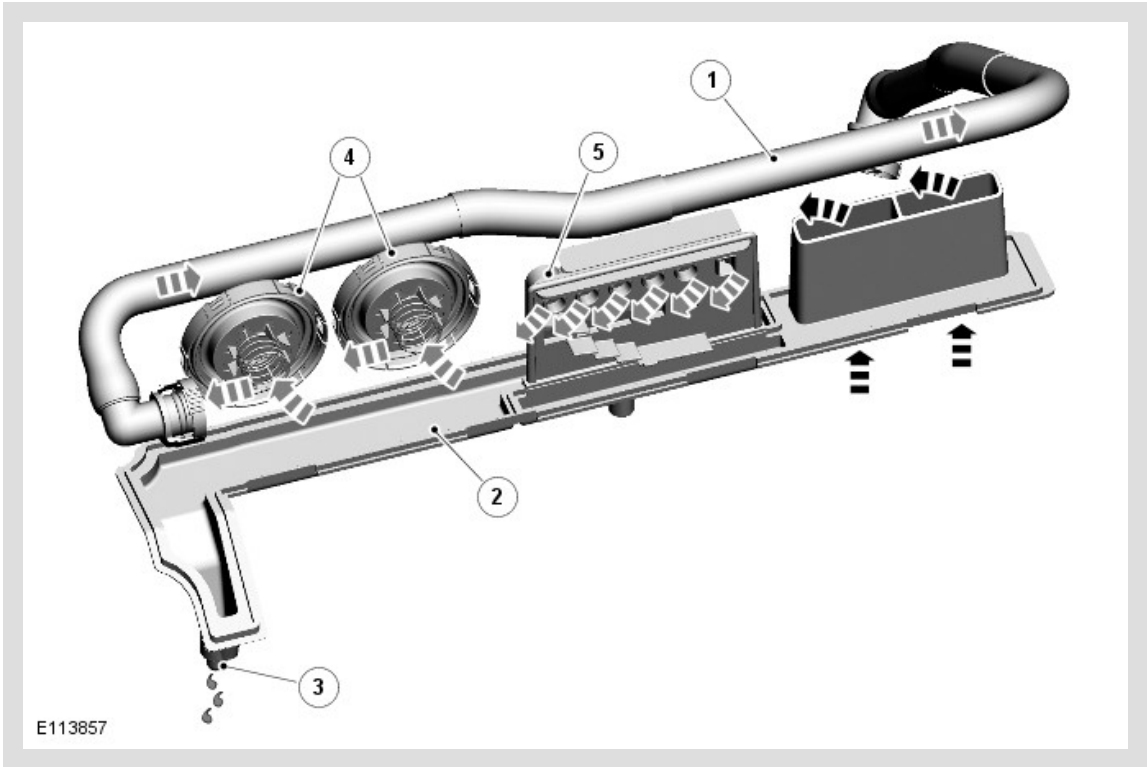


ITEM	DESCRIPTION
1	Flexible hose
2	Baffle plate
3	Oil drain
4	Positive crankcase ventilation valves
5	Oil separator

The part load breather consists of an oil separator, two PCV valves and a flexible hose. The oil separator and the PCV valves are installed in the top of the right camshaft cover. The flexible hose connects the right camshaft cover to the intake of the SC (supercharger) .

The oil separator is installed in a channel in the top of the camshaft cover. A baffle plate, which incorporates a gas intake and an oil drain, is installed over the channel.

The two PCV valves are integrated into the camshaft cover and connected in parallel in the gas outlet from the channel to the flexible hose. The PCV valves regulate the crankcase pressure.

FULL LOAD BREATHER

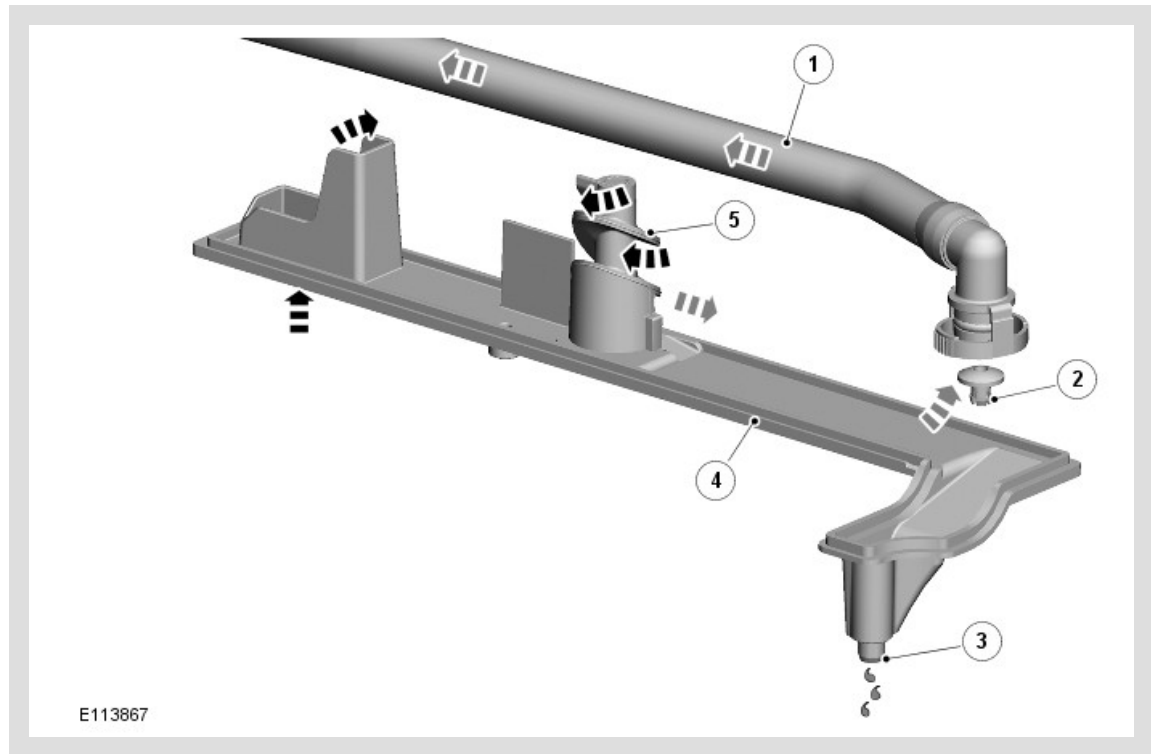

ITEM	DESCRIPTION
1	Flexible hose
2	Check valve
3	Oil drain
4	Baffle plate
5	Oil separator

The full load breather consists of an oil separator, a check valve and a flexible hose. The oil separator and the check valve are installed in the top of the left camshaft cover. The flexible hose connects the left camshaft cover to the clean air duct of the intake air distribution and filtering system.

The oil separator is installed in a channel in the top of the camshaft cover. A baffle plate, which incorporates a gas intake and an oil drain, is installed over the channel. The check valve is installed in the gas outlet from the channel. The check valve controls the fresh air flow.

