

PUBLISHED: 18-JUN-2017
2014.0 RANGE ROVER (LG), 303-13

EVAPORATIVE EMISSIONS - V8 N/A 5.0L PETROL/V8 S/C 5.0L PETROL

EVAPORATIVE EMISSION CANISTER

(G1509547)

REMOVAL AND INSTALLATION

17.15.13	EVAPORATIVE EMISSION CANISTER - RENEW	5000 CC, AJ V8	0.4	USED WITHINS	
----------	--	-------------------	-----	-----------------	--

REMOVAL



CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.



NOTES:

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1.

Disconnect the battery ground cable.

Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.


Before handling any components within the fuel system make sure that the health and safety guidelines are followed.

Refer to: Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).


3.

Raise and support the vehicle.


4.

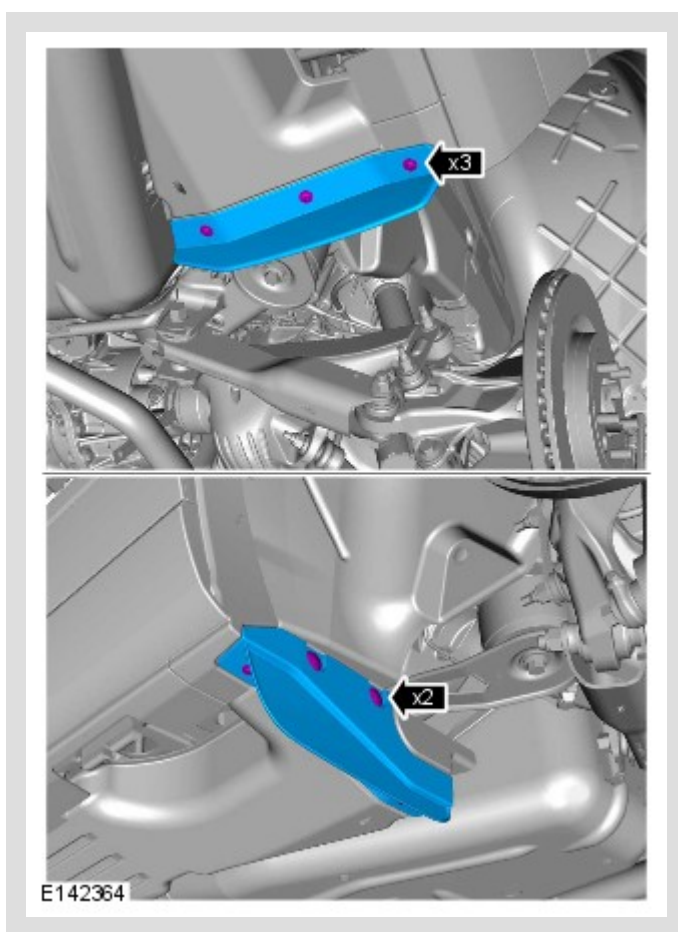


Remove the rear left wheel arch trim panel.

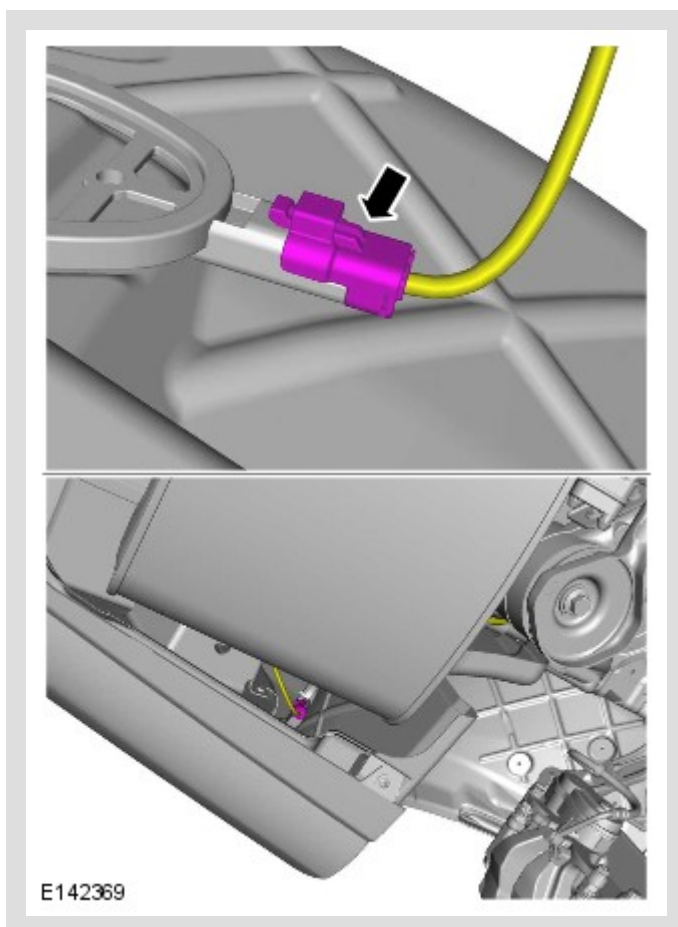


Disconnect the electrical connector.

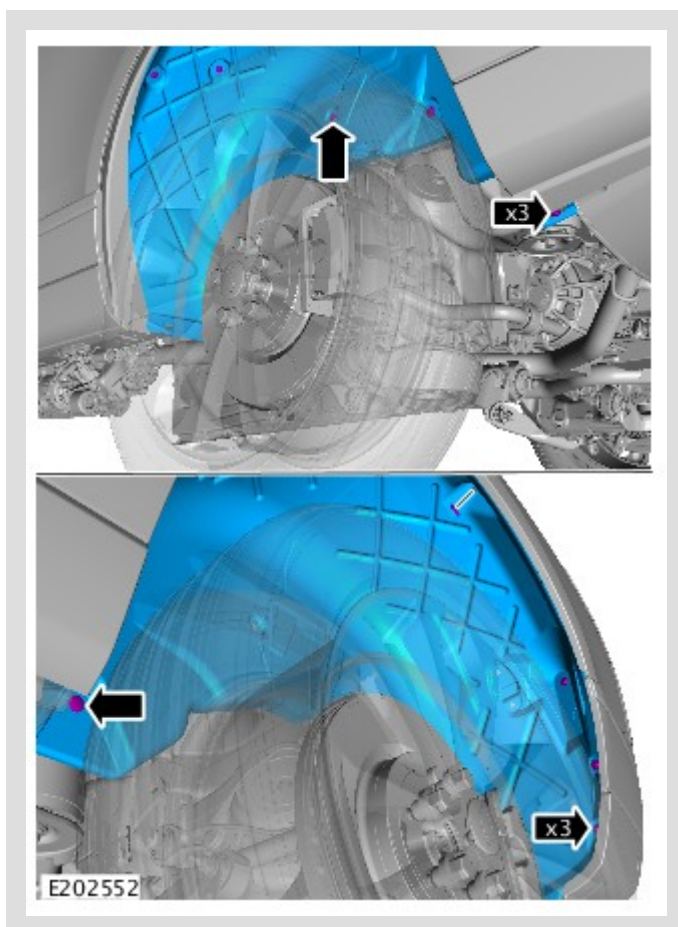

Remove the Wheel arch liner fixings.

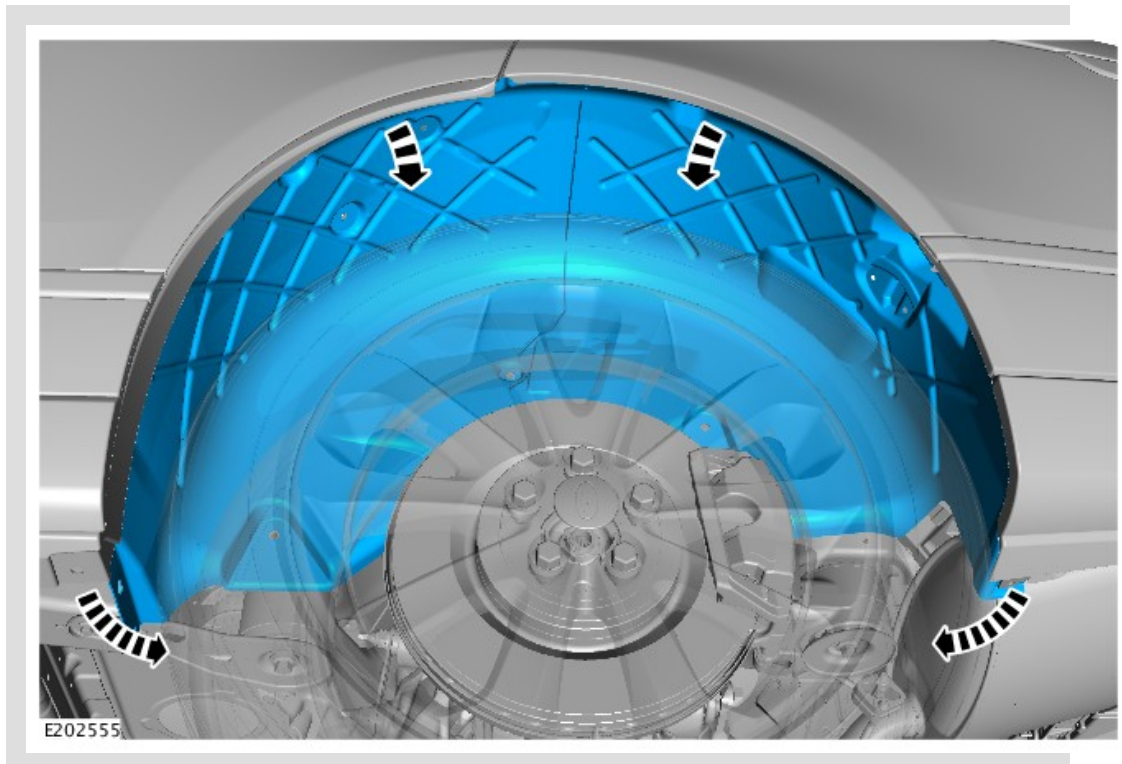


Remove the wheel arch liner.

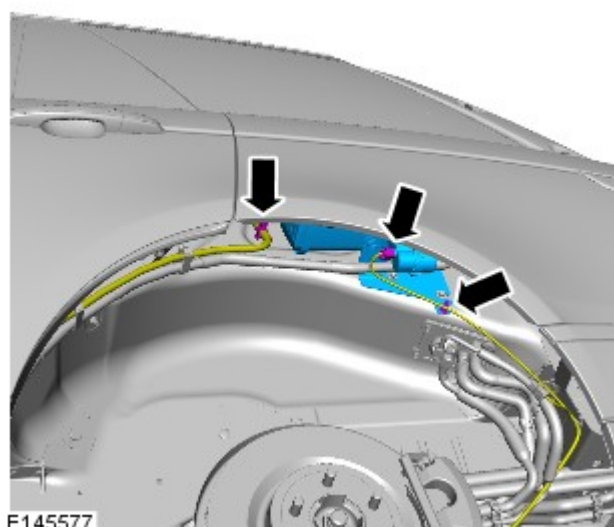


E145577

9.

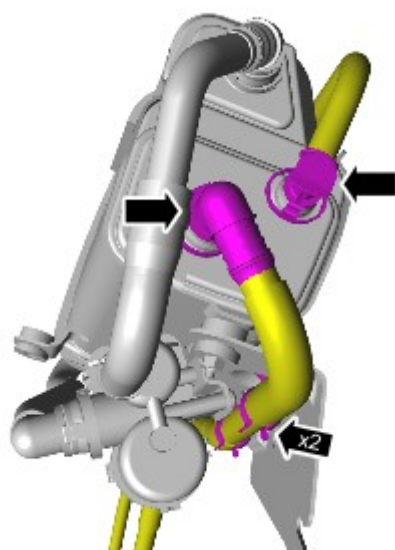


E145578

10.

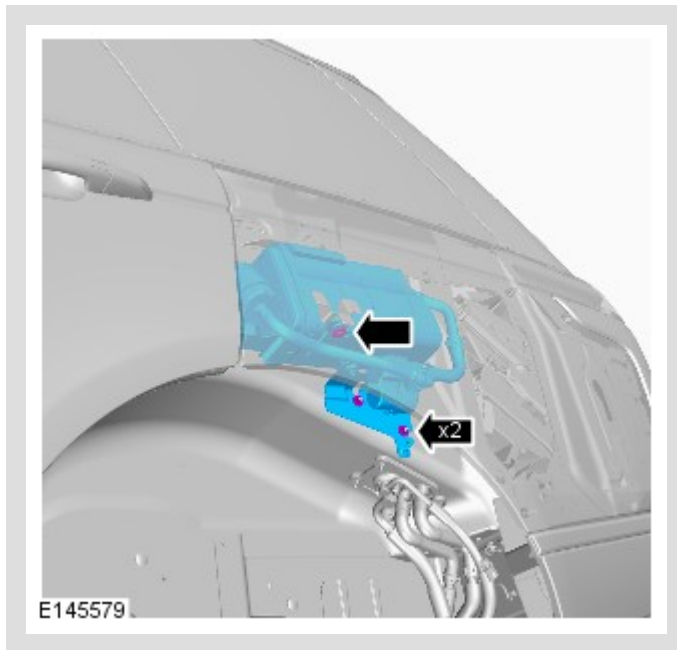

Torque: 19 Nm

11.

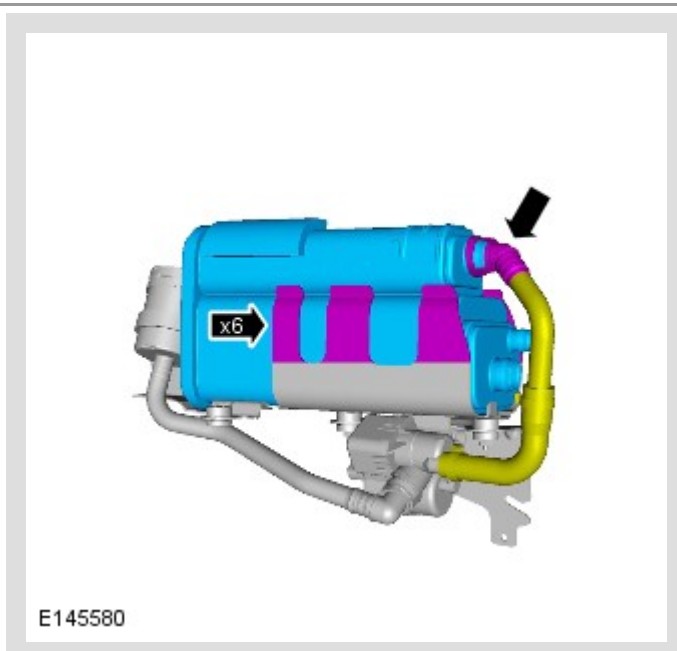

INSTALLATION

1. To install, reverse the removal procedure.