

2016.0 RANGE ROVER (LG), 309-00

EXHAUST SYSTEM - TDV6 3.0L DIESEL

CATALYTIC CONVERTER (G1509408)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



100-051

Cutter, Exhaust
Pipe

REMOVAL

WARNING:

Observe due care when working near a hot exhaust system.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: Rear Muffler (309-00A, Removal and Installation).

3.

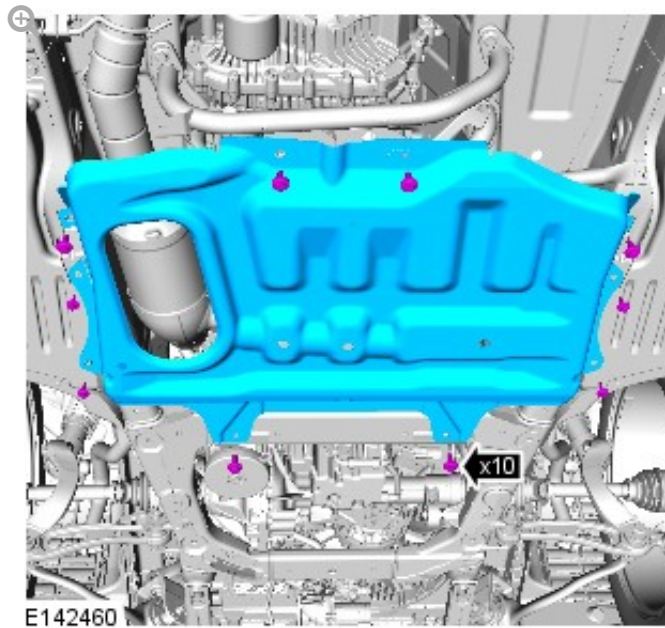


Torque:


M6 10 Nm

M10 60 Nm

4.

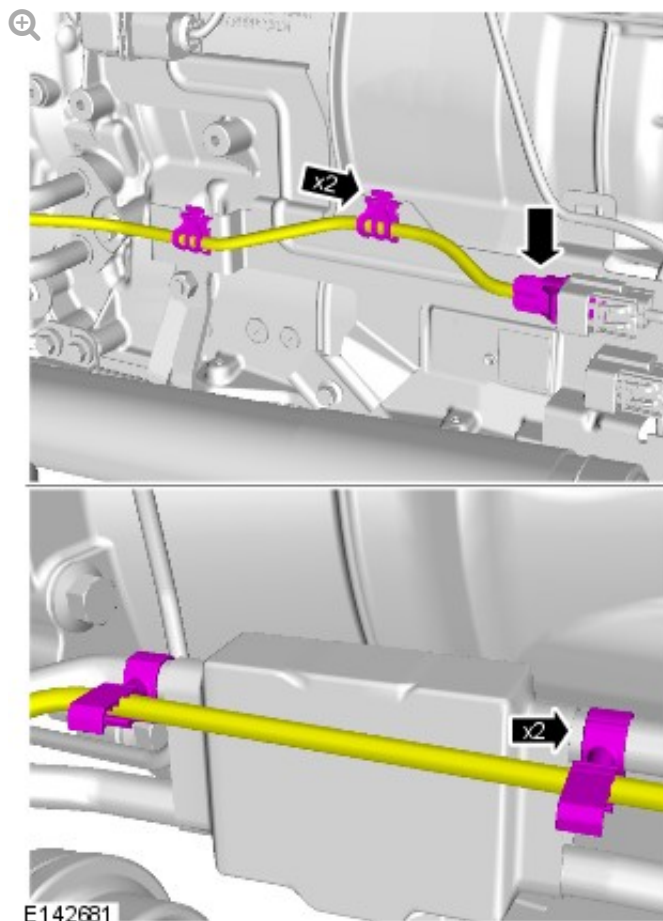


5.

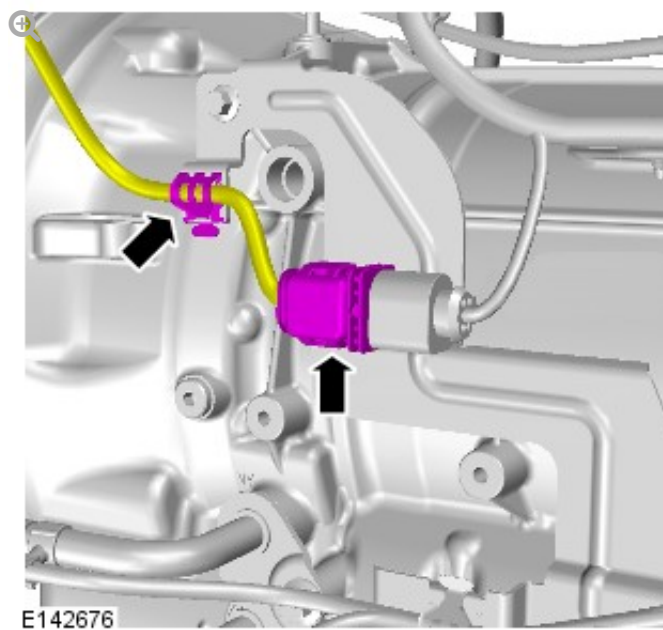

6.

NOTE:

Cut the RH exhaust pipe at the location marked on the pipe.

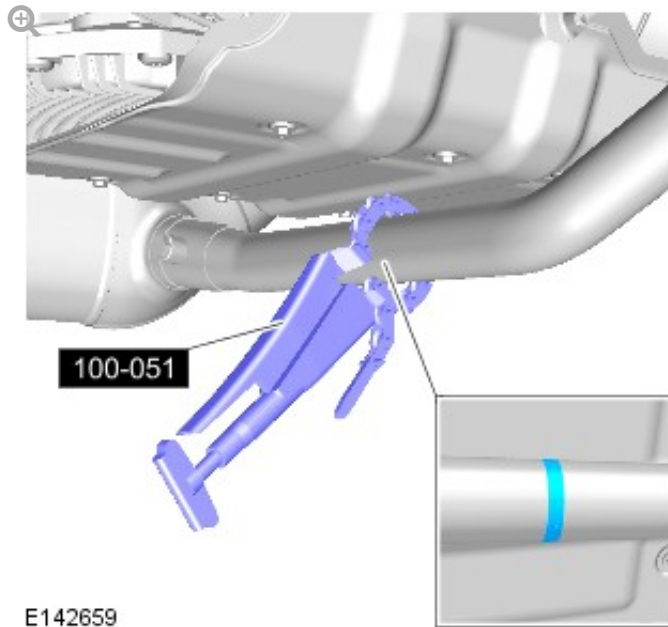


Special Tool(s): [100-051](#)

7.

CAUTION:


Using a suitable transmission stand support the exhaust system.

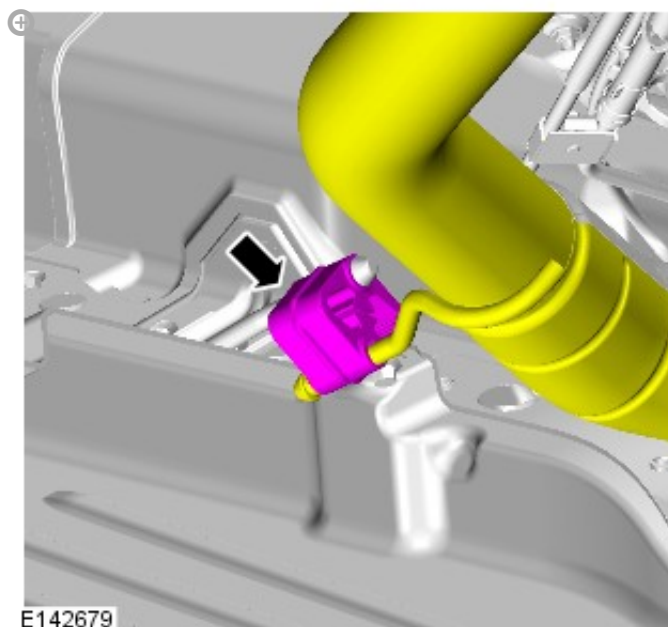

8.

NOTE:

Install a new gasket.

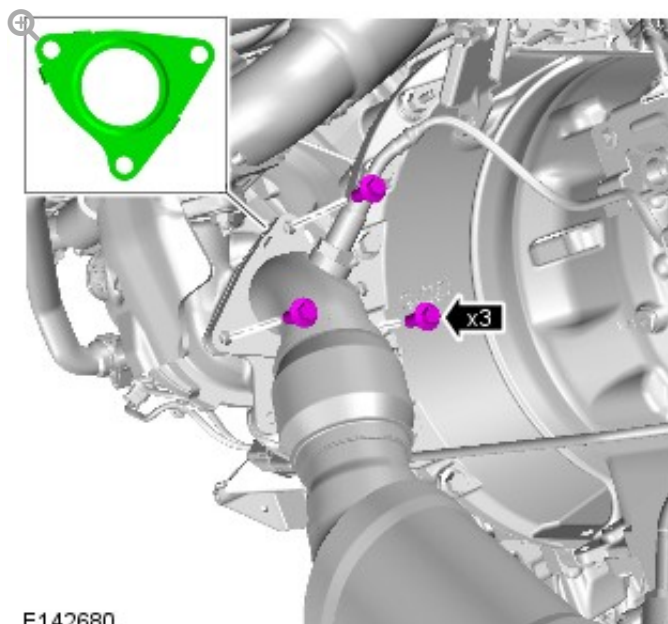


Torque: 28 Nm

9.

NOTE:


This step requires the aid of another technician.

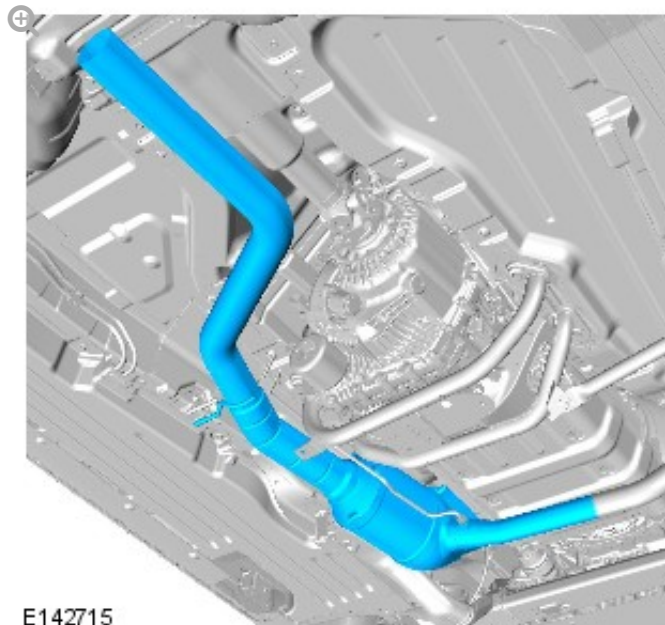

10.

NOTE:

Do not disassemble further if the component is removed for access only.

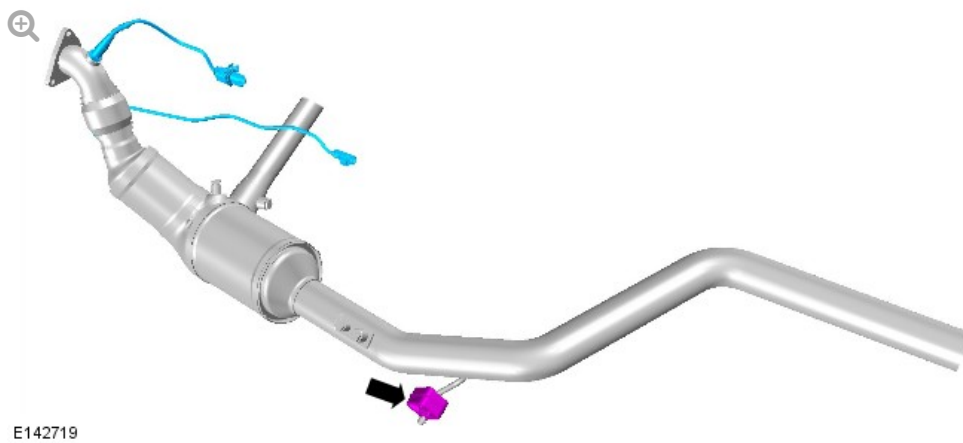

Torque:

Temperature sensor **35 Nm**

Heated Oxygen sensor **48 Nm**

INSTALLATION

1.

NOTES:


- Make sure the anti-seize compound does not contact the heated oxygen sensor (HO2S) tip.
- If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.
- Install a new gasket.

To install, reverse the removal procedure.

2.

NOTES:

- Install the retaining clamp.
- Make sure the mating faces are clean and fully slotted together.
- Check for leaks, when engine is warm.

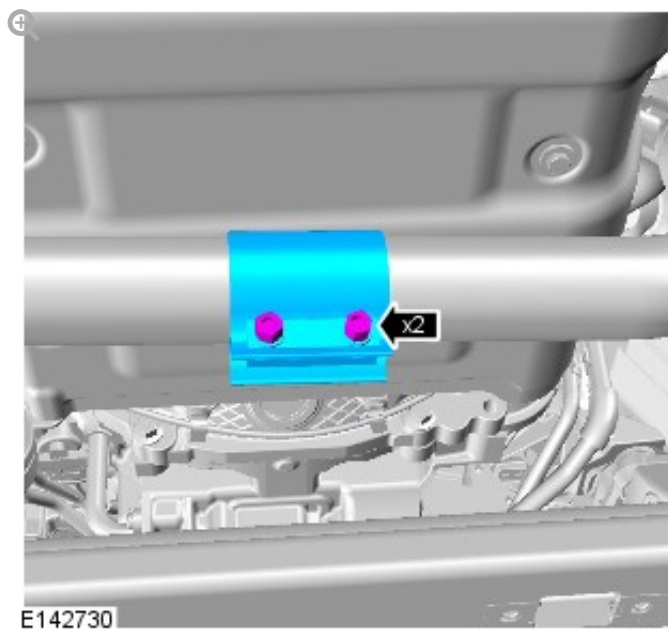

Torque: 55 Nm