

2016.0 RANGE ROVER (LG), 309-00

EXHAUST SYSTEM - TDV6 3.0L DIESEL

EXHAUST SYSTEM - VEHICLES WITHOUT: DIESEL PARTICULATE FILTER (DPF)

[G1520779]

REMOVAL AND INSTALLATION

REMOVAL

WARNING:

Observe due care when working near a hot exhaust system.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

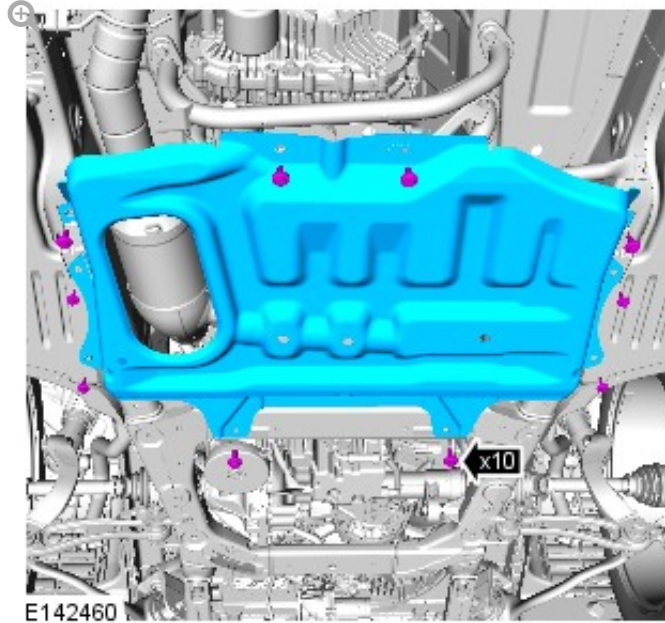


Torque:


M6 10 Nm

M10 60 Nm


3.

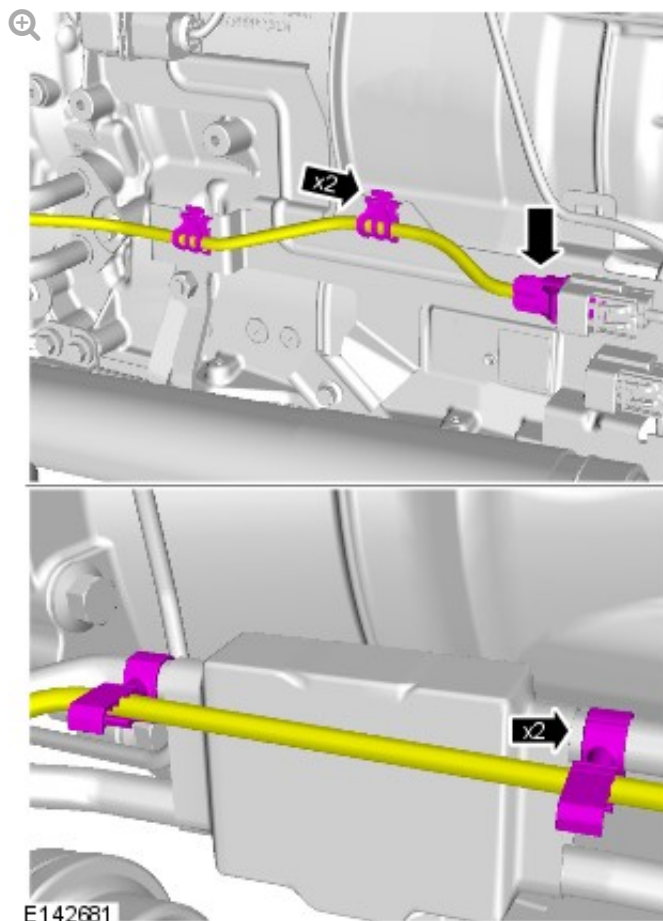

4.

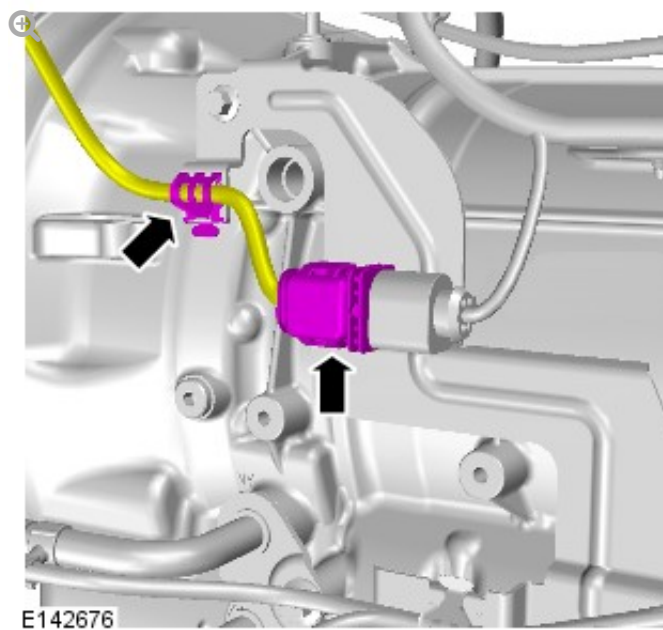


5.

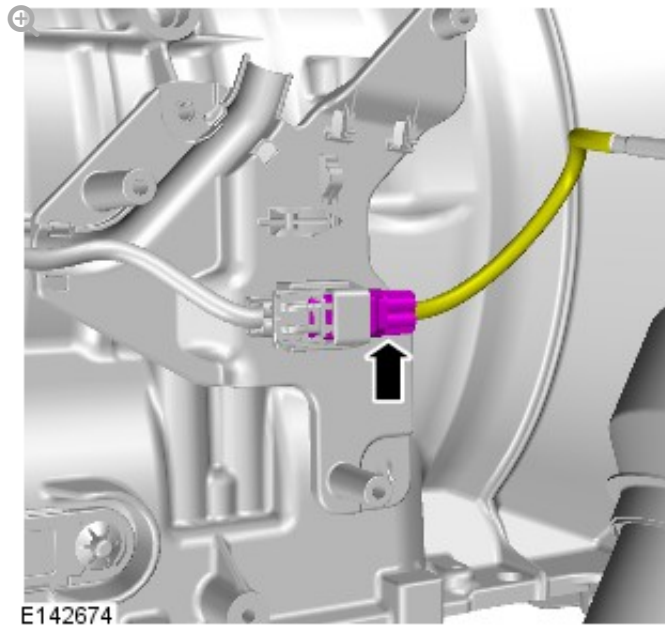

6.

NOTE:

Install a new gasket.

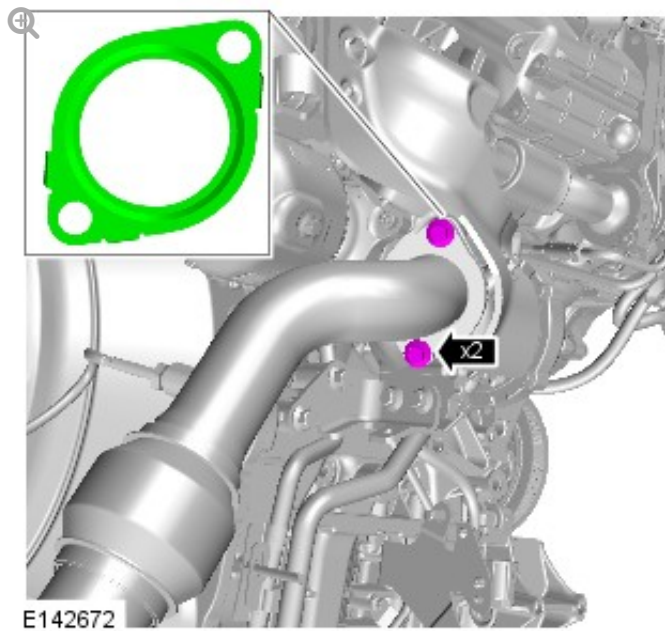


Vehicles with twin turbo system:

Torque: 28 Nm

7.

NOTE:

Install a new gasket.

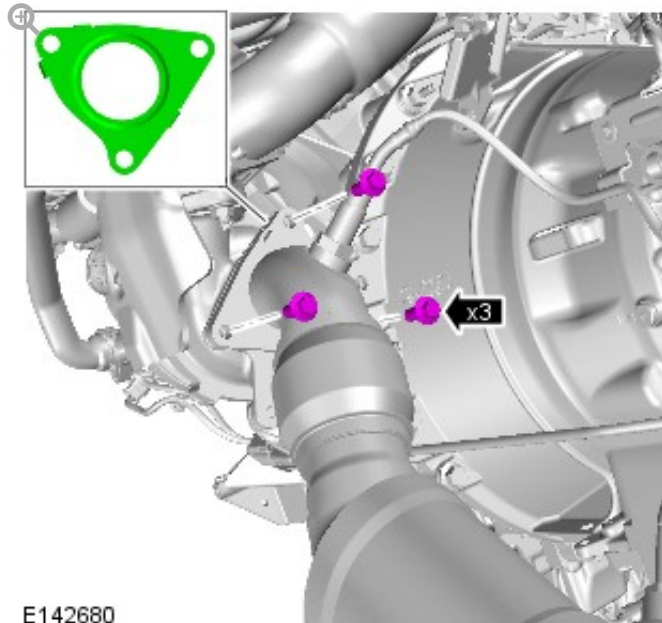


Torque: 28 Nm


8.

CAUTION:

Using a suitable transmission stand support the exhaust system.

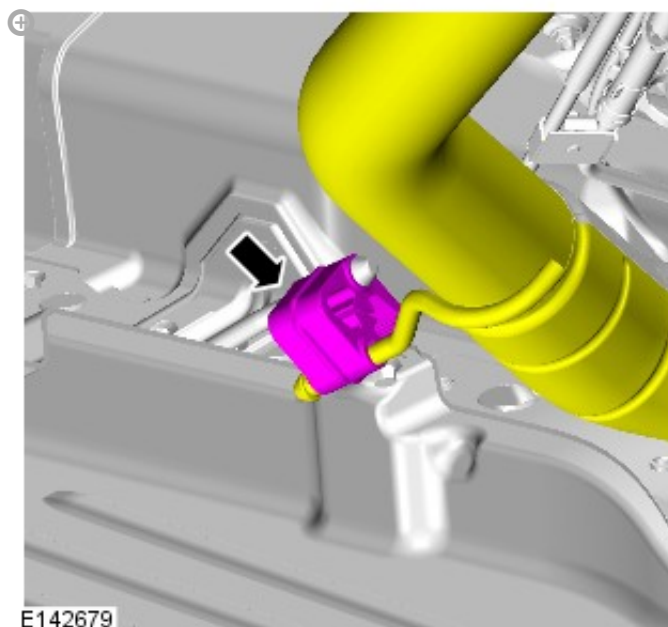


9.

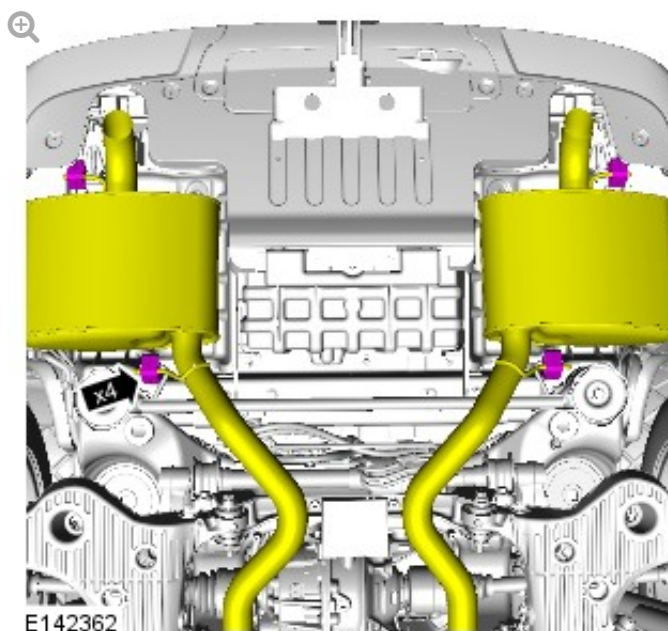

10.

NOTE:


This step requires the aid of another technician.

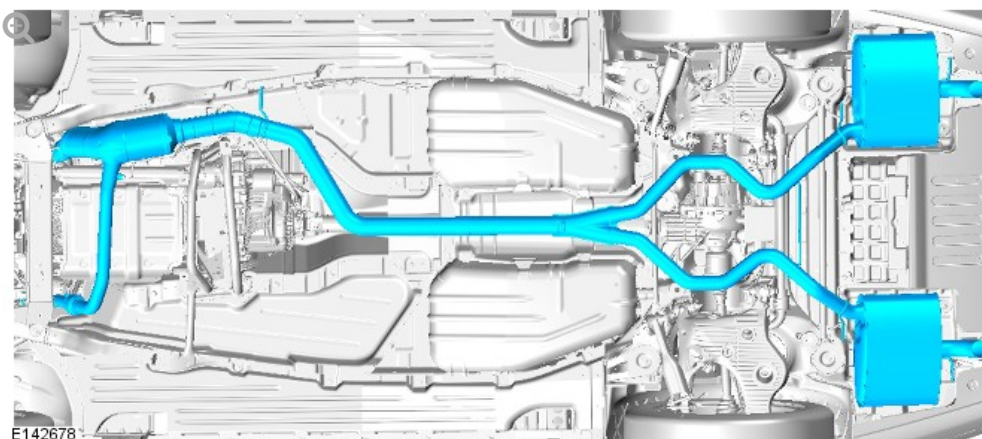

11.

NOTE:

Do not disassemble further if the component is removed for access only.

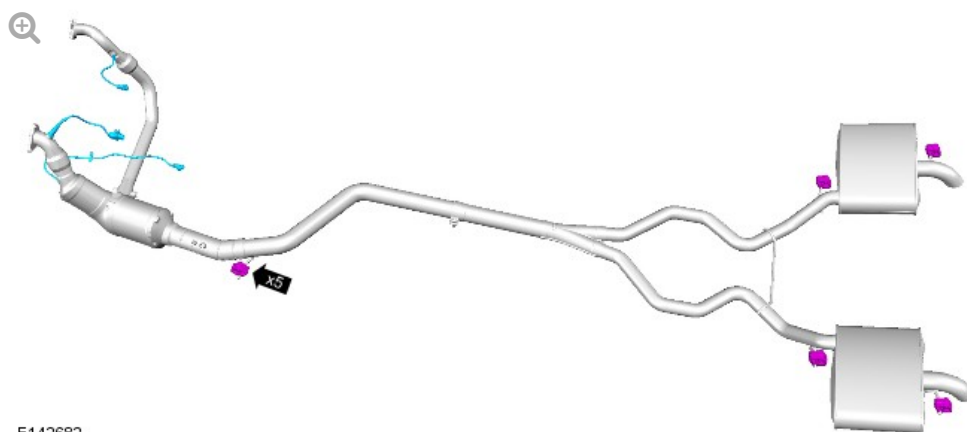

Torque:

Temperature sensor **35 Nm**

Heated Oxygen sensor **48 Nm**

INSTALLATION

1.

NOTES:

- Make sure the anti-seize compound does not contact the heated oxygen sensor (HO2S) tip.
- If the original sensor is to be installed, apply lubricant meeting specification ESE-M12A4-A to the thread of the sensor.
- Install new gaskets.

To install, reverse the removal procedure.