

PUBLISHED: 22-MAR-2017
2015.0 RANGE ROVER (LG), 309-00

EXHAUST SYSTEM - TDV8 4.4L DIESEL


DIESEL PARTICULATE FILTER (G1509415)

REMOVAL AND INSTALLATION

17.50.20	DIESEL PARTICULATE FILTER - RENEW	4400 CC, TDV8	1.2	USED WITHINS	
17.50.20	DIESEL PARTICULATE FILTER - RENEW	4400 CC, TDV8, WITHOUT DIESEL EXHAUST FLUID	1.2	USED WITHINS	
60.90.18.02	AIR SUSPENSION - GEOMETRY SET MODE - ACTIVATE AND DEACTIVATE - WITHOUT USING DIAGNOSTIC TOOL	ALL DERIVATIVES	0.1	USED WITHINS	

SPECIAL TOOL(S)

--

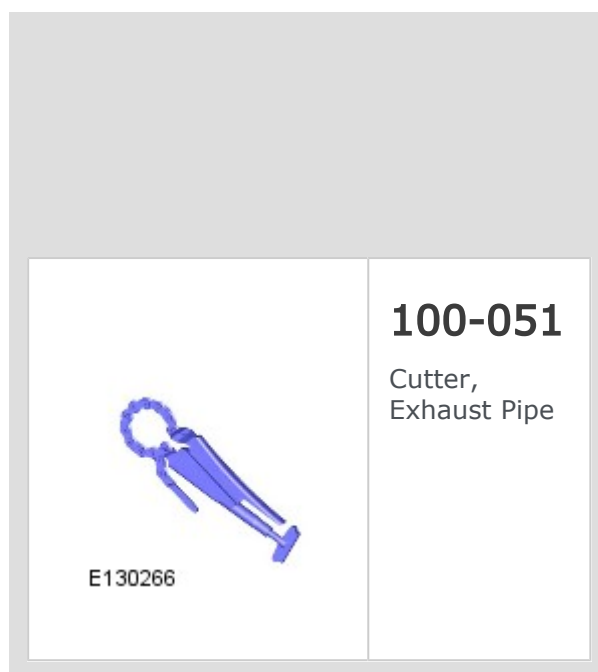

REMOVAL



WARNING:

Observe due care when working near a hot exhaust system.



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.



WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

3.

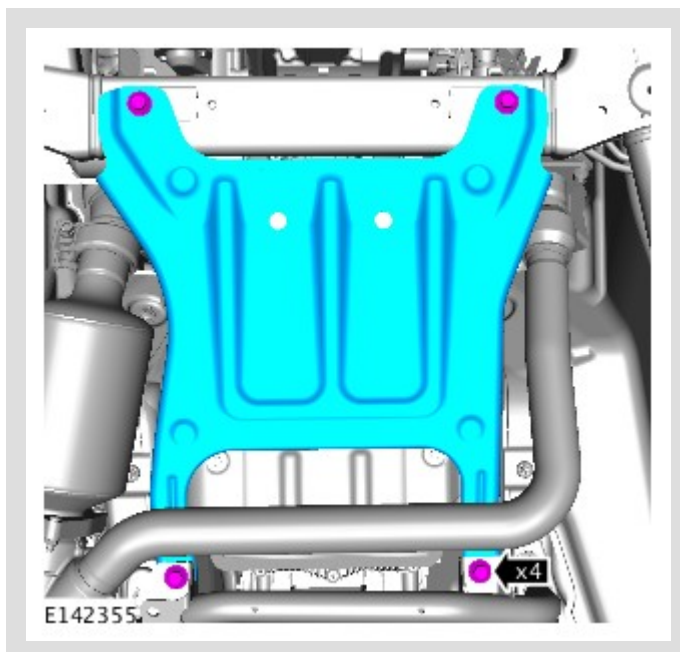


Torque: 60 Nm

4.

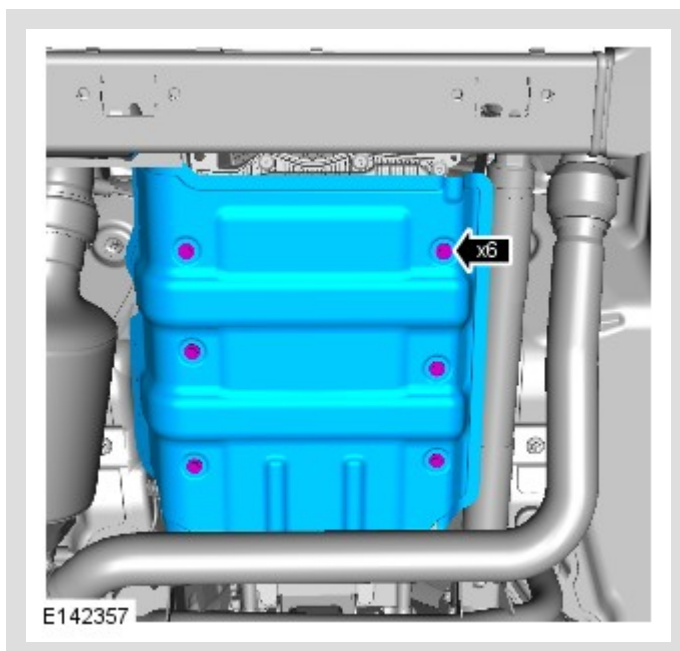


Torque: 10 Nm

5.

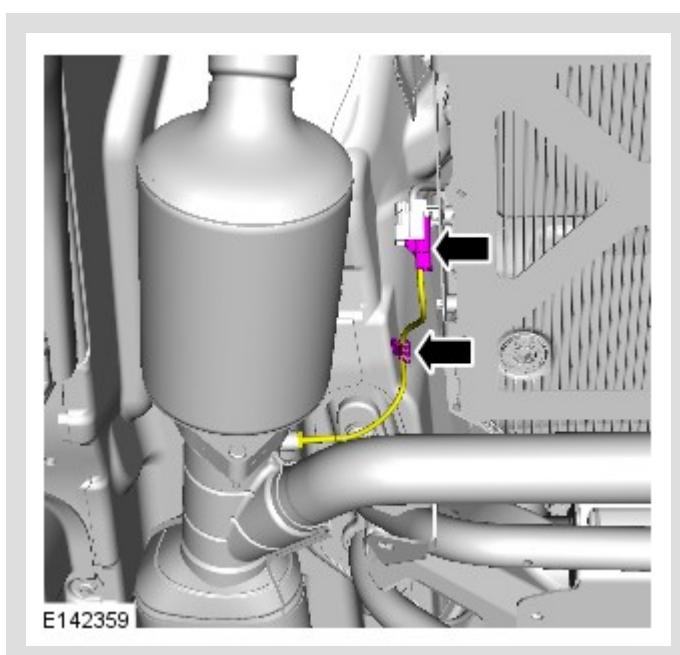


6.

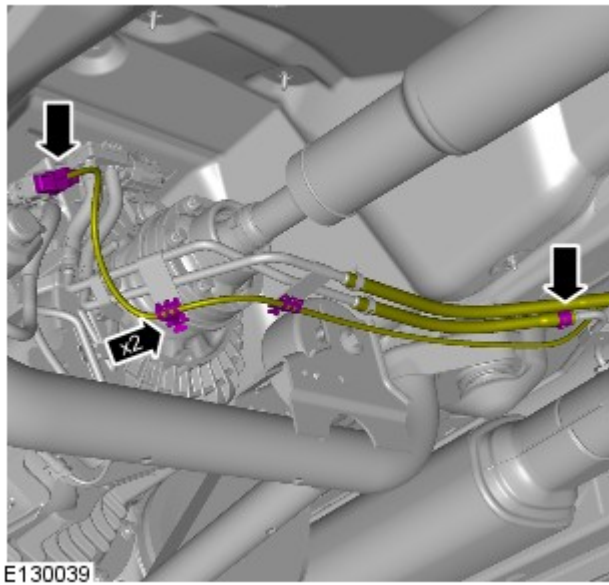

7.

ⓘ CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

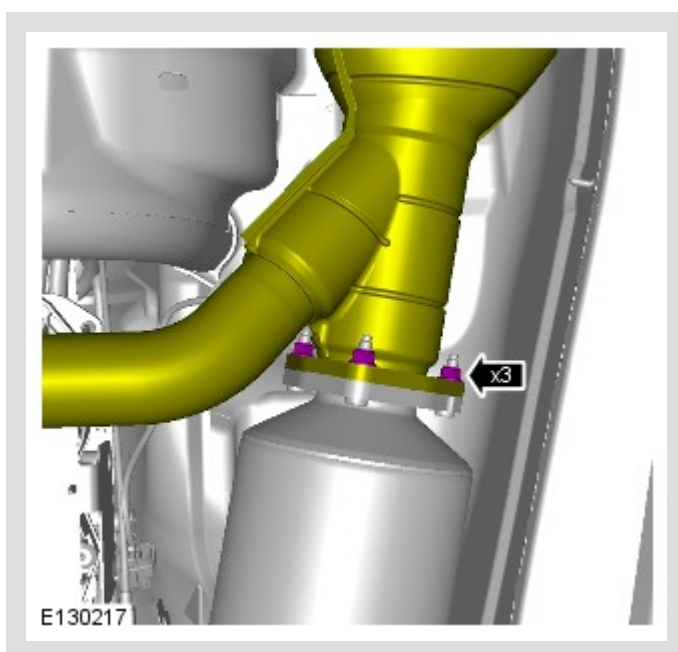


Torque: 30 Nm

8.

⚠ CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

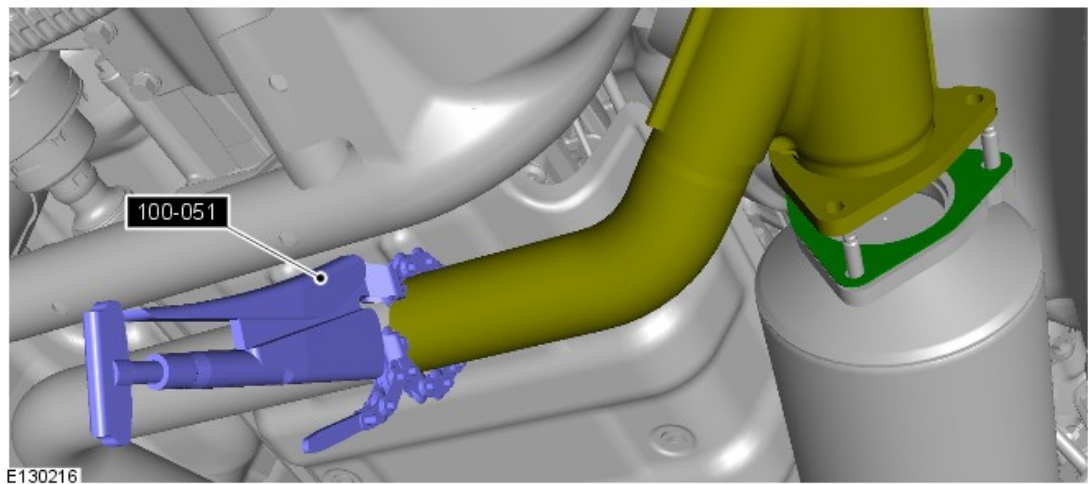


Special Tool(s): [100-051](#)

9.

ⓘ CAUTION:


Make sure to support the rear muffler assembly with a suitable stand.

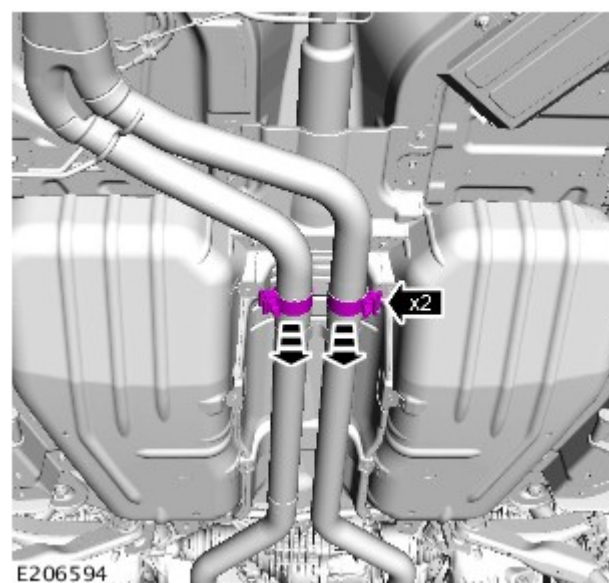

Remove the DPF from the rear muffler.

Torque: **55 Nm**

10.

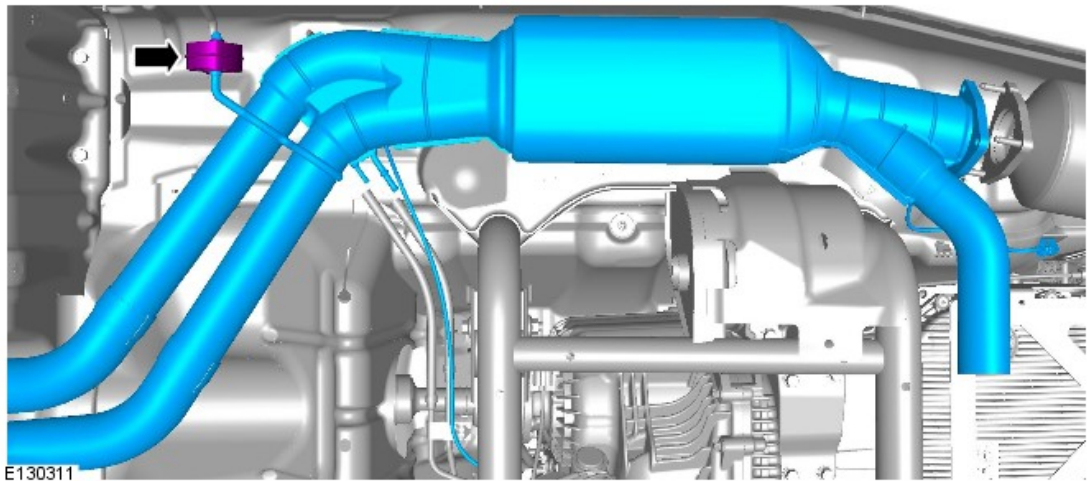


11.



NOTE:


Do not disassemble further if the component is removed for access only.

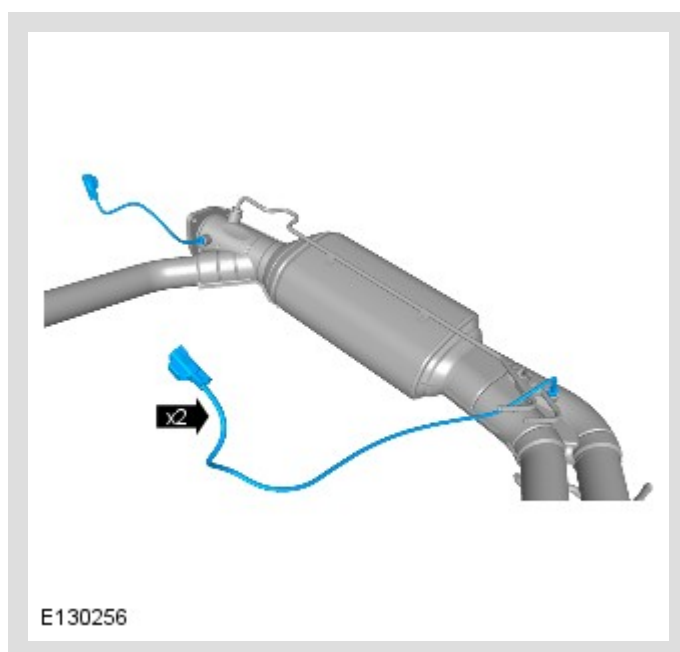

Torque: 35 Nm

INSTALLATION

1.

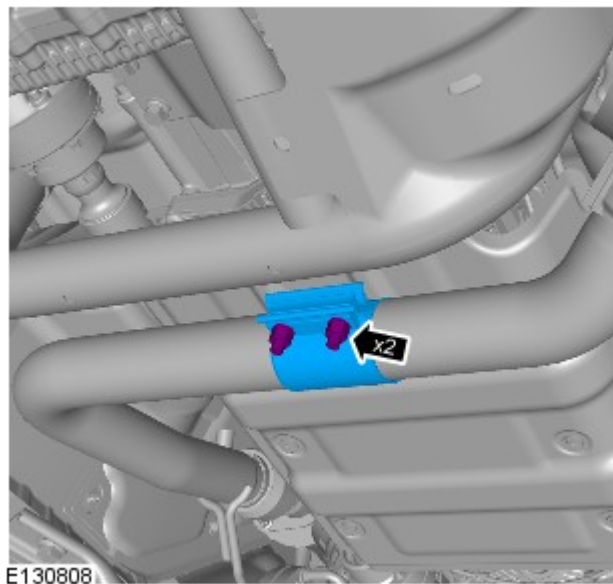

To install, reverse the removal procedure.

Torque: **55 Nm**

-
2. If a new unit is installed, configure using the approved diagnostic tool.