

PUBLISHED: 03-MAY-2017
2014.0 RANGE ROVER (LG), 303-04

FUEL CHARGING AND CONTROLS - V8 S/C 5.0L PETROL

THROTTLE BODY (G1605165)

REMOVAL AND INSTALLATION

19.22.45

THROTTLE
BODY -
RENEW

5000 CC, AJ
V8,
SUPERCHARGED

1

USED
WITHINS

PART(S)

STEP	PART NAME	QUANTITY
Removal Step 6	Engine coolant outlet seal	1
Removal Step 7	Engine coolant outlet seal	1
Removal Step 10	Throttle body gasket	1

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).


2. WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: Cooling System Partial Draining and Vacuum Filling (303-03 Engine Cooling - V6 S/C 3.0L Petrol, General Procedures).

4.

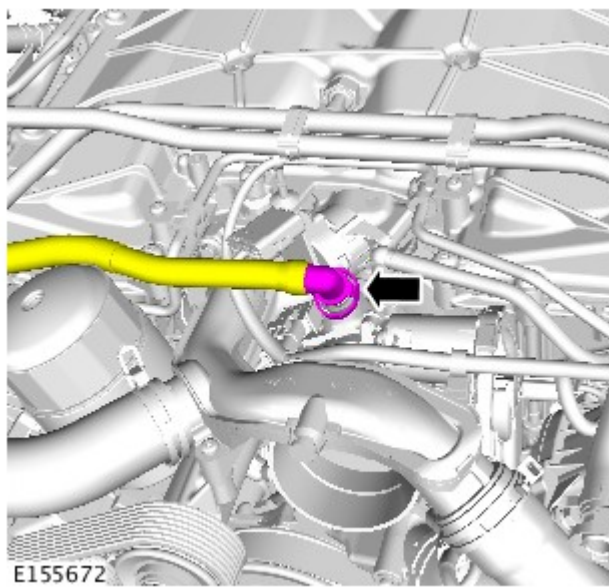


5.

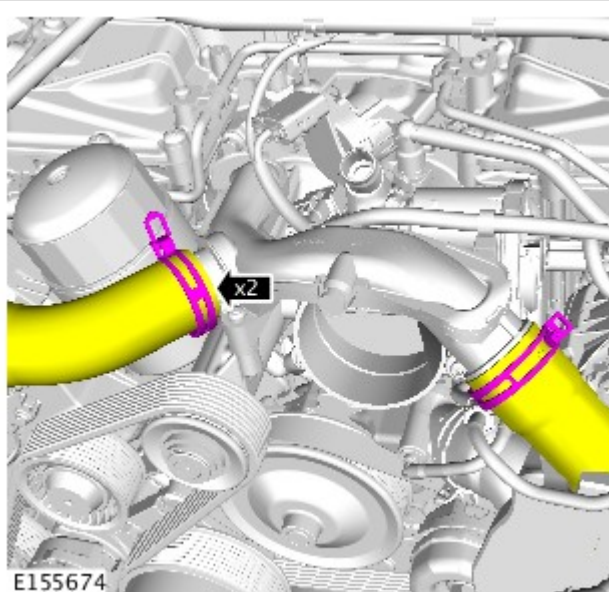

6.

NOTES:

- This step should only be carried out on vehicles pre 2015.
- Remove and discard the seals.

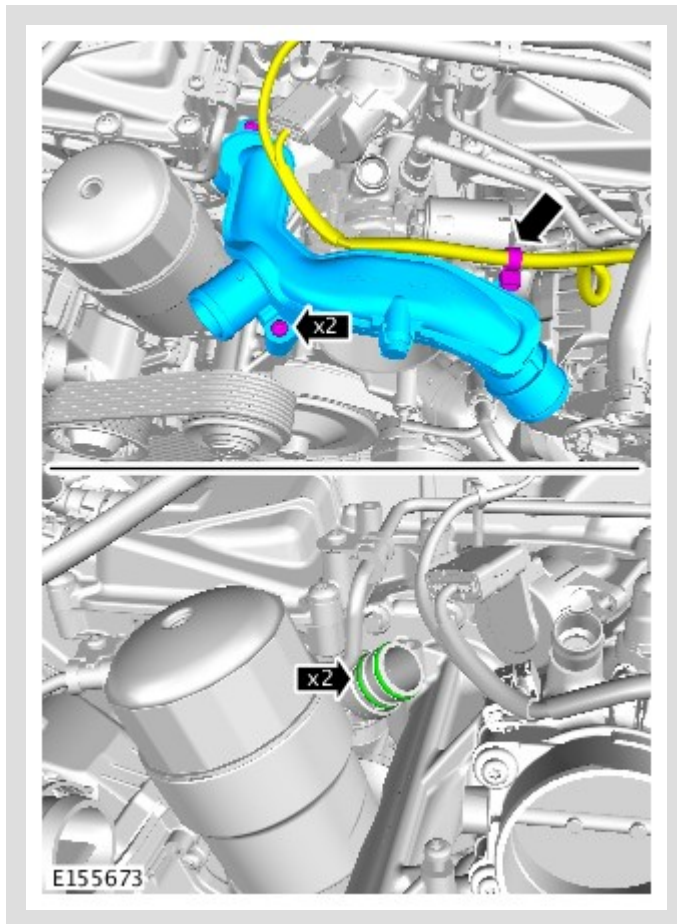


Renew Part: *Engine coolant outlet seal* Quantity: *1* .
Torque: 10 Nm


7.


NOTES:

- This step should only be carried out on vehicles from 2015 onwards.
- Remove and discard the seal.

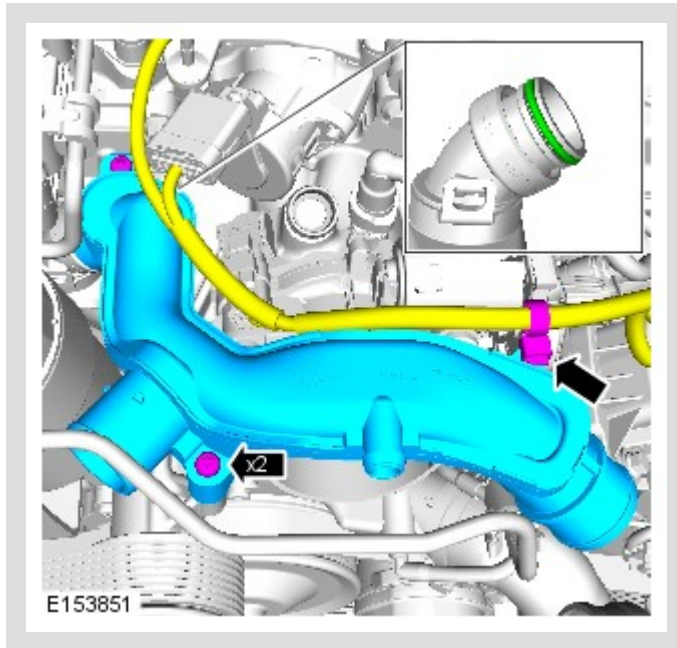

Renew Part: *Engine coolant outlet seal* Quantity: *1* .
Torque: 10 Nm

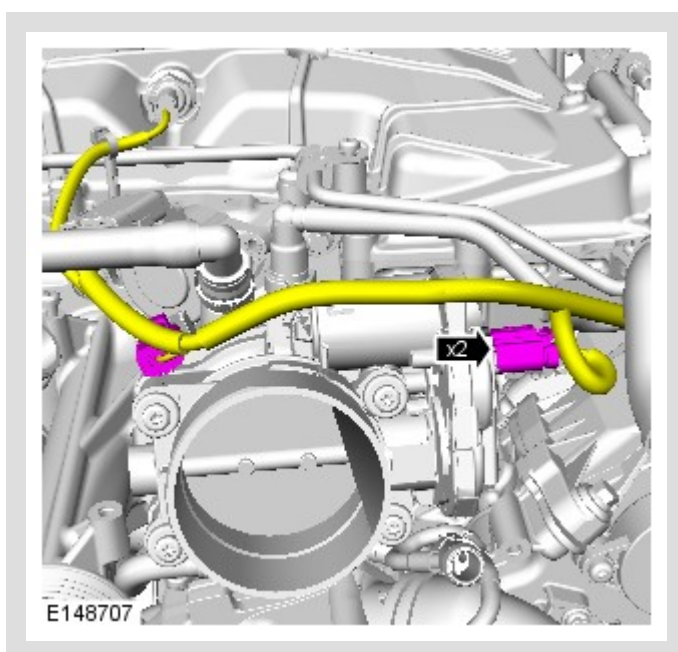

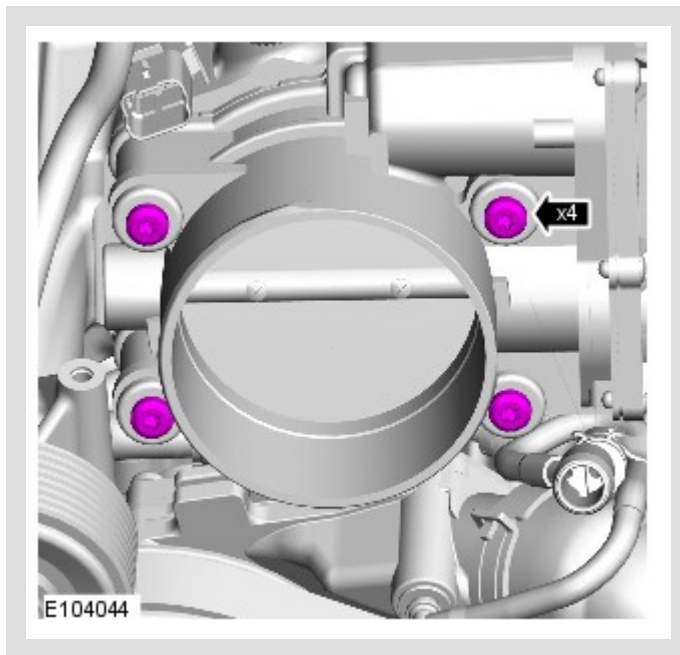


Torque: 10 Nm

10.

ⓘ CAUTIONS:

- Do not attempt to clean the throttle body bore, build up of deposits reduces air leakage past the throttle plate at the fully closed position.
- Take extra care when removing the throttle body, failure to follow this instruction may result in damage to the manifold absolute pressure (MAP) sensor.

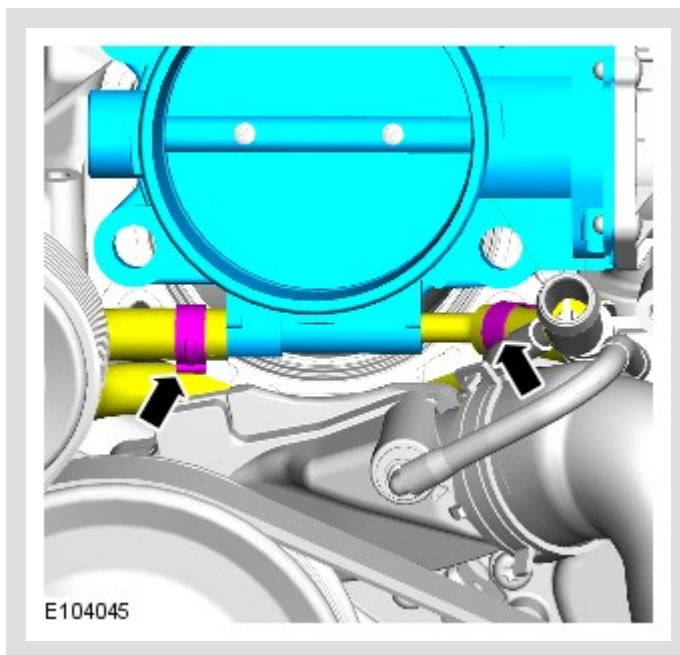

- Remove and discard the gasket.
- Install a new gasket.
*Renew Part: **Throttle body gasket** Quantity: 1 .*
- Clean the components mating faces.

INSTALLATION

1. To install, reverse the removal procedure.
2. Using the approved diagnostic equipment, clear the powertrain control module (PCM) adaptations.