

PUBLISHED: 28-APR-2017
2014.0 RANGE ROVER (LG), 303-12

INTAKE AIR DISTRIBUTION AND FILTERING - V8 S/C 5.0L PETROL

SUPERCHARGER (G1509545)

REMOVAL AND INSTALLATION

19.46.15	SUPERCHARGER ASSEMBLY - RENEW	5000 CC, AJ V8, SUPERCHARGED	4.2	USED WITHINS	
----------	-------------------------------------	------------------------------------	-----	-----------------	--

SPECIAL TOOL(S)

--



303-1449-01

Supercharger Installation
Guide Pins - Threaded



303-1449-02

Supercharger Installation
Guide Pins - Unthreaded

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 6	Supercharger to cylinder head gaskets	1

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

Refer to: Charge Air Cooler (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

4.

Refer to: Throttle Body (303-04 Fuel Charging and Controls - V8 S/C 5.0L Petrol, Removal and Installation).


5.

Refer to: Supercharger Belt (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).


6.

Refer to: Manifold Absolute Pressure Sensor (303-14 Electronic Engine Controls - V8 S/C 5.0L Petrol, Removal and Installation).


7.

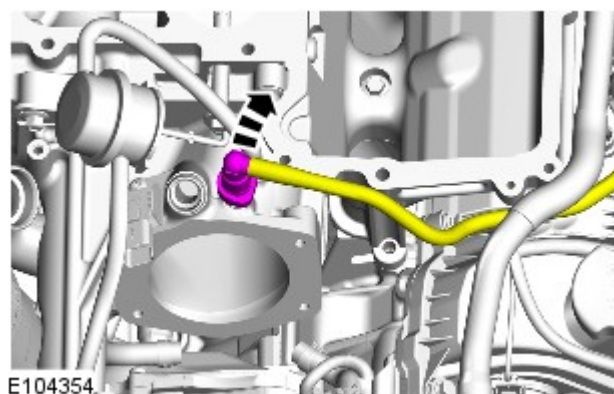


8.

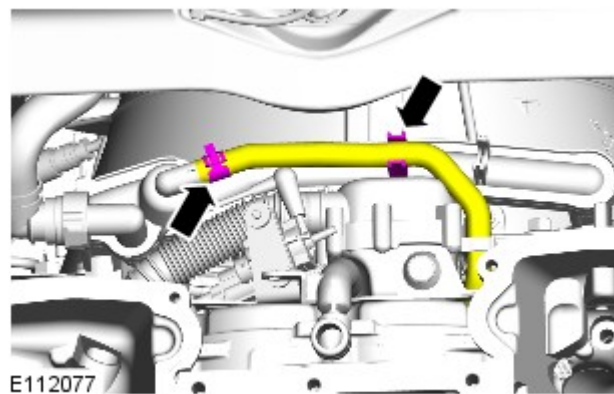

9.

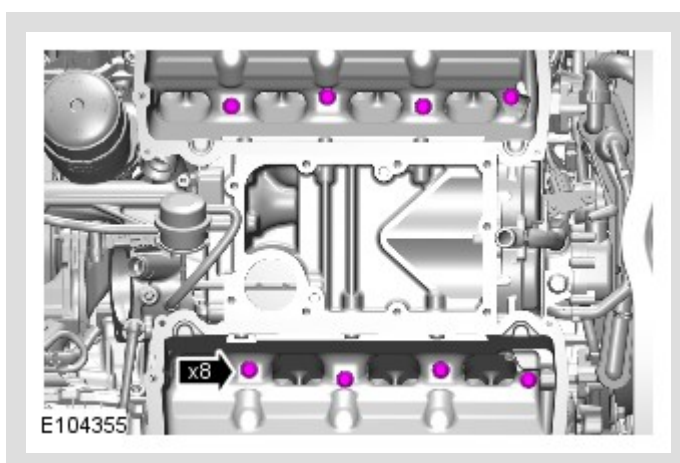

10.

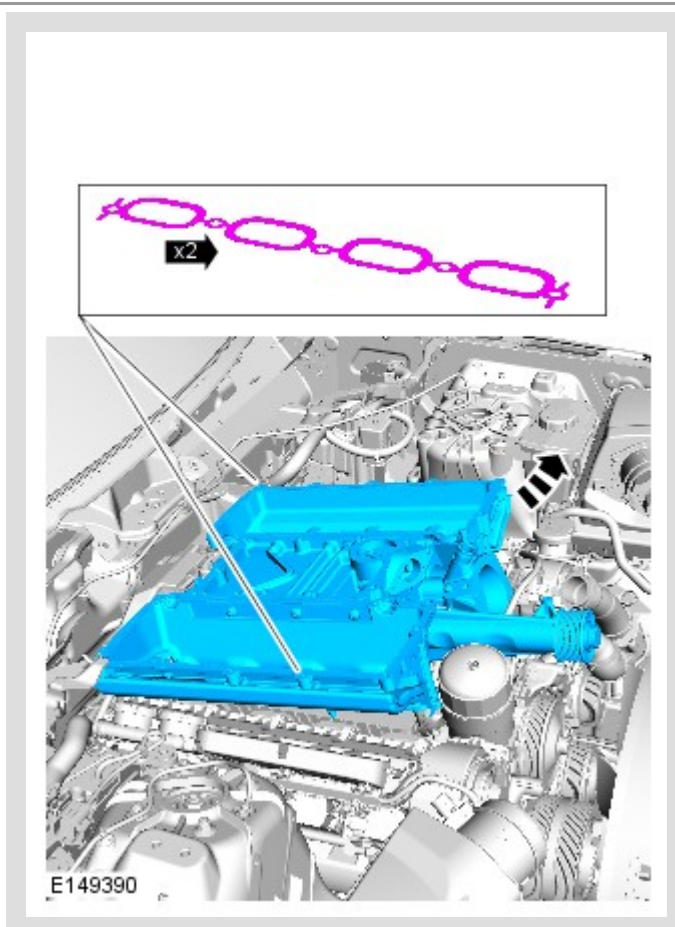


- Discard the gaskets.


11.

 NOTE:


Do not disassemble further if the component is removed for access only.

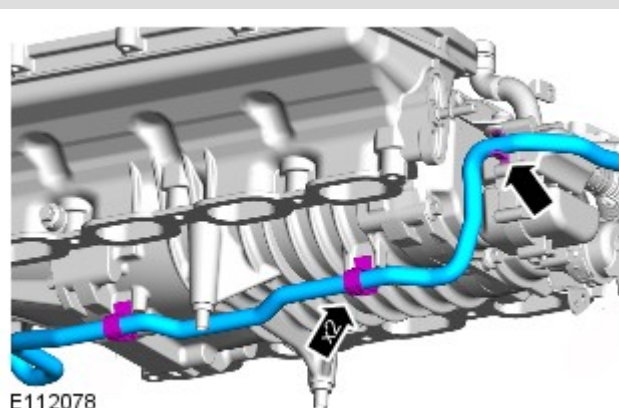


12.

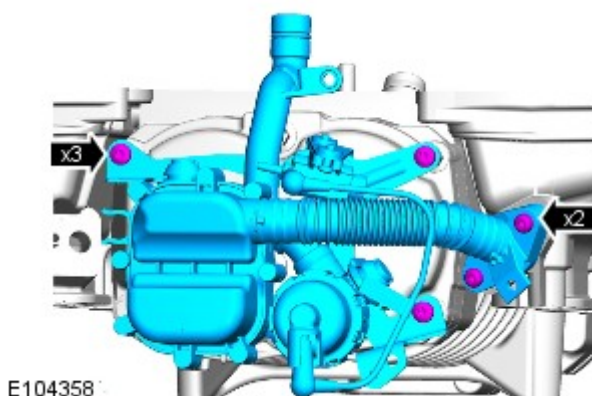

13.

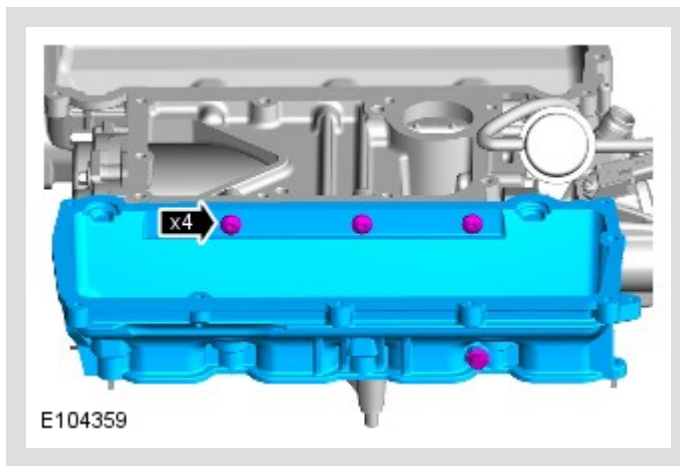


14.

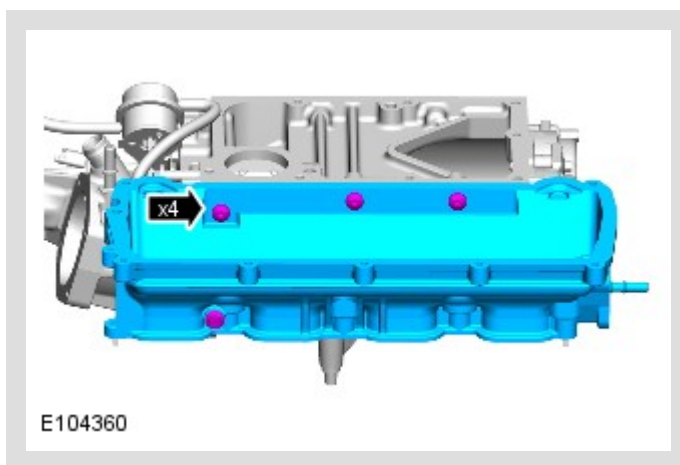


INSTALLATION

1.

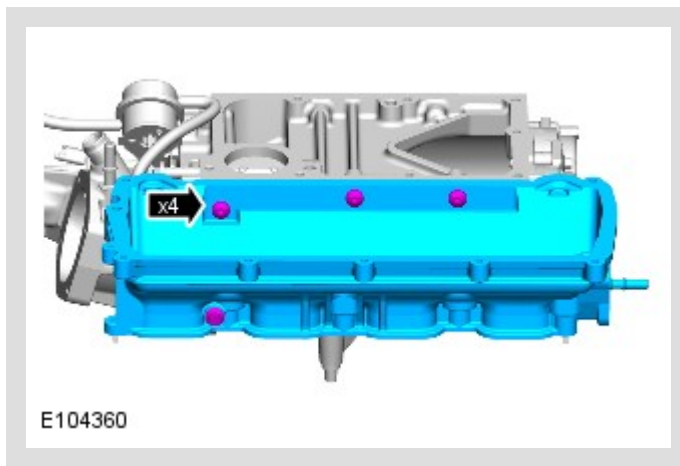


Torque: 25 Nm

2.

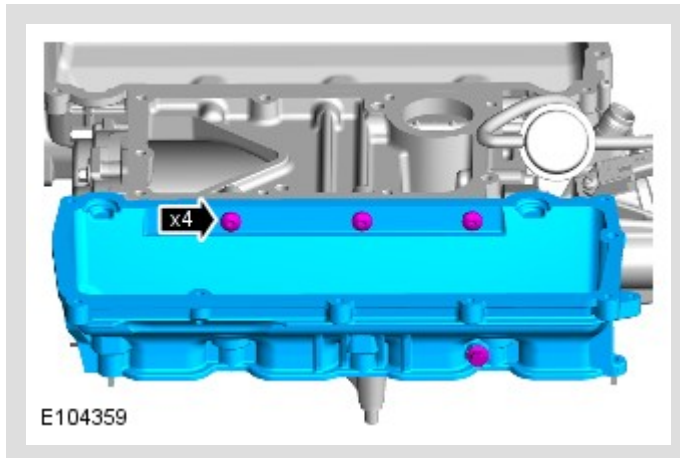


Torque: 25 Nm

3.

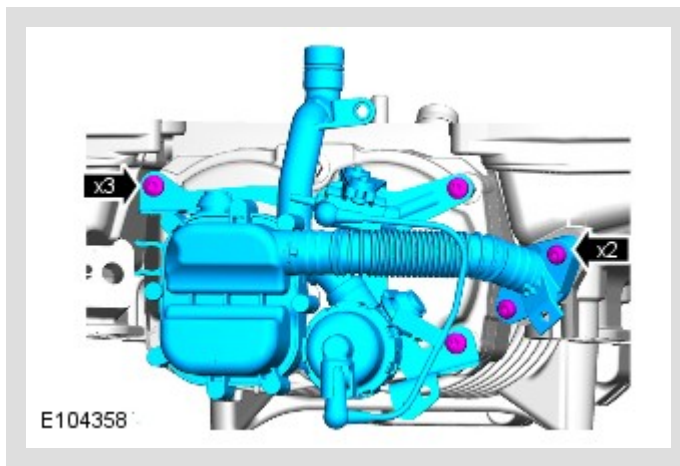

Torque: 10 Nm

4.

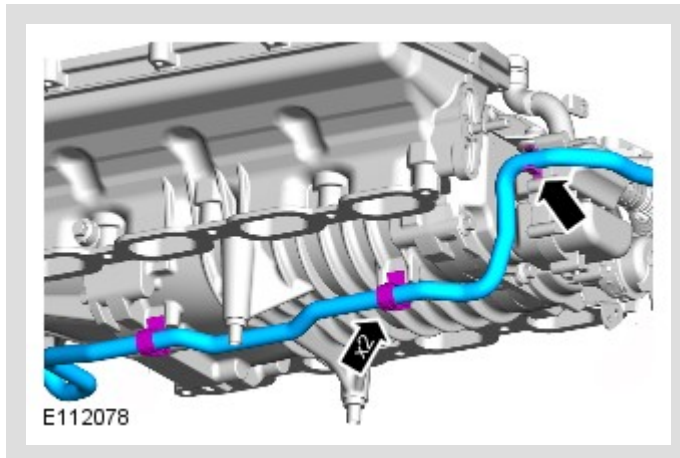

5.




CAUTIONS:

- If a new cylinder head has been installed then the special tool 303-1449-02 without the thread must be used to install the supercharger.
- If a new cylinder head has been installed, then new tapite bolts must be used to install the supercharger.



NOTE:

New taptite bolts when used cut their own threads on the first application.

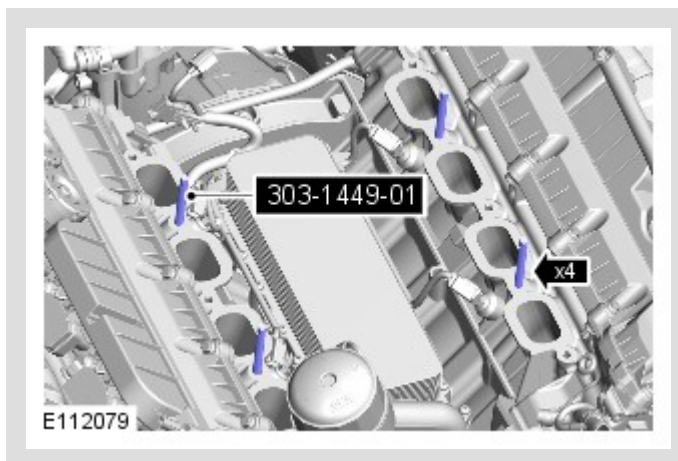


- *Special Tool(s):* [303-1449-01](#)
- *Special Tool(s):* [303-1449-02](#)

6.



CAUTION:

Make sure that the mating faces are clean and free of foreign material.

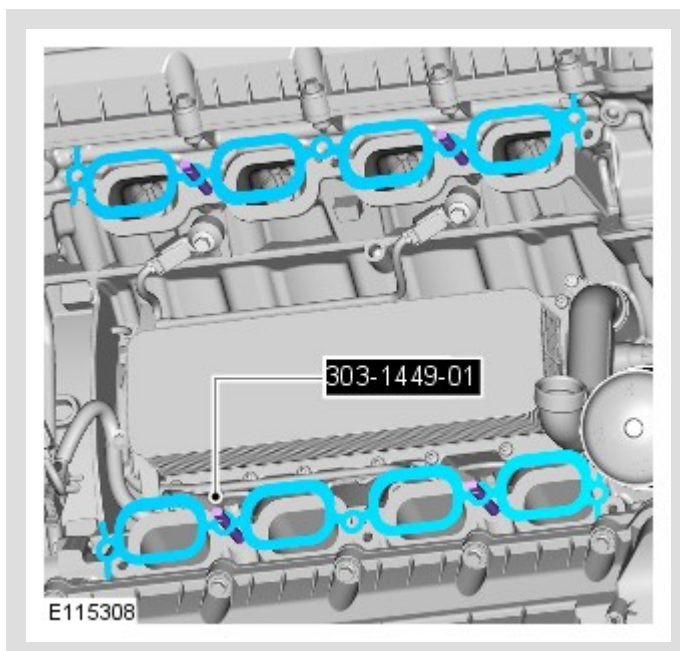

- Install new gaskets.

Renew Part: [Supercharger to cylinder head gaskets](#) Quantity: 1 .

7.

⚠ CAUTION:

Make sure that the mating faces are clean and free of foreign material.




8.

⚠ CAUTION:

If a new cylinder head has been installed then the special tool 303-1449-02 without the thread must be used to install the supercharger.

 NOTE:

Left-hand shown, right-hand similar.

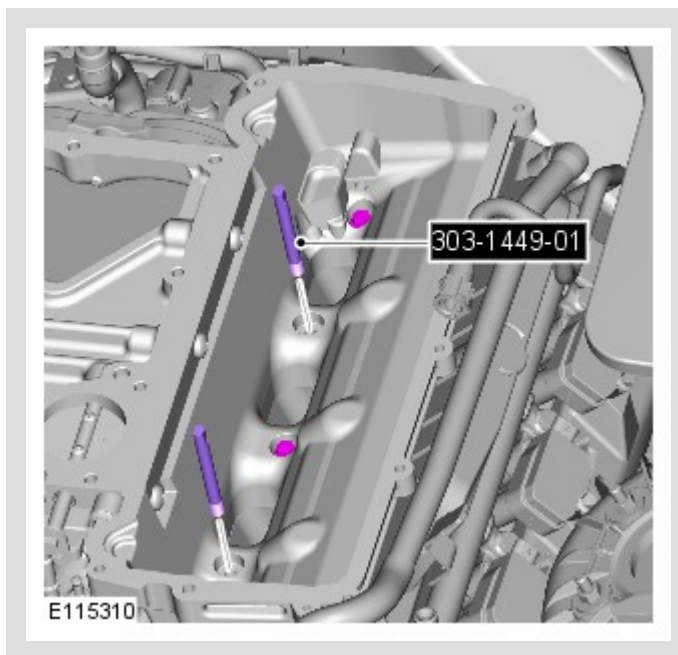


Torque: 25 Nm

9.


 NOTE:

Left-hand shown, right-hand similar.

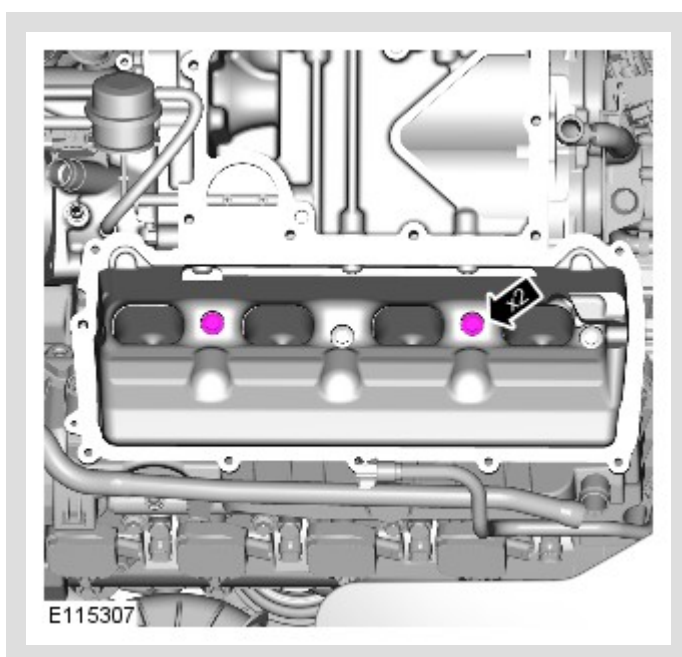


Torque: 25 Nm

10.

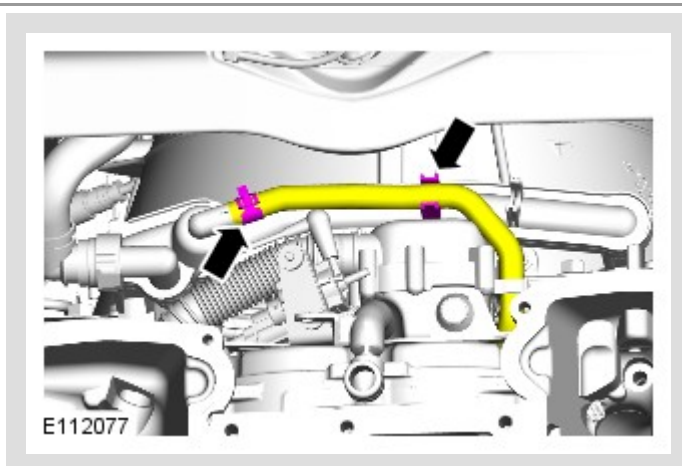

11.

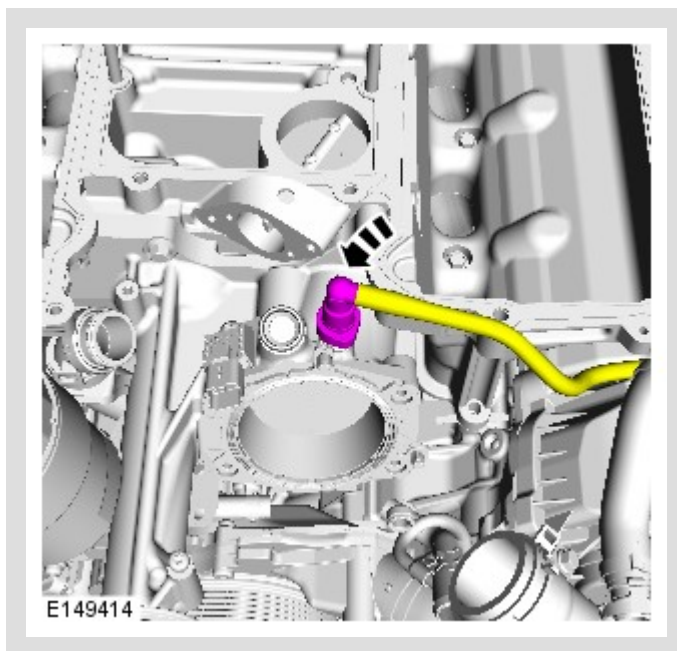

-
12. Refer to: Manifold Absolute Pressure Sensor (303-14 Electronic Engine Controls - V8 S/C 5.0L Petrol, Removal and Installation).
-
13. Refer to: Supercharger Belt (303-05 Accessory Drive - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol, Removal and Installation).
-
14. Refer to: Throttle Body (303-04 Fuel Charging and Controls - V8 S/C 5.0L Petrol, Removal and Installation).
-
15. Refer to: Charge Air Cooler (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).
-
16. Connect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

