

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: SINGLE SPEED TRANSFER CASE

TRANSFER CASE DIFFERENTIAL (G1614710)

REMOVAL AND INSTALLATION

REMOVAL

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).

4. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Removal).

Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Removal).


5.

WARNING:

Eye protection must be worn.

CAUTION:


Make sure the bolt holes are clean and free of swarf.

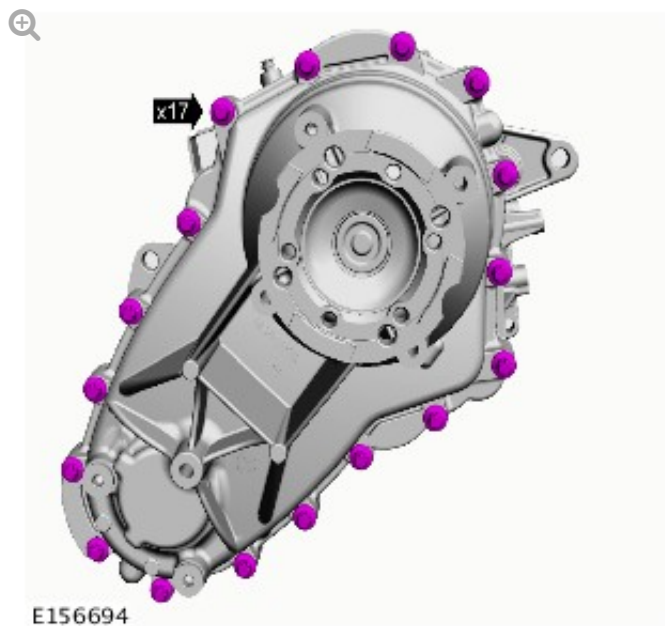

6.

CAUTION:


Care must be taken to avoid damage to the mating surfaces.

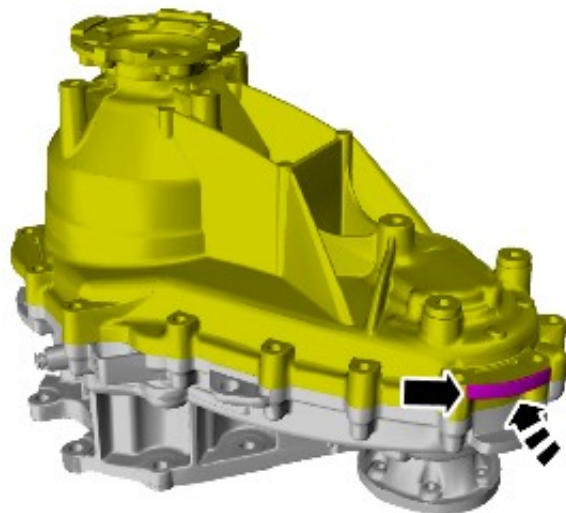

E156613

Using a soft faced mallet, release the rear casing.

7.

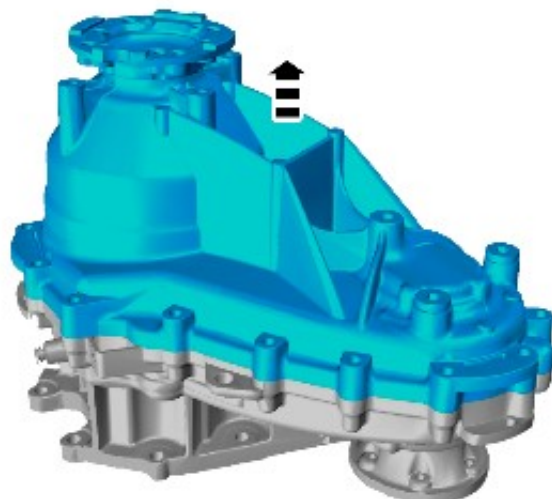

E156614

8.

CAUTION:


Make sure that the mating faces are clean and free of foreign material.

Remove the sealant from the transfer case mating faces.

9.

CAUTION:


Note the fitted position of the component prior to removal.

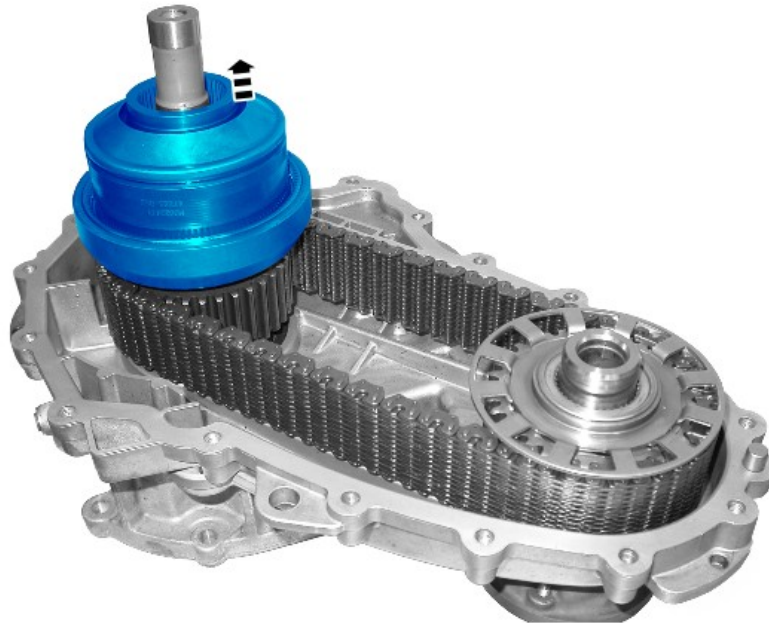

E156773


INSTALLATION

1.

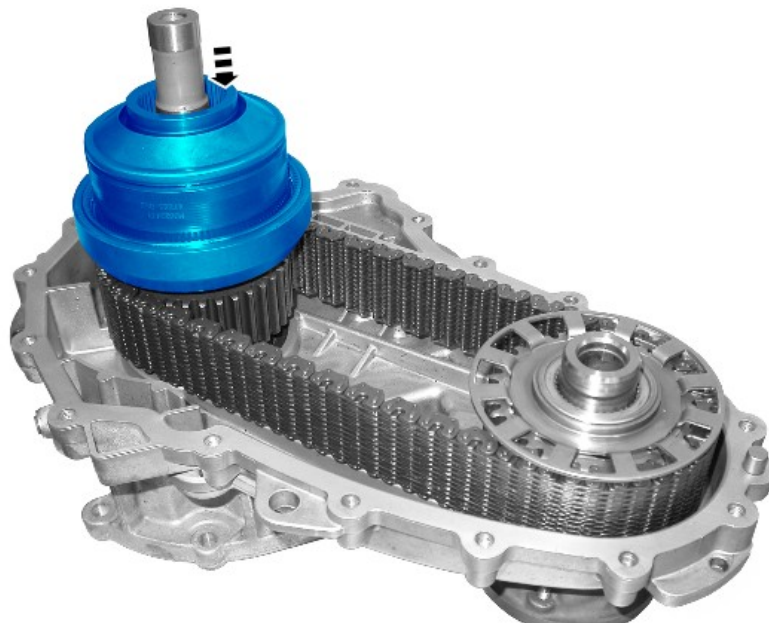

E156807


2.

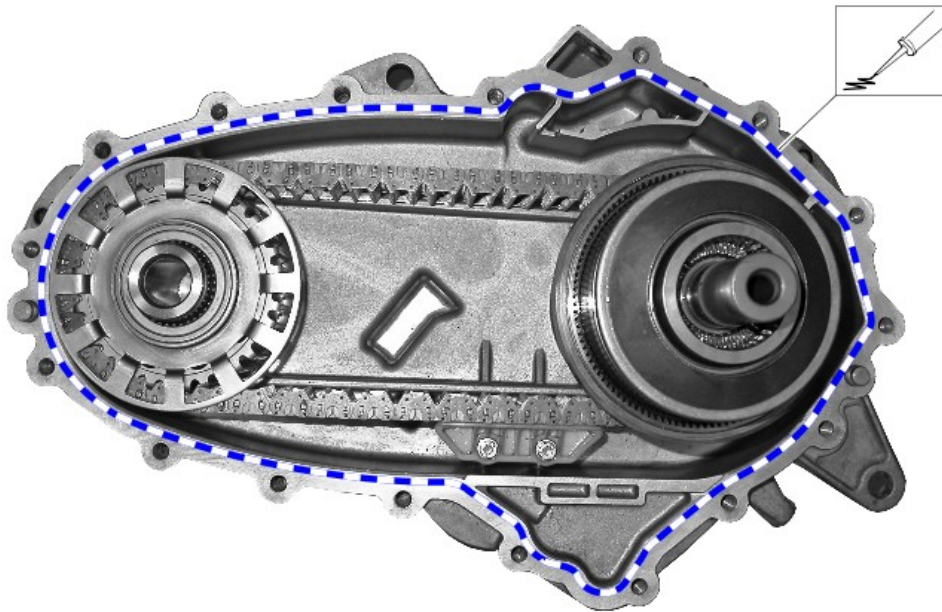

E156774

Apply a 2 mm bead of sealant to one surface of the transfer case mating face, as shown.

3.

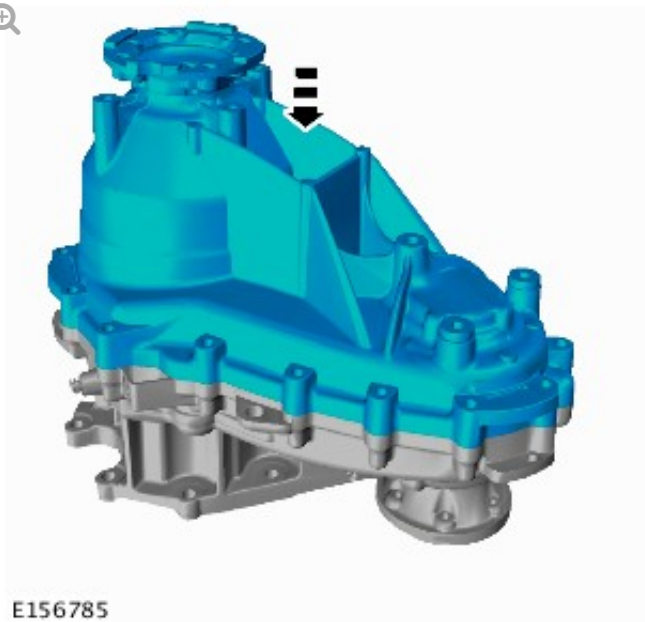


E156785


4.

CAUTION:

Only tighten the bolts finger-tight at this stage.

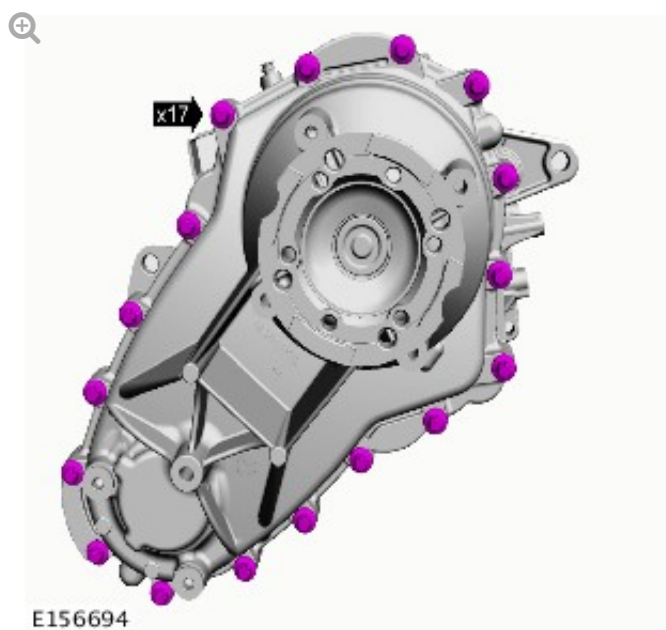


5.

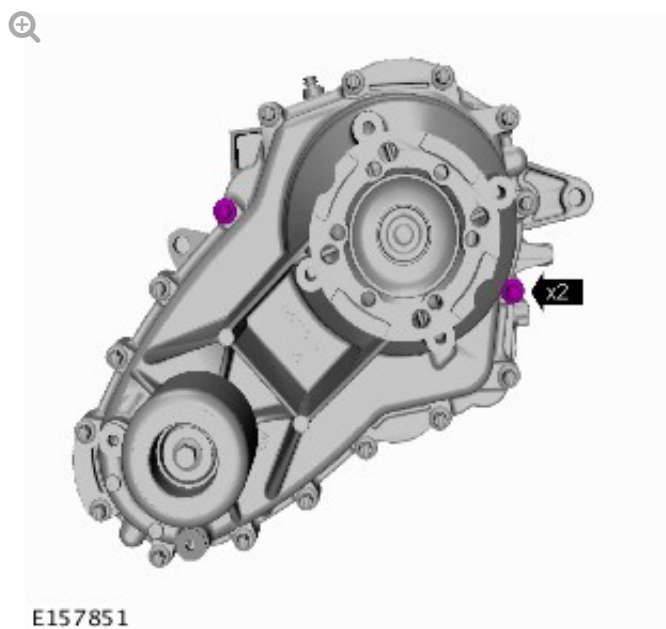

Torque: 10 Nm

6.

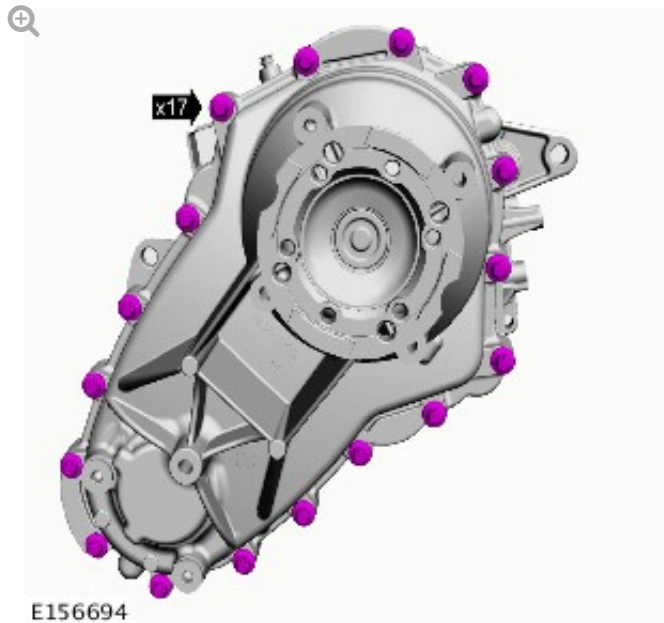

Torque: 35 Nm

7. Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Installation).
Refer to: [Transfer Case - GTDi 2.0L Petrol](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, Installation).
8. Refer to: [Transfer Case Draining and Filling](#) (308-07B Transfer Case - Vehicles With: Single Speed Transfer Case, General Procedures).
9. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).