

2016.0 RANGE ROVER (LG), 308-07

TRANSFER CASE - VEHICLES WITH: TWIN SPEED TRANSFER CASE


TRANSFER CASE CHAIN (G1573735)

REMOVAL AND INSTALLATION

REMOVAL

1. Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).
2. Refer to: [Transfer Case - TDV6 3.0L Diesel](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Removal).
Refer to: [Transfer Case - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Removal).
Refer to: [Transfer Case - TDV8 4.4L Diesel](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Removal).
Refer to: [Transfer Case - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Removal).
3. With assistance, secure the transfer case with it's transmission mating face down on a flat surface.

4.

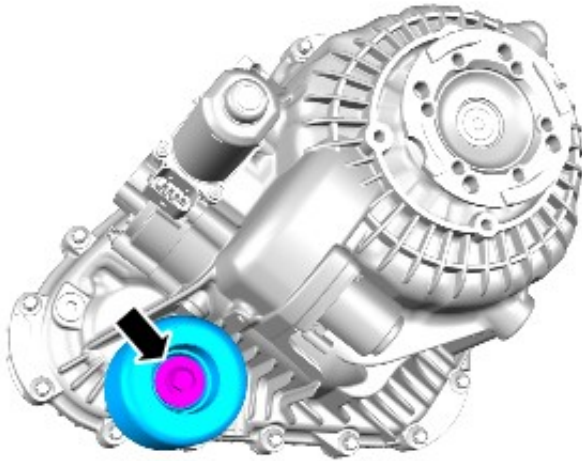

E159189

5.

WARNING:

Eye protection must be worn.

CAUTION:

Make sure the bolt holes are clean and free from swarf.



6.

WARNING:

Eye protection must be worn.

CAUTION:

Make sure the bolt holes are clean and free from swarf.



E159191

7.

CAUTION:



Care must be taken when turning the transfer case over. The transfer case halves must not be allowed to separate.

With assistance, release the transfer case and secure with the rear face of the transfer case facing down on a flat surface.

8.

CAUTION:

Care must be taken to avoid damaging the mating surfaces.

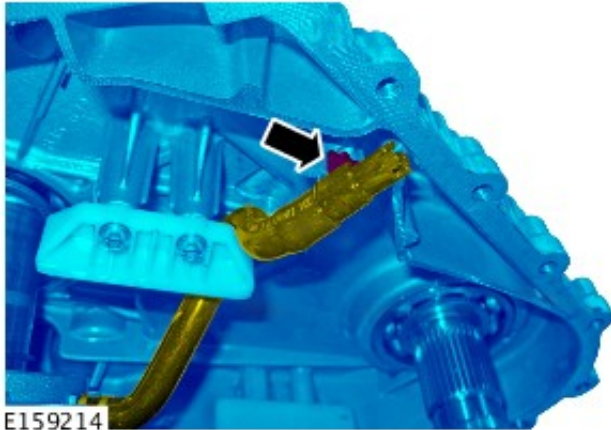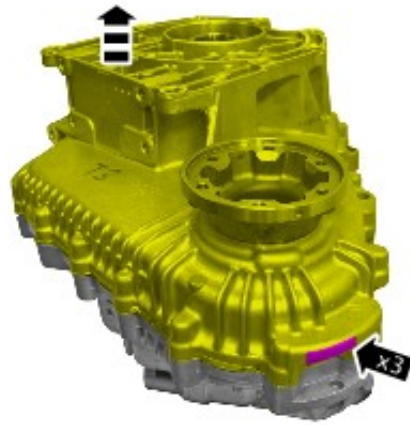

Using a soft faced mallet, release the front casing.


9.



10.

CAUTION:

The shaft may be tight on the bearing. Care must be taken when removing the component.

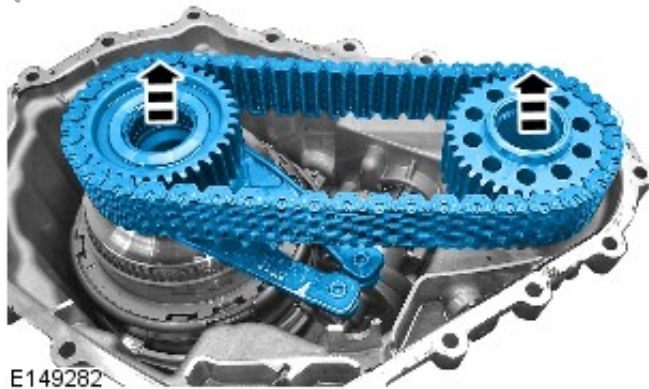


INSTALLATION

1.

CAUTION:


Make sure that the front driveshaft gear bearing is fully seated before installing the new chain and gear.

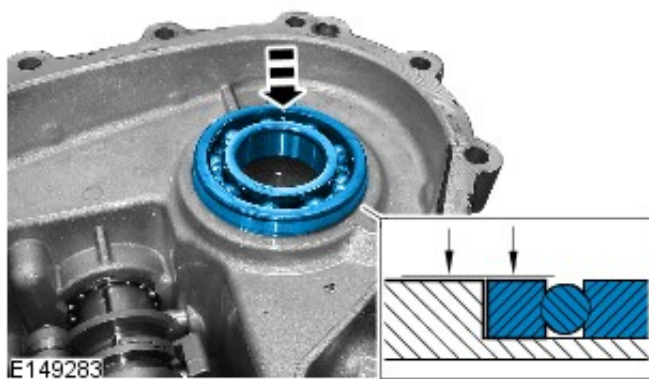

2.

CAUTION:

Make sure that the clutch assembly is correctly located as illustrated.

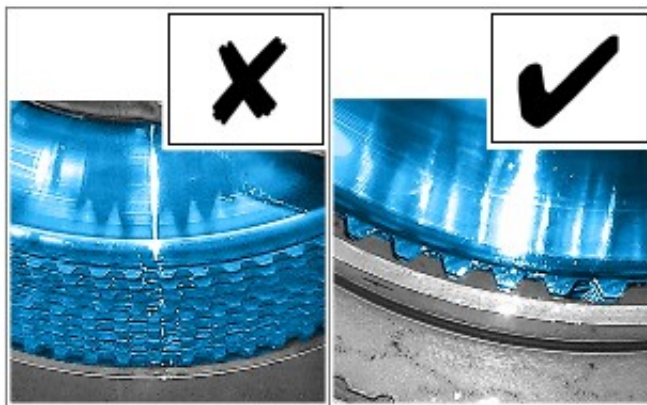


E 149289

3.

CAUTION:


Make sure that the clutch assembly is correctly located as illustrated.

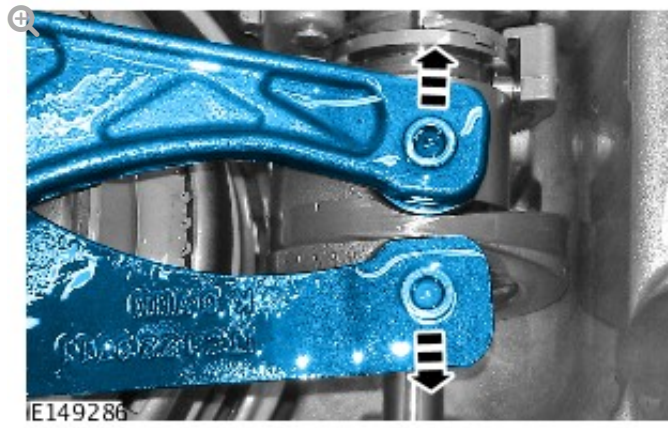


4.

CAUTION:

Make sure that the chain is installed with the chain link facing down.

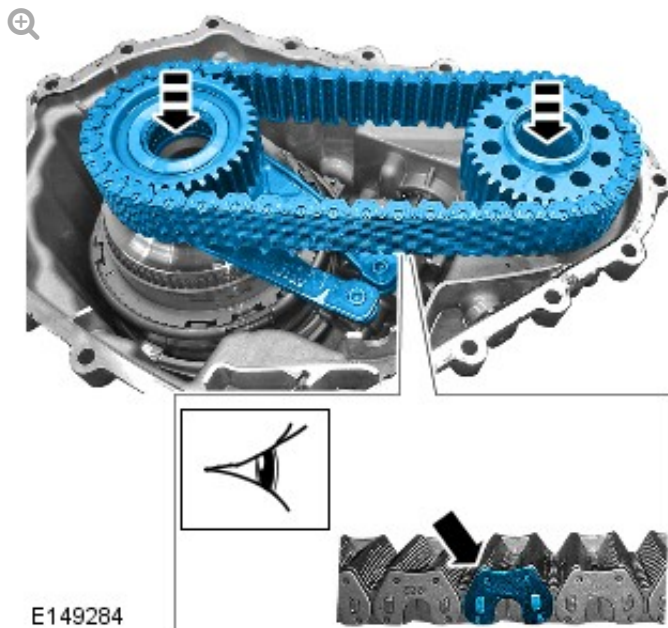

5.

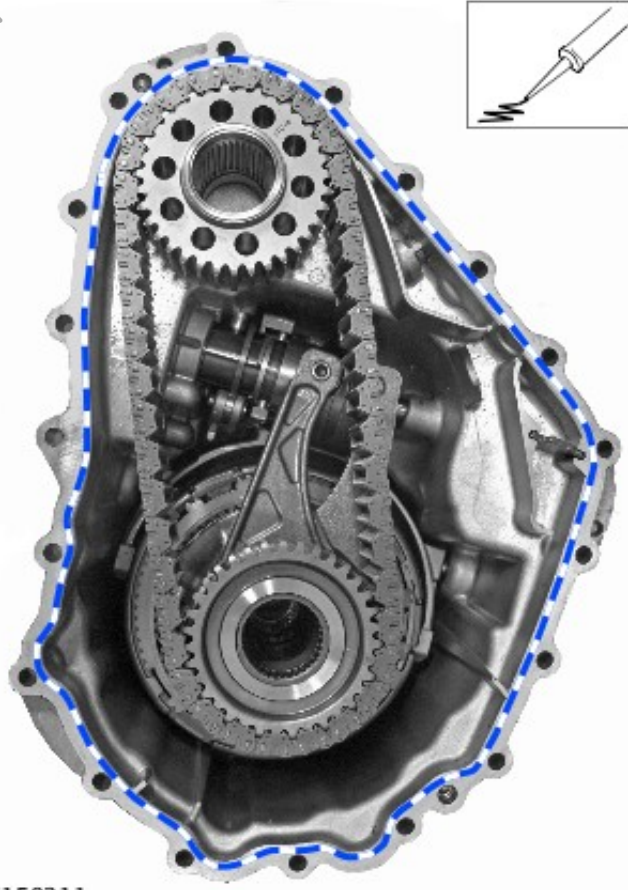


E159211

Apply a 2mm bead of sealant to one surface of the transfer case mating faces, as shown.

6.

CAUTIONS:

- Make sure that the input shaft spacer is correctly located.
- The input shaft and fluid pump assembly must be supported and held in place by hand, until it is located securely into the clutch assembly.

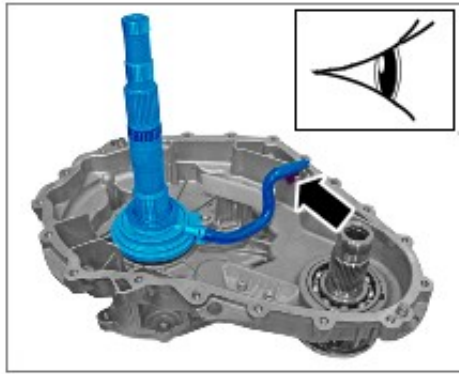

E159212

Install the front half of the case.

7.

CAUTION:

Care must be taken when turning the transfer case over. The transfer case halves must not be allowed to separate.

With assistance, release the transfer case and secure with it's transmission mating face down on a flat surface.

8.

CAUTION:

Only tighten the bolts finger-tight at this stage.



E159191

9.



E159409

Torque: 10 Nm

10.



E159191


Torque: 35 Nm

11.



E159190

Torque: 35 Nm

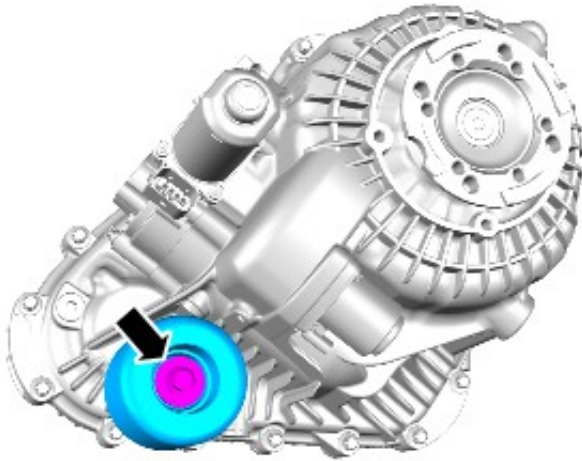

E159189

Torque: 75 Nm

13. Refer to: [Transfer Case - TDV6 3.0L Diesel](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Installation).
Refer to: [Transfer Case - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Installation).
Refer to: [Transfer Case - TDV8 4.4L Diesel](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Installation).
Refer to: [Transfer Case - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, Installation).
14. Refer to: [Transfer Case Draining and Filling](#) (308-07C Transfer Case - Vehicles With: Twin Speed Transfer Case, General Procedures).