



TECHNICAL SERVICE BULLETIN

Liftgate Mounted Rear Lamp - Child Part Service Procedure

26-2111

15 June 2026

Model:

Ford 2021-2026 Next-Generation Everest
--

Issue: Dealers are advised that when replacing the liftgate mounted rear lamp on 2021-2026 Next-Generation Everest vehicles for the following concerns (see below), to ensure the most economical service part replacement is performed. Applicable to the following concerns:

- Lamp lens cracked
- Lamp condensation
- Lamp inoperable

This TSB refers to service part availability and procedures for replacing the liftgate mounted rear lamp, less the electrical components.

Action: Should a vehicle present with one of the above concerns, Technicians are advised to refer to the Service Information below.

Parts

Service Part Number	Claim Quantity	Package Order Quantity	Description
13404	1	1	Liftgate Mounted Rear Lamp- See Parts Catalog For Application

Labor Times

Description	Operation No.	Time
Remove and Install the liftgate mounted rear lamp from the vehicle as per the provided service procedure	262111A	0.6 Hrs.

Repair/Claim Coding

Causal Part:	13404
Condition Code:	12

PDR Table

NOTE: When creating the warranty claim, please select manually the parts used for the specific vehicle repair.

PDR Code	Description	Time
TSB262111	Remove and Install the liftgate mounted rear lamp from the vehicle as per the provided service procedure	0.6 Hrs.

Liftgate Mounted Rear Lamp Removal

1. Remove the liftgate mounted rear lamp (Figure 1) from the vehicle. Refer to Workshop Manual (WSM) Section 417-01.

Figure 1




E466584

Liftgate Mounted Rear Lamp Disassembly

1. Remove the components from the lamp in the following order (Figure 2). Refer to Steps 2 to 5 below.

Figure 2

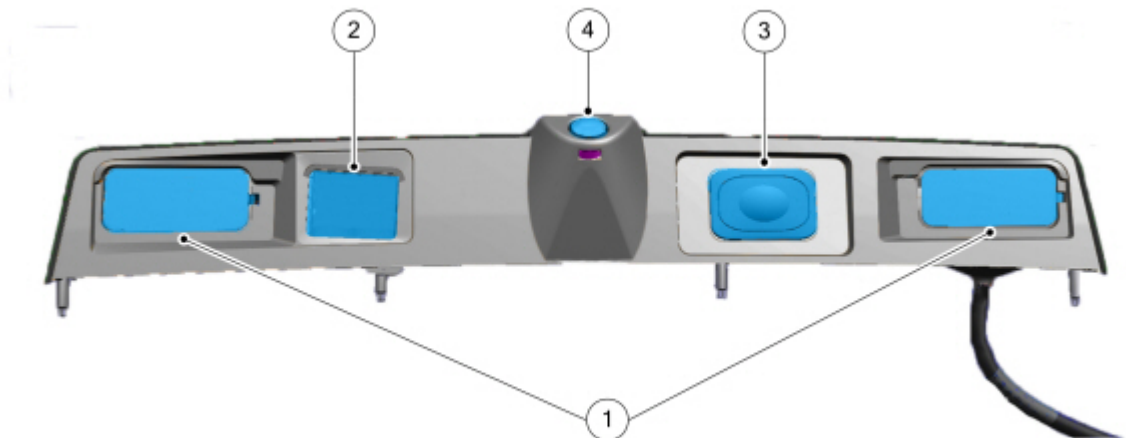

E466585

Item	Description
1.	Licence plate lamps
2.	Trailer Backup Assist (TBA)
3.	Liftgate switch
4.	Rear parking aid camera

2. Remove the licence plate lamps. Refer to WSM Section 417-01 .

3. Remove the Trailer Backup Assist (TBA).

(1). Remove the two fixings and remove the TBA housing. (Figure 3)

(2). Disconnect the connector from the TBA housing. (Figure 4)

(3). Remove the wiring harness from the TBA bracket. (Figure 5)

Figure 3

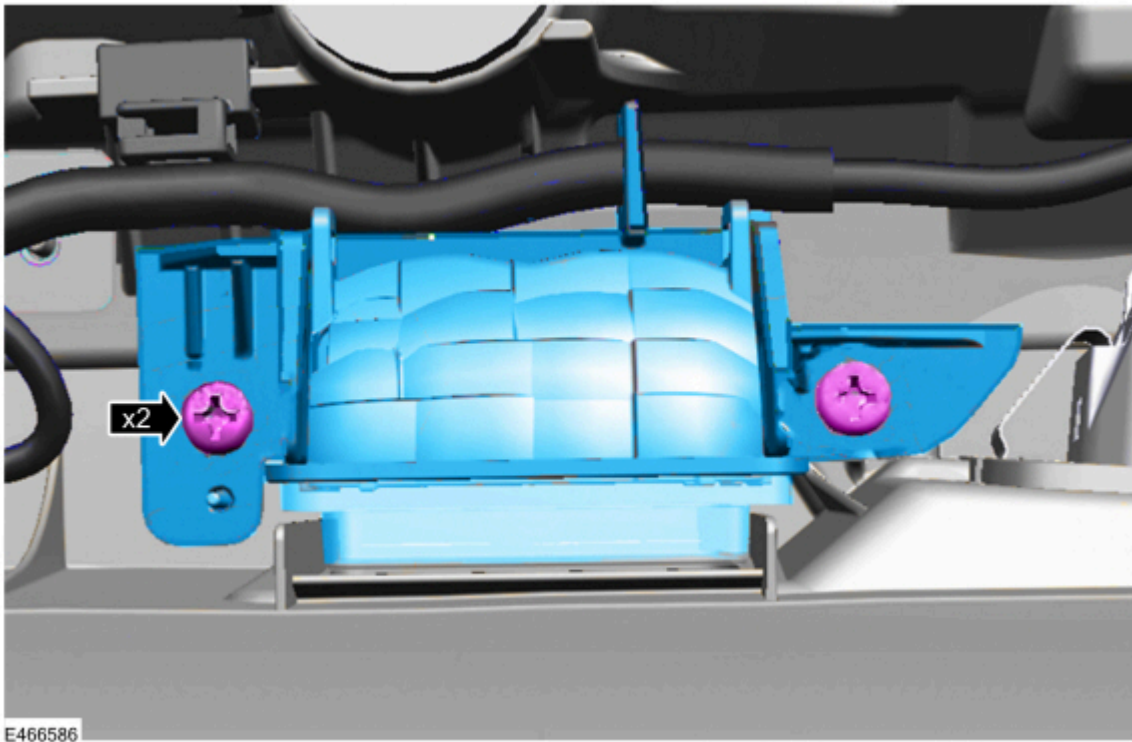


Figure 4


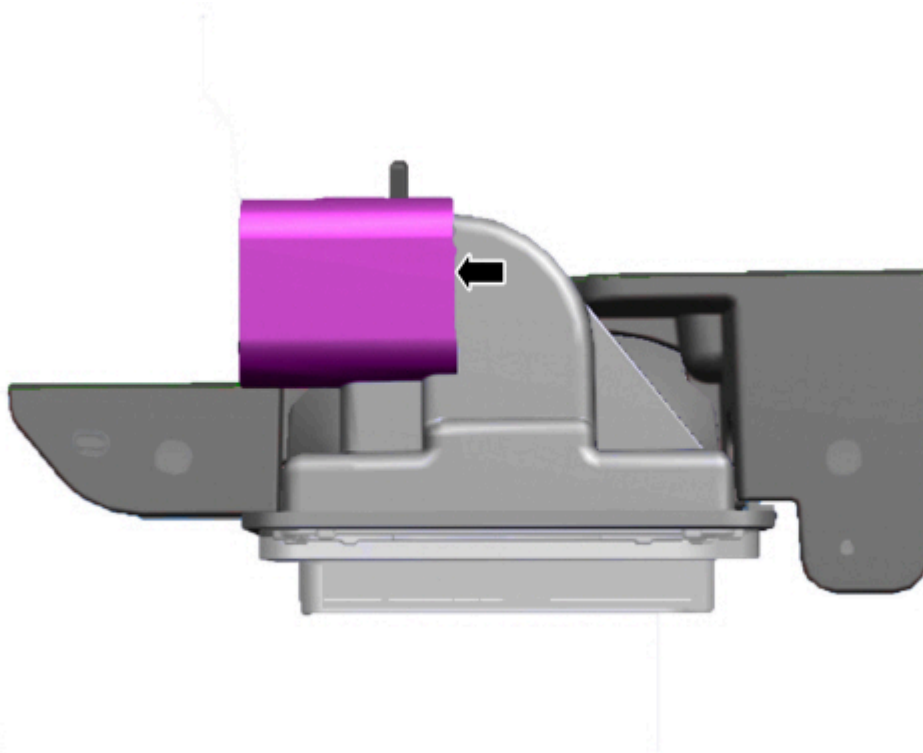



Figure 5

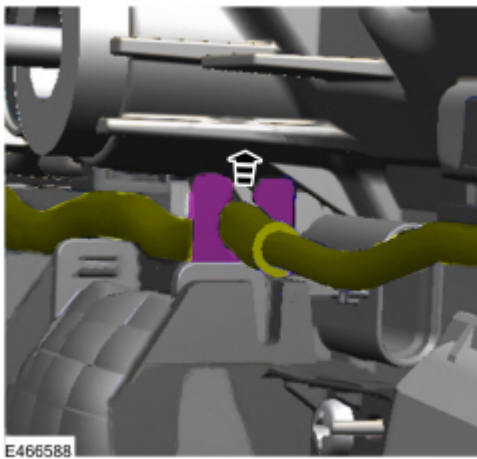

4. Remove the liftgate switch.

- (1). Depress the clips on both sides, rotate and remove the liftgate switch. (Figure 6)
- (2). Disconnect the connector. (Figure 6)

Figure 6

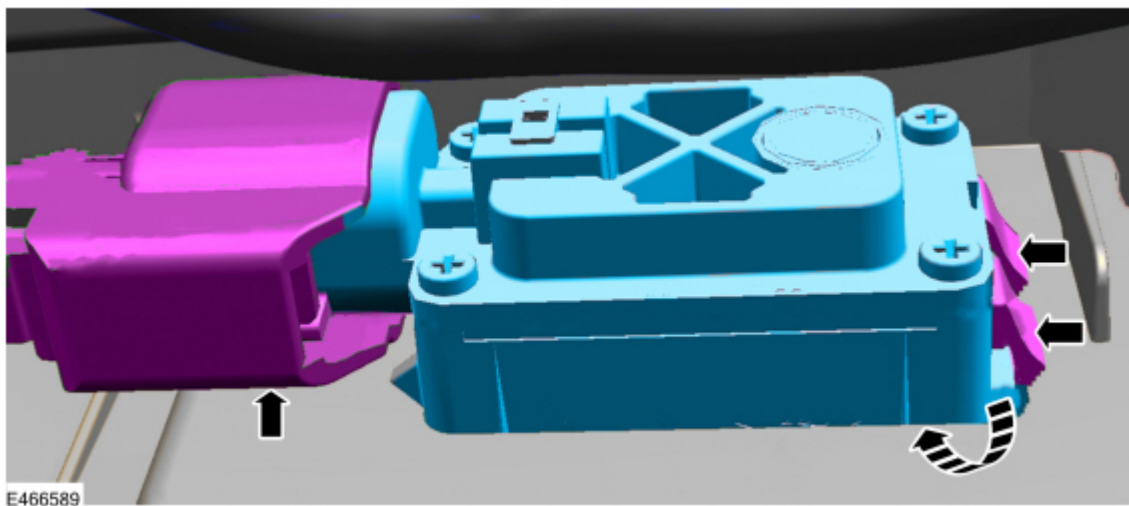


5. Remove the rear parking aid camera. Refer to WSM Section 413-13B.

Liftgate Mounted Rear Lamp Assembly and Installation

1. Place the new liftgate mounted rear lamp on a workbench ensuring the plastic wrap remains on to ensure no scratches occur.
2. Install the components into the liftgate mounted rear lamp in the following order (Figure 7). Refer to Steps 3 to 6 below.

Figure 2

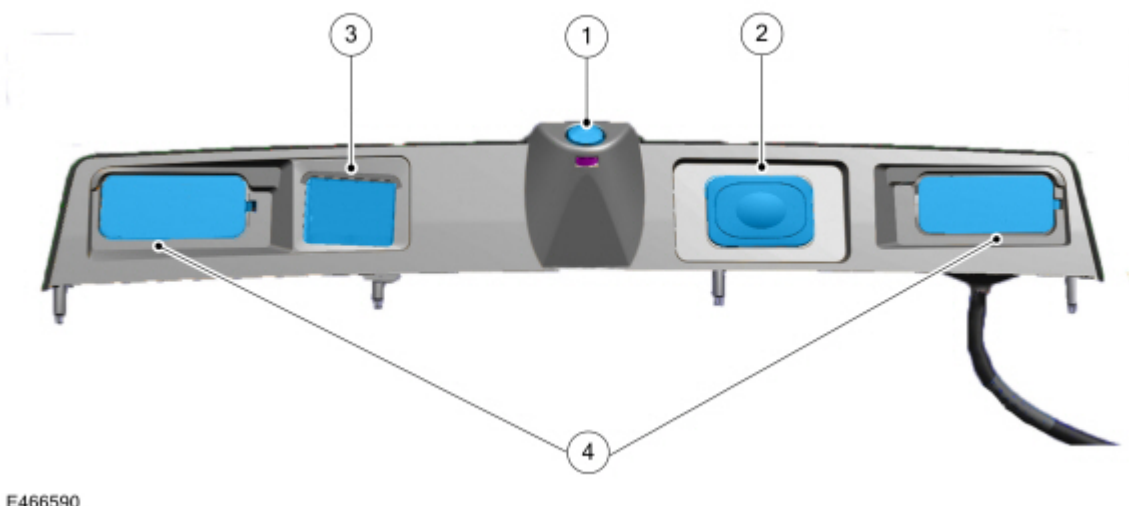

Item	Description
1.	Rear parking aid camera
2.	Liftgate switch
3.	Trailer Backup Assist (TBA)
4.	Licence plate lamps

3. Install the rear parking aid camera. Refer to WSM Section 413-13B.

(1). Torque the rear parking aid camera fixings to 0.6 Nm.




CAUTION: Use care when handling the wiring harness and camera coaxial cable that are removed and reinstalled to the new reversing lamp assembly.

- Avoid sharp bends, kinks, or pinches that may damage the coaxial cable. Keep all curves gradual - no tighter than the width of two fingers (0.6 inches or 15 mm bend radius).
- Route all wiring exactly as it was on the original lamp.

4. Install the liftgate switch.

(1). Plug in the connector and rotate into position, ensuring the switch is clipped home. (Figure 8)

Figure 8

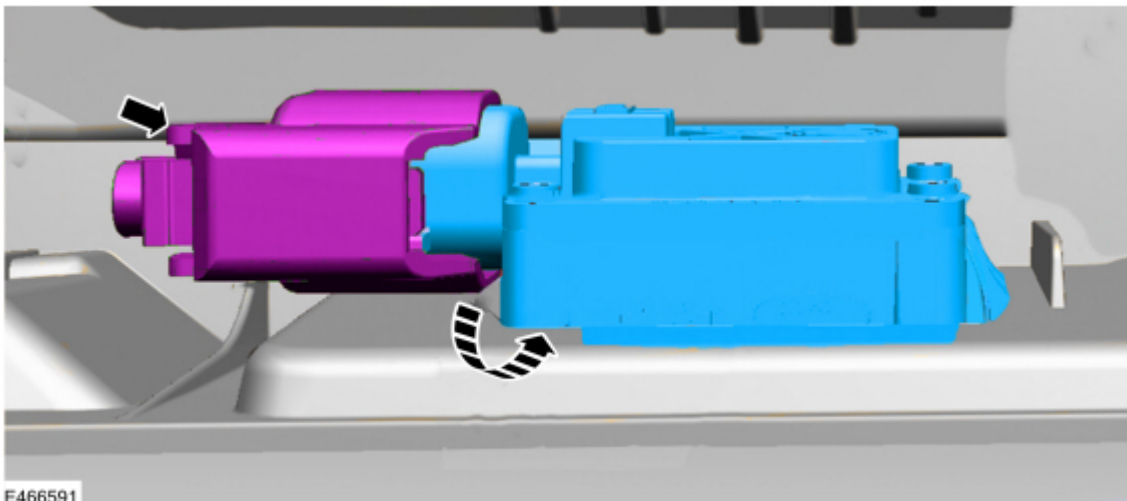


5. Install the TBA.

(1). Fit the connector to the TBA and insert the cable into the TBA bracket. (Figure 9 and 10)


(2). Place the TBA back into housing and torque the screws to 0.6 Nm. (Figure 11)

Figure 9

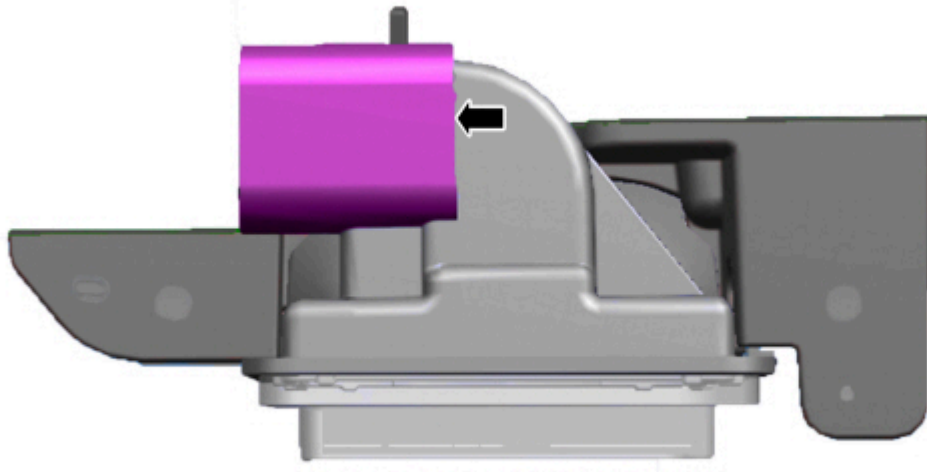


E466587

Figure 10

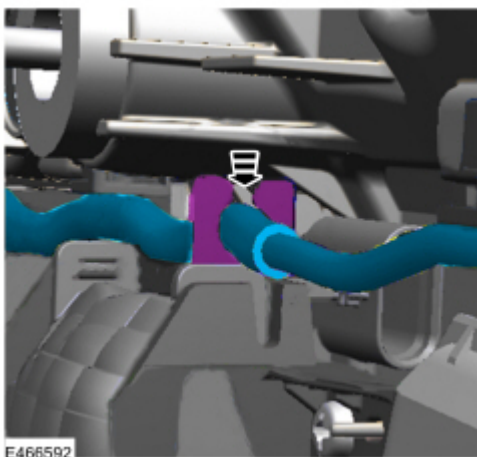

E466592

Figure 11

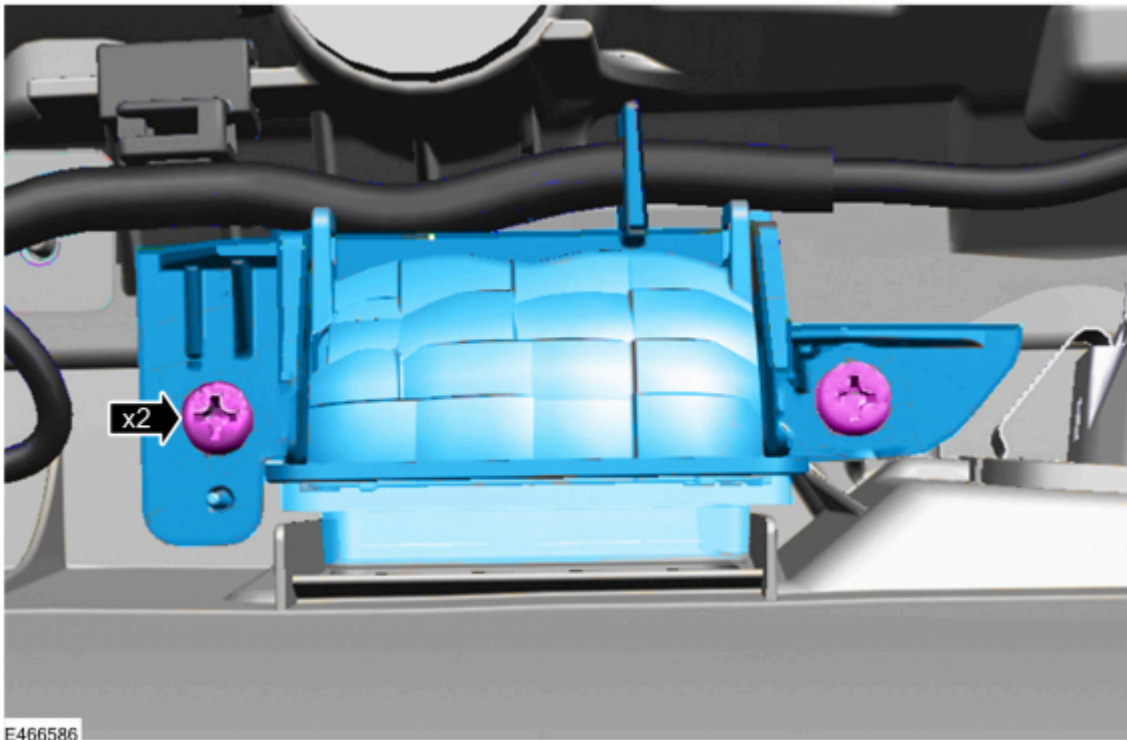

E466586

6. Install the licence plate lamps. Refer to WSM Section 417-01.

7. Remove the plastic wrap and install the liftgate mounted rear lamp. Refer to WSM Section 417-01.

NOTE: Ensure to follow the Installation steps as per the WSM to include a Parking Aid Camera Initialization (vehicles with analog cameras) or 360 Degree View Camera Alignment (vehicles with 360° cameras) as required.

© 2026 Ford Motor Company

All rights reserved.

This bulletin represents technical service information only. Without exception all gratis repairs and replacements are subject to the individual warranty and policy procedures of the supervisory Ford Company. The illustrations, technical information, data and descriptive text in this issue, to the best of our knowledge, were correct at the time of publication.