

GENERAL SERVICE BULLETIN

Front bumper beam rework instruction

24-7057

24 May 2024

This bulletin supersedes 20-7020. Only refer to the electronic version of this GSB. Reason for update: The <Model> section has been extended.

Model:

Puma	Year: 2020-2024 Assembly Plant: Craiova
Transit Courier/Tourneo Courier	Year: 2023-2024 Assembly Plant: Craiova

Markets: All European markets

Summary

Due to unique spare part delivery, front bumper beams for 2020 Puma and 2023 Transit/Tourneo Courier are not available with cut-outs to fix the front bumper correctly. When the front bumper is renewed, it is necessary to cut the affected areas until the correct service part is available.

This General Service Bulletin describes how to rework the bumper beam.

Labor Times

Description	Operation No.
Additional Labor Time For Front Bumper Beam Rework (0.7 hour)	770201N20


General Equipment	Source of supply
Drill: 8, 12, 16 and 18 mm	Commercially available
Drilling machine with 16 mm drill chuck	
Grinder	
File and/or deburr	

Service Information

Front bumper beam - Rework


For Warranty information and guidance related to this document and it's contents, please refer to the relevant Warranty Manual and Warranty Bulletins applicable to your market. If further Warranty support is required, please contact your local market Warranty team.

1. Prepare and make the cut-outs of the lower attachment.
 - Mark the affected area on the lower attachment using a scribe.
 - Use a grinder to cut-out the affected area.
 - Drill the present hole on a diameter of 12 mm.
 - Use a suitable tool, deburr the cut-outs.
 - Use compressed air, carefully remove the drilling chips.

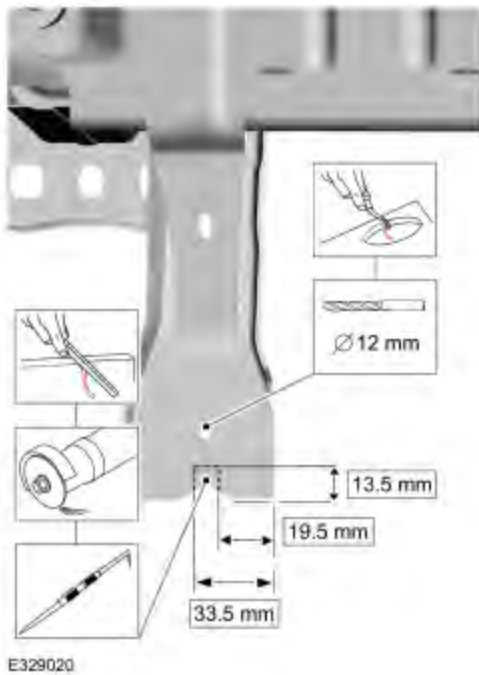


2. Prepare the cut-outs of the upper attachment.

- Mark the affected area on the upper attachment using a scribe.

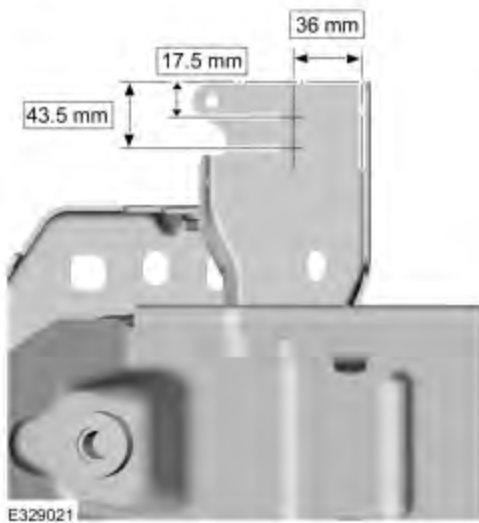


3. Make the cut-outs of the upper attachment.

- Center-punch the crossing lines.
- Make upper hole: Pre-drill several sizes and drill to a diameter of 16 mm
- Make lower hole: Pre-drill several sizes and drill to a diameter of 18 mm.
- Use a suitable tool, deburr the cut-outs.
- Use compressed air, carefully remove the drilling chips..

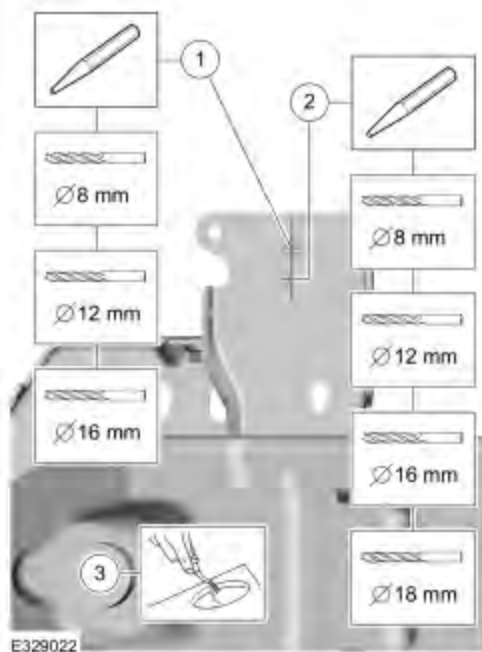

4. After all drillings have been set and deburred, apply corrosion protection (locally procured) on the edges of the cut-outs.

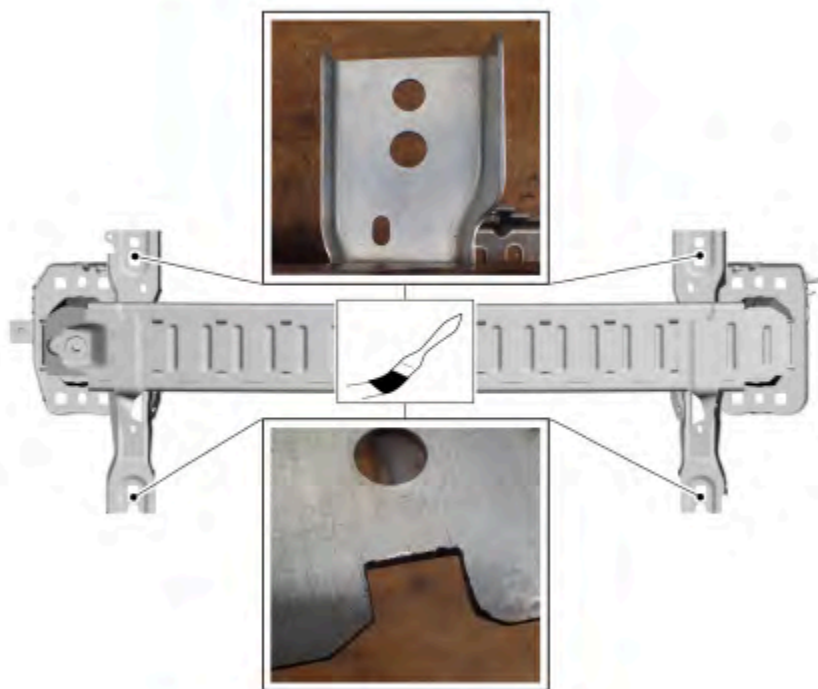

5. To install the part correctly, use washers as shims to align the bumper on the vehicle. For additional information, refer to 2020 Puma and 2023 Transit/Tourneo Courier Workshop Manual Section 501-19.