Advanced Computer Architectures - Notes - v0.1.0

260236

February 2025

Preface

Every theory section in these notes has been taken from two sources:

- Computer Architecture: A Quantitative Approach. [1]
- Pipelining slides. [2]
- Course slides. [3]

About:

GitHub repository



These notes are an unofficial resource and shouldn't replace the course material or any other book on advanced computer architectures. It is not made for commercial purposes. I've made the following notes to help me improve my knowledge and maybe it can be helpful for everyone.

As I have highlighted, a student should choose the teacher's material or a book on the topic. These notes can only be a helpful material.

Contents

1	Bas	ic Con	cepts	4
	1.1	Pipelir	ning	4
		1.1.1	MIPS Architecture	4
		1.1.2	Implementation of MIPS processor - Data Path	10
		1.1.3	MIPS Pipelining	12
		1.1.4	The problem of Pipeline Hazards	19
		1.1.5	The solution of Data Hazards	24
		1.1.6	The solution of Control Hazards	29
		1.1.7	Performance evaluation in pipelining	32
	1.2	Cache		34
		1.2.1	Introduction	34
		1.2.2	Cache Hit and Cache Miss	36
		1.2.3	Cache Structure	38
	1.3	Except	tions handling	49
		1.3.1	Introduction	49
		1.3.2	Interrupts and Interrupt Handler	51
		1.3.3	Exceptions in the 5-stage pipeline	53
Ind	lex			57

1 Basic Concepts

This section is designed to review old concepts that are fundamental to this course.

1.1 Pipelining

1.1.1 MIPS Architecture

MIPS (Microprocessor without Interlocked Pipelined Stages) is a family of Reduced Instruction Set Computer (RISC). It is based on the concept of executing only simple instruction in a reduced basic cycle to optimize the performance of CISC¹ CPUs.

MIPS is a **load-store architecture** (or a register–register architecture), which means it is an Instruction Set Architecture (ISA²) that divides **instructions** into two categories:

• Memory access (load and store between memory and registers; load data from memory to registers; store data from registers to memory):

$$\begin{array}{ccc} \text{Memory} & \xrightarrow{\textbf{load}} & \text{Registers} \\ \\ \text{Memory} & \xrightarrow{\textbf{store}} & \text{Registers} \end{array}$$

• ALU operations (which only occur between registers).

Finally, MIPS is also a Pipeline Architecture. It means that it can execute a performance optimization technique based on overlapping the execution of multiple instructions derived from a sequential execution flow.

¹CISC processors use simple and complex instructions to complete any given task. Instead, the RISC processor uses the approach of increasing internal parallelism by executing a simple set of instructions in a single clock cycle (see more here).

²Instruction Set Architecture (ISA) is a part of the abstract model of a computer, which generally defines how software controls the CPU.

Reduced Instruction Set of MIPS Processor

The instruction set of the MIPS processor is the following:

- ALU instructions:
 - Sum between two registers:

```
add $s1, $s2, $s3 # $s1 <- $s2 + $s3
```

Take the values from s2 and s3, make the sum and save the result on s1.

- Sum between register and constant:

```
addi $s1, $s1, 4 # $s1 <- $s1 + 4
```

Take the value from s1, make the sum between s1 and 4, and save the result on s1.

- Load/Store instructions:
 - Load

```
lw $s1, offset ($s2) # $s1 <- Memory[$s2 + offset]
```

From the s2 register, calculate the index on the memory with the offset, take the value and store it in the s1 register.

- Store

```
sw $s1, offset ($s2) # Memory[$s2 + offset] <- $s1
```

Take the value from the s1 register, take the value from the s2 register, calculate the index on the memory with the offset, and store the value taken from s1 in the memory.

- Branch instructions to control the instruction flow:
 - Conditional branches

Only if the condition is true (branch on equal):

```
1 beq $s1, $s2, L1  # if $s1 == $s1 then goto L1
```

Only if the condition is false (branch on not equal):

```
1 bne $s1, $s2, L1 # if $s1 != $s2 then goto L1
```

Unconditional jumps. The branch is always taken.

Jump:

```
j L1 # jump to L1
```

Jump register:

```
1 jr $s1 # jump to address contained in $s1
```

Formats of MIPS 32-bit Instructions

The previous instructions are divided into **three types**:

- Type R (Register): ALU instructions.
- Type I (Immediate): Load/Store instructions and Conditional branches.
- Type J (Jump): Unconditional jumps instructions.

Every instruction starts with a 6-bit opcode. In addition to the opcode:

- R-type instructions specify:
 - Three registers: rs, rt, rd
 - A shift amount field: shamt
 - A function field: funct
- I-type instructions specify:
 - Two registers: rs, rt
 - 16-bit immediate value: offset/immediate
- J-type instructions specify:
 - 26-bit jump target: address

	6-bit	5-bit	5-bit	5-bit	5-bit	6-bit
3	1 26 -	- 25 21 -	- 20 16 -	- 15 11 -	- 10 6 -	- 5 0
R	op	rs	rt	rd	shamt	funct
I	op	rs	rt		offset/immediate	
J	op	address				

Figure 1: MIPS 32-bit architecture.

Scan (or click) the QR code below to view the table in high quality:



Phases of execution of MIPS Instructions

Every instruction in the MIPS subset can be implemented in <u>at most</u> 5 clock cycles (phases) as follows:

1. Instruction Fetch (IF)

- (a) **Send** the **content** of Program Counter (PC) register to the Instruction Memory (IM);
- (b) **Fetch** the current **instruction** from Instruction Memory;
- (c) **Update** the Program Counter to the **next sequential address** by adding the value 4 to the Program Counter (4 because each instruction is 4 bytes!).

2. Instruction Decode and Register Read (ID)

- (a) Make the fixed-filed recording (decode the current instruction);
- (b) **Read** from the Register File (RF) of one or two registers corresponding to the registers specified in the instruction fields;
- (c) Sign-extension of the offset field of the instruction in case it is needed.
- 3. Execution (EX). The ALU operates on the operands prepared in the previous cycle depending on the instruction type (see more details after this list):
 - Register-Register ALU instructions: ALU executes the specified operation on the operands read from the Register File.
 - Register-Immediate (Register-Constant) ALU instructions: ALU executes the specified operation on the first operand read from Register File and the sign-extended immediate operand.
 - Memory Reference: ALU adds the base register and the offset to calculate the effective address.
 - Conditional Branches: ALU compares the two registers read from Register File and computes the possible branch target address by adding the sign-extended offset to the incremented Program Counter.
- 4. Memory Access (ME). It depends on the operation performed:
 - <u>Load</u>. Instructions require a read access to the Data Memory using the effective address.
 - Store. Instruction require a write access to the Data Memory using the effective address to write the data from the source register read from the Register File.
 - <u>Conditional branches</u> can update the content of the Program Counter with the branch target address, if the conditional test yielded true.

- 5. Write-Back (WB). It depends on the operation performed:
 - (a) <u>Load</u> instructions write the data read from memory in the destination register of the Register File.
 - (b) <u>ALU</u> instructions write the ALU results into the destination register of the Register File.

Execution (EX) details

• Register-Register ALU instructions. Given the following pattern (where op can be the operators add/addi (+) or sub/subi (-), but not mult (×) or div (÷) because they required some special registers and therefore more phases):

```
1 op x, y, z # e.g. op=add => x < -y + z
```

Cost: 4 clock cycles

- 1. Instruction Fetch (IF) and update the Program Counter (next sequential address);
- 2. Fixed-Field Decoding and read from Register File the registers: y and z;
- 3. Execution (EX), ALU performs the operation op (\$ y op \$ z);
- 4. Write-Back (WB), ALU writes the result into the destination register x.

• Memory Reference

- <u>Load</u>. Given the following pattern:

```
1 lw $x, offset ($y) # $x <- M[$y + offset]
```

Cost: 5 clock cycles

- 1. Instruction Fetch (IF) and update the Program Counter (next sequential address);
- 2. Fixed-Field Decoding and read of Base and register y from Register File (RF);
- 3. Execution (EX), ALU adds the base register and the offset to calculate the effective address: y + offset;
- 4. Memory Access (ME), read access to the Data Memory (DM) using the effective (y + offset) address;
- 5. Write-Back (WB), write the data read from memory in the destination register of the Register File (RF) x.

- <u>Store</u>. Given the following pattern:

```
1 sw $x, offset ($y) # M[$y + offset] <- $x
```

Cost: 4 clock cycles

- 1. Instruction Fetch (IF) and update the Program Counter (next sequential address);
- 2. Fixed-Field Decoding and read of Base register y and source register x from Register File (RF);
- 3. Execution (EX), ALU adds the base register and the offset to calculate the effective address: y + offset;
- 4. Memory Access (WB), write the data read from memory in the destination register of the Register File (RF) M(y + offset).
- Conditional Branch. Given the following pattern:

```
beq $x, $y, offset
```

Cost: 4 clock cycles

- 1. Instruction Fetch (IF) and update the Program Counter (next sequential address);
- 2. Fixed-Field Decoding and read of source registers x and y from Register File (RF);
- 3. Execution (EX), ALU compares two registers x and y and compute the possible branch target address by adding the sign-extended offset to the incremented Program Counter: PC + 4 + offset;
- 4. Memory Access (ME), update the content of the Program Counter with the branch target address (we assume that the conditional test is true).

1.1.2 Implementation of MIPS processor - Data Path

Implementing a MIPS processor isn't difficult. On the following page we show three different diagrams: the first is a very high level data path to allow the reader to understand how it works; the second is more detailed, but without the CU (Control Unit); the third is the complete data path and it also includes the CU (in red).

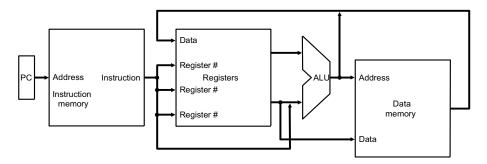


Figure 2: A basic implementation of MIPS data path. [2]

Scan (or click) the QR code below to view the figure 2 in high quality:



Two notes:

- The Instruction Memory (read-only memory) is separated from Data Memory.
- The 32 general-purpose register are organized in a **Register File** (RF) with 2 read ports and 1 write port.

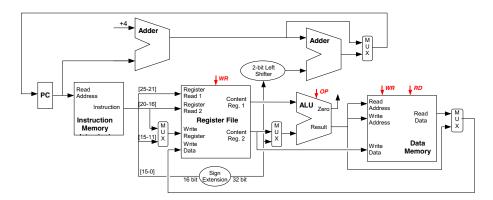


Figure 3: An implementation of MIPS data path (no Control Unit). [2]

Scan (or click) the QR code below to view the figure 3 in high quality:



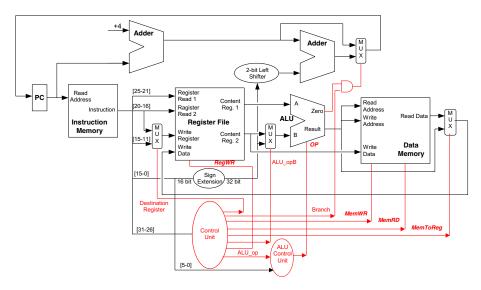


Figure 4: A complete implementation of MIPS data path. [2]

Scan (or click) the QR code below to view the figure 4 in high quality:



1.1.3 MIPS Pipelining

In simple words, the Instruction Pipelining (or Pipelining) is a technique for implementing instruction-level parallelism within a single processor. Pipelining attempts to keep every part of the processor busy with some instruction by dividing incoming instructions into a series of sequential steps (the eponymous "pipeline") performed by different processor units with different parts of instructions processed in parallel.

Definition 1: Pipelining

Pipelining is a performance optimization technique based on the **over-lap** of the execution of multiple instructions deriving from a sequential execution flow.

Pipelining exploits the parallelism among instructions in a sequential instruction stream.

☆ Basic idea

The execution of an instruction is divided into different phases (called pipelines stages), requiring a fraction of the time necessary to complete the instruction. These stages are connected one to the next to form the pipeline:

- 1. Instructions enter the pipeline at one end;
- 2. Progress through the stages;
- 3. And exit from the other end.


As in the assembly line.

✓ Advantage

The **Pipelining is transparent for the programmer**. To understand what it means, let's make an example.

Example 1

Image a car assembly line (e.g. Ferrari). A new car exits from the Ferrari assembly line in the time necessary to complete one of the phases. The pipelining technique doesn't reduce the time required to complete a car (the **latency**), BUT increases the number of vehicles produced per time unit (the **throughput**) and the frequency to complete cars.

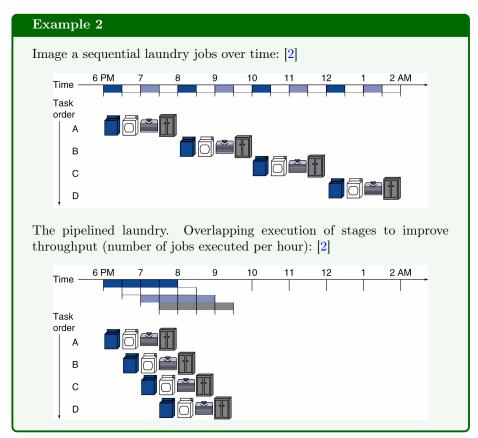

As introduced in the previous example, sequential execution is slower than pipelining. The following figure shows the difference (in terms of clock cycles) between sequential and pipelining.

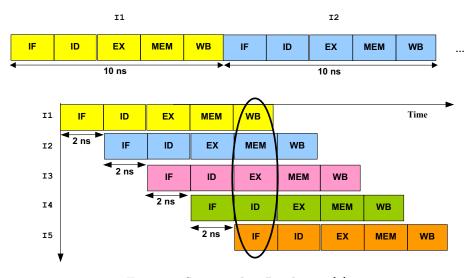


Figure 5: Sequential vs Pipelining. [2]

The time to advance the instruction of one stage in the pipeline corresponds to a clock cycle. So the total cost is: 9 clock cycles.

It's obvious that the **pipeline stages must be synchronized**: the duration of a clock cycle is defined by the time required by the slower stage in the pipeline (i.e. 2 ns). The **main goal** is to **balance the length of each pipeline stage**. If the stages are perfectly balanced, the **ideal speedup** due to pipelining is equal to the number of pipeline stages.

Definition 2: ideal speedup

The ideal speedup must be the same value of the pipeline stages.

Look again at Figure 5. The sequential and pipelining cases consist of 5 instructions, each of which is divided into 5 low-level instructions of 2 ns each.

• The **latency** (total execution time) of each instruction is not varied, it's always 10 ns.

Definition 3: latency

The **latency** is the execution time of a single instruction.

- The **throughput** (number of low-level instructions completed in the time unit) is improved:
 - Sequential: 5 instructions in 50 ns (1 instruction per 10 ns, $50 \div 5 = 10$)
 - Pipelining: 5 instruction in 18 ns (1 instruction per 3.6 ns, $18 \div 5 = 3.6$)

Definition 4: throughput

The **throughput** is the number of instructions completed per unit of time.

Pipeline Execution of MIPS Instructions

On page 8 we discussed some MIPS instructions to understand how the MIPS architecture works. The aim of the following pages is to understand **how MIPS** works in a pipelined execution.

We want to perform the following assembly lines:

```
1 op $x, $y, $z  # assume $x <- $y + $z
2 lw $x, offset ($y)  # $x <- M[$y + offset]
3 sw $x, offset ($y)  # M[$y + offset] <- $x
4 beq $x, $y, offset</pre>
```

IF Instruction Fetch	ID Instruction Decode	EX Execution	ME Memory Access	WB Write Back					
ALU Instructions: op \$x,\$y,\$z # \$x ← \$y + \$z									
Instr. Fetch & PC Increm.	Read of Source Regs. \$y and \$z	ALU Op. (\$y op \$z)		Write Back Destinat. Reg. \$x					
Load Instructions: lw \$x,offset(\$y) # \$x ← M[\$y + offset]									
Instr. Fetch & PC Increm.	Read of Base Reg. \$y	ALU Op. (\$y+offset)	Read Mem. M(\$y+offset)	Write Back Destinat. Reg. \$2					
		Store Instructions: sw \$x,offset(\$y) # M[\$y + offset]← \$x							
Store Instruction	ıs: sw \$x,offse	et(\$y) # M[\$y	v + offset]← S	\$x					
Store Instruction Instr. Fetch & PC Increm.	Read of Base Reg. \$\sqrt{y} & Source \$x\$	ALU Op. (\$y+offset)	write Mem. M(\$y+offset)	\$x					
Instr. Fetch & PC Increm.	Read of Base Reg.	ALU Op. (\$y+offset)	Write Mem.	\$x					

Figure 6: Pipeline Execution of MIPS Instructions. [2]

Resources used during the pipeline execution

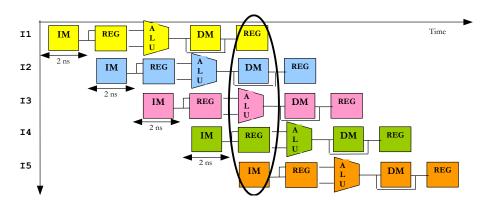


Figure 7: Resources used during the pipeline execution (IM is Instruction Memory, REG is Register File and DM is Data Memory). [2]

Implementation of MIPS pipeline

The division of the execution of each instruction in n stages implies that in each clock cycle, there are n instructions for execution. That means the CPU must have n modules corresponding to n execution stages. Therefore, to do pipelining, we need **pipeline registers to separate the different stages**.

In the following figure, we can see how the pipeline registers are implemented. Between each phase of execution of MIPS instructions (details on page 7), there is a pipeline register holding the result of the instruction.

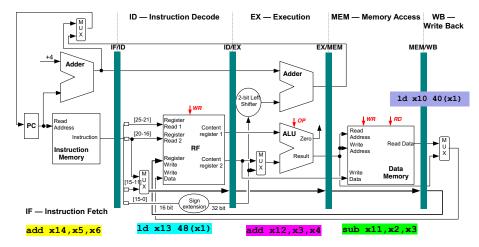


Figure 8: MIPS pipeline implementation. [2]

<u>Note</u>: the data stored in the interstage registers correspond (obviously) to different instructions.

Finally, in the following figure we can see the timeline implementation of the pipeline registers. But there are two basic assumptions to make:

- 1. There are no data dependencies between instructions. If there were, an instruction could read a register with an unknown value (Pipeline Hazard, page 19).
- 2. There are no branch/jump instructions.

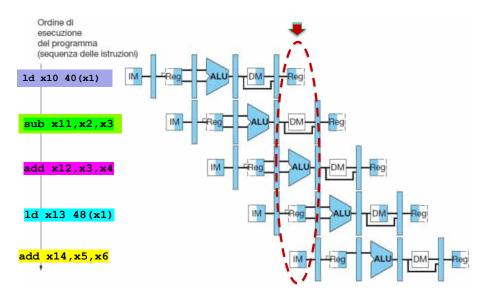


Figure 9: Timeline of MIPS pipeline implementation. [2]

1.1.4 The problem of Pipeline Hazards

Definition 5: Hazard

A hazard (conflict) is created whenever there a dependence between two instructions, and instructions are close enough that the overlap caused by pipelining would change the order of access to the operands involved in the dependence.

A Problem Consequences

The Hazards:

- Force the next instruction in the pipeline to be executed later than its intended clock cycle.
- Reduced the performance from the ideal speedup achieved by pipelining (direct previous consequence).

There are three classes of Hazards:

• Structural Hazards. Attempt to use the same resource from different instructions simultaneously.

Example: single memory for instruction and data.

• Data Hazards. Attempt to use a result before it is ready.

Example: instruction depending on a result of a previous instruction still in the pipeline.

There are also **two specific forms** of data hazard, called **Load-Use Data Hazard** and **Load-Store Data Hazard**. Both occur when the data loaded by a load instruction is not yet available when it is needed by another instruction. In the case of Load-Use, the "another instruction" is an operator such as add; in the case of Load-Store, the "another instruction" is the store (sw) instruction.

The following example shows the conflict (Load-Use Data Hazard) between two instructions. In particular, the value 1w writes to s2 is not available until 1w has completed the MEM phase, but and needs this value when it enters the EX phase, i.e. when 1w enters the MEM phase.

```
lw $s2, 20($s1)
and $s4, $s2, $s5
```

• Control Hazards. Attempt to make a decision on the next instruction to execute before the condition is evaluated (more detailed analysis on page 21).

Example: conditional branch execution.

Structural Hazards? No problem for MIPS Architecture!

There aren't any structural hazards in MIPS architecture because the Instruction Memory (IM) is separated from the Data Memory (DM). Also, the Register File (RF) is used in the same clock cycle (read access by an instruction and write access by another instruction).

? How to detect <u>Data Hazards</u>? Dependency Analysis

To **detect Data Hazards**, it is suggested to analyze the dependencies. If the instructions executed in the pipeline depend on each other, data hazards can arise **when instructions are too close**. For example:

```
sub $2, $1, $3  # reg. $2 written by sub

and $12, $2, $5  # 1 operand ($2) depends on sub

or $13, $6, $2  # 2 operand ($2) depends on sub

add $14, $2, $2  # 1 ($2) and 2 ($2) op.s depend on sub

sw $15, 100($2)  # base reg. ($2) depends on sub
```

Data Hazards can occur in a variety of situations, but a **true dependency** situation is created by a **RAW** (Read After Write) Hazard.

Definition 6: Read After Write Hazard

A RAW (Read After Write) Hazard occurs when an instruction n+1 tries to read a source operand before the previous instruction n has written its value in the Register File (RF).

For example:

```
sub $2, $1, $3  # reg. $2 is written by sub and $12, $2, $5  # 1 op. ($2) depends on sub
```

? How to detect Control Hazards? Check conditional branches

First of all, some examples of conditional branches for MIPS processor are: beq (branch on equal) and bne (branch on not equal):

```
beq $s1, $s2, L1  # if $s1 == $s1 then goto L1
bne $s1, $s2, L1  # if $s1 != $s2 then goto L1
```

The address to which you want to branch is called the Branch Target Address. If the branch condition:

- Is satisfied ⇒ the **branch is taken** and the Branch Target Address is stored in the Program Counter (PC).
- Is <u>not</u> satisfied \Rightarrow the **branch is not taken** (untaken) and the instruction stream is executed sequentially with the next instruction address (PC +4).

In detail, the stages are the following:

- 1. [IF] Instruction fetch and PC increment.
- 2. [ID] Instruction Decode and Registers Read (e.g. x and y)
- 3. [EX] Compare registers (e.g. x and y) in the ALU to derive the Branch Outcome: taken or not taken. Also, computation of the Branch Target Address, so PC + 4 + offset
- 4. [ME] The Branch Outcome is used to decide the next PC:
 - Is satisfied \Rightarrow PC take PC + 4 + offset
 - Is not satisfied \Rightarrow PC take PC + 4

Let us now move on to a more interesting analysis. To understand when the Control Hazards occur, think about the Branch Outcome and the Branch Target Address. Both are ready at the end of the EX (execution) phase (so between pass number 3 and 4). Finally, branches are resolved when the Program Counter is updated at the end of the Memory Access stage (after pass number 4).

To feed the condition branch into the pipeline, we need to **create a way where** the condition branch is decided before the EX stage of the next instruction. It's obvious, because if the Branch Outcome is positive, we need to skip the next instruction and do the conditional jump instead.

This is a more detailed explanation of a control hazard. Control Hazards arise from the pipelining of conditional branches and other jump instructions that change the PC. They also reduce the performance from the ideal speedup gained by pipelining, because it is necessary to hold the pipeline until the branch is resolved.

MIPS Optimized Pipeline

Consider the following situation:

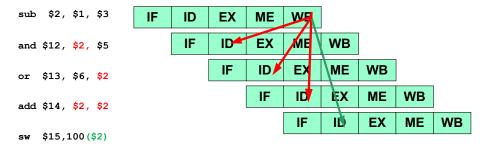


Figure 10: Why MIPS Optimized Pipeline was born. [2]

The Register File is used in 2 stages: read access during ID (and operation) and write access during Write Back (WB) (sub operation). What happens if read and write refer to the same register in the same clock cycle? Or we insert a stall, or we use an **optimized pipeline** (smart choice).

Definition 7: Optimized Pipeline

By selecting **Optimized Pipeline**, we assume the Register File (RF) read occurs in the second half of clock cycle and the Register File write in the first half of clock cycle.

This way we don't need the stall. The following Figure 11 shows an optimized pipeline.

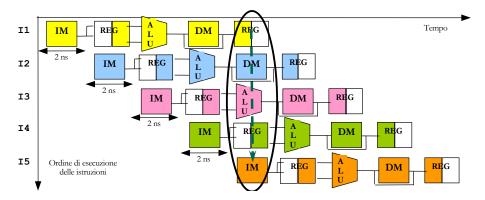


Figure 11: Optimized Pipeline (IM is Instruction Memory, REG is Register File, and DM is Data Memory). [2]

And the problem mentioned at the beginning of this paragraph is partially solved, as we can see in the following figure.

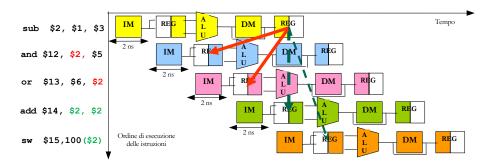


Figure 12: Optimized Pipeline to solve the example stall. [2]

1.1.5 The solution of Data Hazards

The following techniques don't solve the problem completely, but they do solve it partially. So they find a perfect balance between the ideal speedup and a situation where the hazard is total.

The solution can be applied on runtime (hardware techniques) or on compilation (static-time techniques):

- Compilation Techniques (static-time techniques):
 - The insertion of nop is a simple (logical) solution where we insert a
 nop operator between dependent statements to ensure correct
 operation.

See the **example** on page 27.

The instructions scheduling is a technique used by the compiler to prevent correlating instructions from being too close together. It tries to reorder instructions by inserting independent instructions between correlating instructions. If the compiler can't do this, it inserts nop operations.

See the example on page 28.

- Hardware Techniques (runtime techniques):
 - The insertion of stalls (called also bubbling the pipeline, pipeline break, or pipeline stall) is a sort of a delay before the processor can resume execution of the instruction. As we can see in the example on page 28, the stalls delay the stages of the correlating instructions.
 - The data forwarding uses temporary results stored in the pipeline registers instead of waiting for the results to be written back to the Register File (RF). To do this, it's necessary to add new paths and multiplexers at the inputs of the ALU to fetch inputs from the pipeline to avoid inserting stalls in the pipeline.

See the example on page 28.

We have the mandatory to give more words to the data forwarding technique. First of all, its implementation needs new paths and new multiplexers. So, to adapt the MIPS architecture, the new implementation will be show in the figure 13 on page 25.

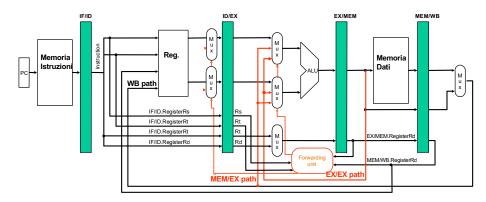


Figure 13: Implementation of MIPS with Forwarding Unit. [2]

Scan (or click) the QR code below to view the figure 13 in high quality:



The forwarding paths created inside the MIPS architecture are three: \mathtt{EX} to \mathtt{EX} path, \mathtt{MEM} to \mathtt{EX} path, and \mathtt{MEM} to \mathtt{MEM} path.


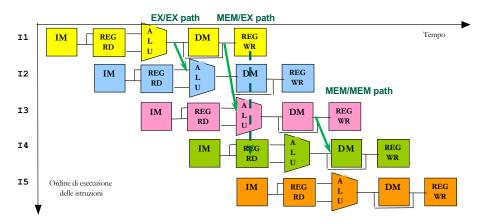


Figure 14: Forwarding paths on MIPS architecture. [2]

Furthermore, the **forwarding technique can solve** the **Load-Use** and **Load-Store** Data Hazard. It's a very interesting feature because the MEM to EX and MEM to MEM paths can solve two different situations:

• Load-Use Hazard. It's solved by MEM to EX path because the value loaded in the MEM stage, is forwarded directly to the EX stage of the next conflict instruction (but unfortunately we need one stall to delay the run).

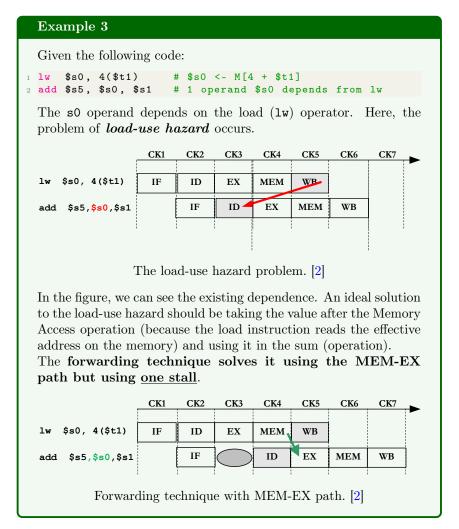


• Load-Store Hazard. It's solved by MEM to MEM path because the value loaded in the MEM stage, is forwarded directly to the MEM stage of the next conflict instruction.


```
Example 4

Given the following code:

1 lw $s0, VECTA($t1) # $s0 <- M[VECTA + $t1]
2 sw $s0, VECTB($t1) # M[VECTA + $t1] <- $s0

The s0 operand depends on the load (lw) operator. Here, the problem of load-store hazard occurs.
```

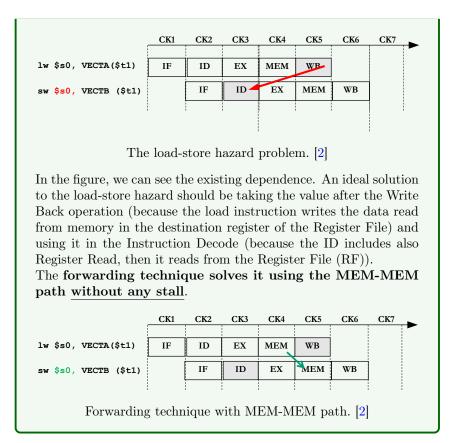

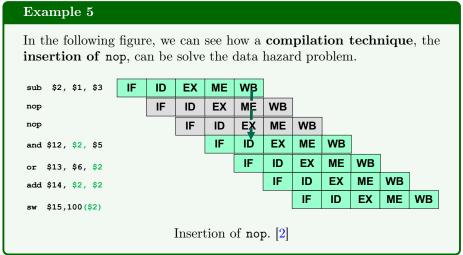

Example 6

In the following figure, we can see how a **compilation technique**, the **instructions scheduling**, can be solve the data hazard problem.

```
sub $2, $1, $3

and $12, $2, $5

or $13, $6, $2

add $14, $2, $2

sw $15,100($2)

add $4, $10, $11

and $7, $8, $9

add $14, $2, $2

add $14, $2, $2

sw $15,100($2)

sw $15,100($2)
```

Instructions scheduling. [2]

Example 7


In the following figure, we can see how a hardware technique, the insertion of stalls, can be solve the data hazard problem.



Insertion of stalls. [2]

Example 8

In the following figure, we can see how a hardware technique, the data forwarding, can be solve the data hazard problem.

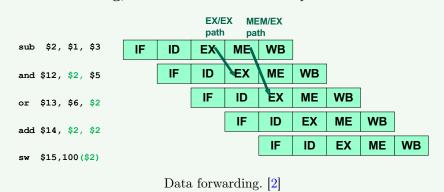

1.1.6 The solution of Control Hazards

There are multiple techniques to resolve a Control Hazard.

✓ Conservative Solution - The Branch Stalls

The following solution is the most conservative. Solve the problem? Yes, but it's called conservative because adopt a banal technique: **stalling until resolution** at the end of the Memory Access (ME) stage of the branch.

The main problem is the **loss of performance**. Each branch costs a **penalty of 3 stalls** to decide and fetch the correct instruction flow in the pipeline:

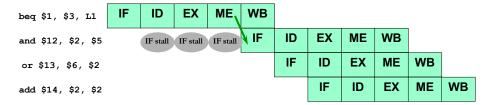


Figure 15: Example of a conservative solution to solve a Control Hazard.

✓ Start to think to the branch prediction - Flush solution

The branch stalls are not good because there is a reduction in throughput. So we can make a kind of prediction on the branch and assume that the branch will not be taken. So we start fetching and executing the next 3 instructions in the pipeline. Ok, but wait, what if the branch is taken? No problem, we flush the next 3 instructions before they write their result and then fetch the instruction at the branch target address.

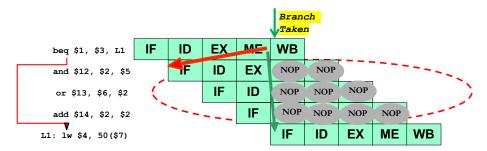


Figure 16: Example of a flush solution to solve a Control Hazard.

✓ Early Evaluation of the Program Counter (PC) in ID stage

It's clear that to improve performance in the event of branch hazards, we need to add more hardware features, such as:

- Compare registers to derive the Branch Outcome (BO).
- Compute the Branch Target Address (BTA).
- Update the PC register.

Fortunately, the MIPS-optimized pipeline already has these features and does so during the ID stage. As a result, the **Branch Outcome** (BO) and the **Branch Target Address** (BTA) are **known at the end of the ID stage**.

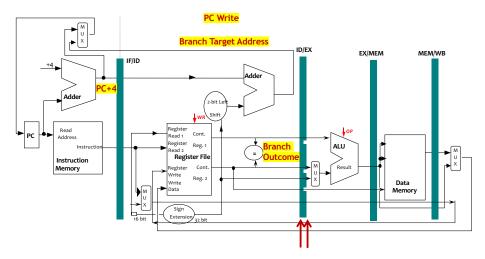


Figure 17: Early Evaluation of the Program Counter (PC) in ID stage.

Now, using the conservative solution or the flush solution, we get two different results:

• Combo with Conservative Solution: stalling until resolution at the end of the ID stage (when the Branch Outcome and the Branch Target Address are known) to decide which instruction to fetch.

Performance consideration: each branch costs **one stall of penalty** to decide and fetch the correct instruction flow along the pipeline.

One-cycle-delay for every branch still yields a performance loss of 10% to 30% depending on the branch frequency (Stall Cycles per Instruction due to Branches equal to Branch Frequency times to Branch Penalty):

Stall Cycles = Branch Frequency \times Branch Penalty

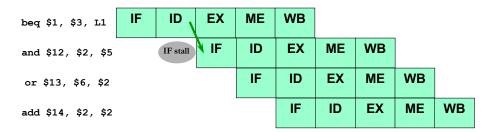


Figure 18: Example of conservative solution in MIPS architecture.

• Combo with Fetch Solution: we assume the branch is not taken.

Performance consideration: if the Branch Outcome (BO) will be taken, it will be necessary to flush only one instructions before writing its results and fetch the right instruction at the Branch Target Address.

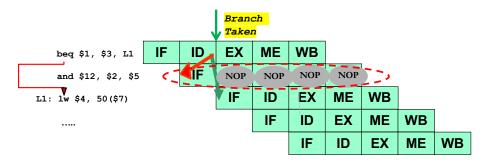


Figure 19: Example of fetch solution in MIPS architecture.

The unique solution is to use **branch prediction techniques** to deal with this loss of performance.

1.1.7 Performance evaluation in pipelining

As we have seen in the previous sections, the **pipelining increases the CPU instruction throughput** (number of instructions completed per unit of time) but doesn't reduce the latency (the execution time of a single instruction).

The increase in latency is a direct consequence of two problems:

- The imbalance among the pipeline stages
- The overhead in the pipeline control

This imbalance between the pipeline stages and the overhead are bad aspects:

- The imbalance reduces performance because the clock can run no faster than the time needed for the slowest pipeline stage;
- The overhead arises from the delay introduced by interstage registers and clock skew.

Finally, all instructions should be the same number of pipeline stages. Each assumption and optimization shown previously works well in this case.

Definition 8: number of Clock Cycles, Clocks Per Instructions and MIPS formula

Given:

- The Instruction Count per iteration as ICper_iter
- The number of Stall Cycles per iteration as # Stall Cycles
- The length of the pipeline is x

We can **calculate the number of Clock Cycles** as the sum between the Instruction Count (how many stages there are in one instruction), the number of Stall Cycles inserted by the hardware technique (called insertion of stalls), plus the length of the pipeline x:

$$\texttt{\# Clock Cycles}_{\texttt{per_iter}} = \texttt{IC}_{\texttt{per_iter}} + \texttt{\# Stall Cycles}_{\texttt{per_iter}} + x \ (1)$$

The Clocks Per Instruction per iteration, CPI_{per_iter}, is calculated with the rapport between the number of Clock Cycles per iteration (previous equation) divided by the Instruction Count per iteration:

$$\begin{split} \text{CPI}_{\text{per_iter}} &= \frac{\text{\# Clock Cycles}_{\text{per_iter}}}{\text{IC}_{\text{per_iter}}} \\ &= \frac{\left(\text{IC}_{\text{per_iter}} + \text{\# Stall Cycles}_{\text{per_iter}} + x\right)}{\text{IC}_{\text{per iter}}} \end{split} \tag{2}$$

Finally, the MIPS formula per iteration is calculated with the rapport between the frequency of the clock (f_{clock}) divided by the multiply between the Instructions Per Clock (as the ratio $1 \div \text{CPI}$) and 10^6 (1 million instructions):

$$MIPS_{per_iter} = \frac{f_{clock}}{(CPI_{per_iter} \times 10^6)}$$
 (3)

We can asymptotically (AS) rewrite equations 1, 2 and 3 as follows:

$$\texttt{\# Clock Cycles}_{\mathtt{AS}} = \mathtt{IC}_{\mathtt{AS}} + \texttt{\# Stall Cycles}_{\mathtt{AS}} + x \tag{4}$$

$$\begin{array}{lll} \mathtt{CPI}_{\mathtt{AS}} & = & \lim_{n \to \infty} \frac{\mathtt{\# \ Clock \ Cycles}_{\mathtt{AS}}}{\mathtt{IC}_{\mathtt{AS}}} \\ & = & \lim_{n \to \infty} \frac{(\mathtt{IC}_{\mathtt{AS}} + \mathtt{\# \ Stall \ Cycles}_{\mathtt{AS}} + x)}{\mathtt{IC}_{\mathtt{AS}}} \end{array} \tag{5}$$

$$MIPS_{AS} = \frac{f_{clock}}{(CPI_{AS} \times 10^6)}$$
 (6)

Note: the ideal speedup, then Clock Per Instruction, should be equal to 1. But stalls cause the pipeline performance to degrade from the ideal performance, so we have the Average Clock Per Instruction (CPI):

$$\begin{array}{lll} {\tt AVG\,(CPI)} & = & {\tt Ideal\,\,CPI} + {\tt \#\,\,Stall\,\,\,Cycles}_{\tt per_instruction} \\ \\ & = & 1 + {\tt \#\,\,Stall\,\,\,\,Cycles}_{\tt per_instruction} \end{array} \tag{7}$$

And obviously, the Pipeline Stall Cycles per Instruction is:

PSCI = Structural Haz. + Data Haz. + Control Haz. + Memory Stalls (8)

1.2 Cache

1.2.1 Introduction

The cache is introduced to increase the performance of a computer through the memory system in order to:

- Provide the user the illusion to use a memory that is simultaneously large and fast.
- Provide the data to the processor at high frequency.

It takes advantage from the Locality of Reference.

Definition 9: Locality of Reference

Locality of reference refers to a phenomenon in which a computer program tends to access same set of memory locations for a particular time period.

In other words, **Locality of Reference** refers to the tendency of the computer program to access instructions whose addresses are near one another. The property of locality of reference is mainly shown by loops and subroutine calls in a program.

There are two types of Locality of Reference:

• Temporal Locality

Definition 10: Temporal Locality

Temporal Locality means that a instruction which is recently executed have high chances of execution again. So the instruction is kept in cache memory such that it can be fetched easily and takes no time in searching for the same instruction.

• Spatial Locality

Definition 11: Spatial Locality

Spatial Locality means that all those instructions which are stored nearby to the recently executed instruction have high chances of execution. It refers to the use of data elements (instructions) which are relatively close in storage locations.

Spatial Locality	Temporal Locality
In Spatial Locality, nearby instructions to recently executed instruction are likely to be executed soon.	In Temporal Locality, a recently executed instruction is likely to be executed again very soon.
It refers to the tendency of execution which involve a number of memory locations.	It refers to the tendency of execution where memory location that have been used recently have a access.
It is also known as locality in space.	It is also known as locality in time.
It only refers to data item which are closed together in memory.	It repeatedly refers to same data in short time span.
Each time new data comes into execution.	Each time same useful data comes into execution.
Example: Data elements accessed in array (where each time different, or just next, element is being accessing).	Example: Data elements accessed in loops (where same data elements are accessed multiple times).

Table 1: Difference between Spatial Locality and Temporal Locality.

? Where can we find the cache?

In general, the memory hierarchy is composed of several level. Let us consider 2 levels: cache and main memory. The **cache** (upper level) is **smaller**, **faster** and **more expensive** than the main memory (lower level).

The minimum chunk of data that can be copied in the cache is the *block* or *cache line*. To exploit the spatial locality, the block size must be a multiple of the word size in memory. So, for example a 128-bit block size is equal to 4 words of 32-bit.

The number of blocks in cache is given by:

$$\label{eq:number_of_cache} \text{Number of cache blocks} = \frac{\text{Cache Size}}{\text{Block Size}}$$

For example, if the cache size is 64K-Byte and the block size is 128-bit (16-Byte), then the number of cache blocks is 4K blocks.

1.2.2 Cache Hit and Cache Miss

Unfortunately, the Cache can't be maintain every data inside the computer. In order to be faster, it contains only some data with.

When the processor makes a request of a certain type:

- *Ideal case*. If the requested data is <u>found</u> in one of the cache blocks (upper level), then there is a hit in the cache address and it's called Cache Hit.
- Problematic case. If the requested data is <u>not found</u> in one of the cache blocks (upper level), then there is a miss in the cache address and it's called Cache Miss.

<u>But beware</u>, in this case we need to access the lower level of the memory hierarchy to find the requested block. This causes:

- To stall the CPU;
- To require to block from the main memory;
- To copy (write) the block in cache;
- To repeat the cache access (hit).

Definition 12: Cache Hit

A Cache Hit is when a requested data is found in one of the cache block of the upper level of the memory.

Furthermore we define the **Hit Rate** as the number of memory accesses that find the data in the upper level with respect to the total number of memory accesses:

$$\label{eq:hits} \mbox{Hit Rate} = \frac{\mbox{\# hits}}{\mbox{\# memory accesses}}$$

Finally we define the Hit Time as the time to access the data in the upper level of the hierarchy, including the time needed to decide if the attempt of access will result in a hit or miss.

Definition 13: Cache Miss

A Cache Miss is when a requested data is not found in one of the cache blocks and must be taken from the lower level of the memory.

Furthermore we define the Miss Rate as the number of memory accesses not finding the data in the upper level with respect to the total number of memory accesses:

$$\texttt{Miss Rate} = \frac{\texttt{\# misses}}{\texttt{\# memory accesses}} \tag{9}$$

Finally we define the **Miss Time** as

$$Miss Time = Hit Time + Miss Penalty$$
 (10)

Where the Miss Penalty is the time needed to access the lower level and to replace the block in the upper level.

Two observations:

1. Should be obviously the definition:

$${\tt Hit\ Rate} + {\tt Miss\ Rate} = 1$$

2. Typically, we have the following relation:

Hit Time
$$\ll$$
 Miss Penalty


Finally, the **Average Memory Access Time (AMAT)** can be calculated as:

$${\tt AMAT} = {\tt Hit Time} + {\tt Miss Rate} * {\tt Miss Penalty} \tag{11}$$

1.2.3 Cache Structure

Each entry (cache line) in the cache includes:

- (V) Valid bit to indicate if this position contains valid data or not. At the bootstrap, all the entries in the cache are marked as INVALID.
- (TAG) Cache Tag(s) contains the value that univocally identifies the memory address corresponding to the stored data.
- (DATA) Cache Data contains a copy of data (block or cache line).

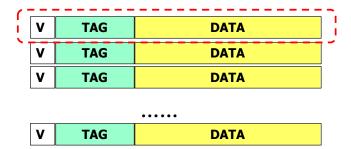

After a general presentation of the cache structure, we answer four questions about the memory hierarchy to understand different topics:

- Block placement (page 39). Where can a block be placed in the upper level?
 - Direct Mapped Cache (page 39)
 - Fully Associative Cache (page 41)
 - n-way Set Associative Cache (page 43)
- Block identification (page 45). How is a block found if it is in the upper level?
- Block replacement (page 45). Which block should be replaced on a miss?
- Write strategy (page 46). What happens on a write?

Block placement

The main question is: where can a block be placed in the upper level? In other words, the problem is: given the address of the block in the main memory, where can the block be placed in the cache?

So, we need to find the **correspondence between the memory address** and the cache address of the block. This correspondence depends on the cache structure and can be of three types:

- Direct Mapped Cache
- Fully Associative Cache
- *n*-way Set-Associative Cache

Direct Mapped Cache

With the Direct Mapped Cache structure, each memory location corresponds to one cache location and only one cache location. The following formula gives the cache address of the block:

$$(\texttt{Block Address})_{\texttt{cache}} = (\texttt{Block Address})_{\texttt{mem}} \, \texttt{mod} \, (\texttt{\# Cache Blocks}) \qquad (12)$$

The block address of the cache corresponds to the modulo operation between the block address of the memory and the number (#) of cache blocks. The modulo operation returns a division's remainder or signed remainder after dividing one number by another.

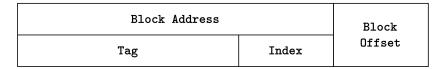


Figure 20: This figure shows the memory address composed of the block address (tag and index used to identify the block) and the block offset.

From Figure 21, we can see the complete structure of the cache if we choose the direct mapped cache technique.

The rectangle on the top is the memory address (Figure 20). First, we check the *Tag* value; if it's equal to the value in the cache, we check the *Valid bit* (V) to see if the position contains valid data: if the value is 1, we have a cache hit; otherwise, the data is invalid. The *Tag* contains the value that univocally identifies the memory address corresponding to the stored data. To take the *data word*, we use the *block offset* as the *selector* in the multiplexer to choose which data block to take. The index field indicates the cache row to check.

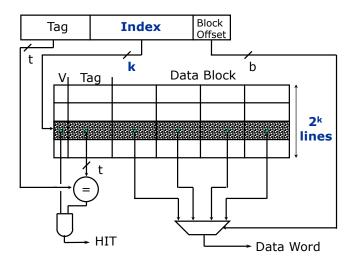



Figure 21: The cache structure of the $Direct\ Mapped\ Cache$ technique.

For example, we assume a block-frame address composed of 32 bits. Our cache structure is direct mapped, and the number of cache blocks is 8. A possible exercise could be **determining where block 12 can be placed in the 8-block cache**.

To solve this problem, we can use the formula no 12 on page 39:

$$(\texttt{Block Address})_{\texttt{cache}} = 12 \mod 8 = 5$$

The result is 5, so the answer is: with the direct mapped technique, **the block number is 4** (because the first index of the cache blocks is zero and not 1).

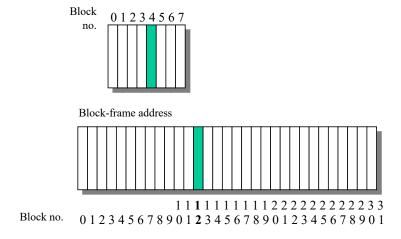

Fully Associative Cache

In a Fully Associative Cache, the memory block can be placed in any position of the cache. So, all the cache blocks must be checked during the search of the block.

Note the **index does not exist** in the memory address; there are the Tag bits only:

$${\tt Number\ of\ blocks} = \frac{{\tt Cache\ Size}}{{\tt Block\ Size}} \tag{13}$$

The Memory Address comprises the Block Address (Tag) and the Block Offset.

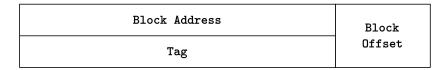


Figure 22: The Memory Address comprises the Block Address (Tag) and the Block Offset.

The structure of the cache using this technique is as follows:


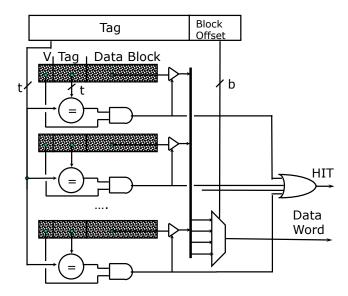


Figure 23: The cache structure of the Fully Associative Cache technique.

As shown in Figure 23, the cache structure is more accessible because there are no *Index* fields. We check only the *Tag* field from the memory address. Finally, the *Block Offset* chooses the *Data Block* from the cache. We have a cache hit if the *Tag* is equal to the *Tag* of the cache and the value in and with the valid bit is true.

For example, we assume a block-frame address composed of 32 bits. Our cache structure is fully associative, and the number of cache blocks is 8. A possible exercise could be determining where block 12 can be placed in the 8-block cache.

Unlike before, the position can be anywhere.

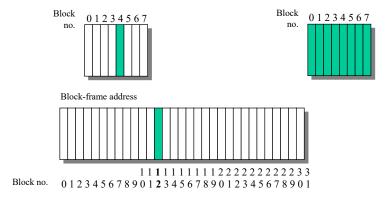

Direct Mapped on the left and Fully Associative on the right.

n-way Set Associative Cache

In a n-way Set Associative Cache, the cache is composed of sets. Each set is composed of n blocks:

$$\begin{array}{lll} {\tt Number\ of\ blocks} &=& \frac{{\tt Cache\ Size}}{{\tt Block\ Size}} \\ \\ {\tt Number\ of\ sets} &=& \frac{{\tt Cache\ Size}}{({\tt Block\ Size}\times n)} \end{array} \tag{14}$$

The memory block can be placed in any block of the set, so the *search must be done on all the blocks*.

Each memory block corresponds to a single set of the cache, and the block can be placed in whatever block of the n blocks of the set:

$$(\mathtt{Set})_{\mathtt{cache}} = (\mathtt{Block address})_{\mathtt{mem}} \, \mathtt{mod} \, (\mathtt{\# sets in cache}) \tag{15}$$

Block Address		Block
Tag	Index	Offset

Figure 24: The memory address comprises the block address (Tag and index used to identify the set) and the block offset.


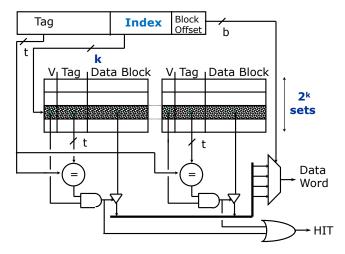


Figure 25: This structure is a **2-way Set Associative Cache**.

Taking the examples of previous pages, with the 2-way Set Associative, the answer is anywhere in set 0. The reason for this is that using the formula 15:

$$(\mathtt{Set})_{\mathtt{cache}} = 12 \mod 4 = 0$$

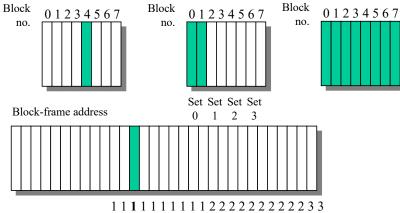

Block no. 01234567890123456789012345678901

Direct Mapped on the left, 2-way Set Associative on the center and Fully Associative on the right.

Block identification

The main question is: how is a block found if it is in the upper level? The problem with identifying a block is that we must compare Tag bits. The comparison depends on the structure of the cache:

- With **Direct Mapping** (page 39), we need to:
 - Identify block positions by index (with the formula 12);
 - Compare block tags;
 - Verify the valid bit.
- With the **Set Associative Mapping** (page 43), we need to:
 - Identify the set by index (with the formula 15);
 - Compare tags of the set;
 - Verify the Valid bit.
- With the **Fully Associative Mapping** (page 41), we must:
 - Compare tags in *every* block;
 - Verify the Valid bit.

Comparing the Tag bits, we do not need to check index or block offset bits.

Block replacement

The main question is: which block should be replaced on a miss? In case of a miss (definition on page 36), the replacement strategy depends on the structure of the cache:

- In a Fully Associative Cache (page 41), we need to decide which block to replace: any block is a potential candidate for the replacement.
- In a **Set Associative Cache** (page 43), we must select among the blocks in the given set.
- In a **Direct Mapped Cache** (page 39), only one candidate must be replaced (no need for any block replacement strategy).

So in the Fully Associative Cache and Set Associative Cache, the main strategies used to choose the block to be replaced are:

- Random (or pseudo-random)
- LRU (Least Recently Used)
- FIFO (First In First Out, or oldest block replaced)

Write strategy

The main question is: what happens on a write? It depends on the written policy adopted in the cache. We remember that there are two possible options:

• Write-Through: data is simultaneously updated (written) to cache and memory. This process is more straightforward and more reliable. This is used when there are no frequent writes to the cache.

✓ The main advantages

- 1. It is **simpler to implement** but to be effective, it requires a write buffer to not wait for the memory hierarchy (to avoid write stalls).
- The read misses are cheaper because they do not require any write to the memory hierarchy.
- 3. Memory is always up to date.
- Write-Back: the data is updated only in the cache and then added to the memory later. The modified cache block is written to the memory only when it is replaced due to a cache miss. So, how can we understand if a block is clean or dirty? We need to add a Dirty Bit. Each Block in the cache requires a bit to indicate if the data present in the cache was modified (Dirty) or not modified (Clean). If it is clean, writing it into the memory is unnecessary. It is designed to reduce write operation to a memory.

✓ The main advantages

- 1. The processor can write the Block at the frequency the cache, not the main memory, can accept.
- 2. Multiple writes to the same Block require only a single write to the main memory.

? What is a Write Buffer?

A Write Buffer is a FIFO buffer that does not wait for main memory access (the typical number of entries is 4 to 8). So, the processor writes data to the cache and the write buffer; the memory controller writes the contents of the buffer to memory.

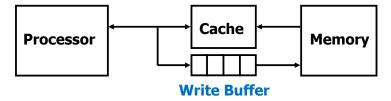


Figure 26: The cache structure with a Write Buffer.

The main problem with this idea is saturation. However, as we have cited before, the write buffer is usually combined with the Write-Through policy.

? Ok, the cache can adopt one of the two write policies, but what happens on a Write Miss?

If write occurs to a location that is not present in the Cache (Write Miss), we use two options: Write Allocate (or fetch on write) and No Write Allocate (Write-Around).

In the first one, the data is loaded from the memory into the cache and then updated. Write Allocate works with both Write Back and Write-Through. However, it is generally used with Write Back because bringing data from the memory to the cache is unnecessary and then updating it in both the cache and main memory.

In the No Write Allocate option, the data is directly written/updated to the main memory without disturbing the cache. It is better to use this when the data is not immediately used again. Generally, the Write-Through cache uses the No Write Allocate option (hoping the next writes to the Block will be done again in memory).

i Summary

Event	Summary	
Read Hit	Read data in cache.	
Read Miss	Events that manifest themselves:	
	1. CPU stalls;	
	2. Data request to memory;	
	3. Copy in cache (write in cache);	
	4. Repeat of cache read operation.	
Write Hit	It depends on the policy chosen:	
	• Write-Through: write data both in cach and in memory.	
	• Write-Back: write data to cache only, and copy memory only when replaced due to a cache miss.	
Write Miss	There will certainly be CPU stalls. It also depends on the option we choose:	
• Write Allocate:		
	 Data request to memory; Copy in cache (write in cache); Repeat of cache write operation. 	
	• No Write Allocate:	
	1. Simply send write data to main memory.	

Table 2: Summary: Hit and Miss & Read and Write.

1.3 Exceptions handling

1.3.1 Introduction

We use the term **exception** to cover not only **exceptions** but also **interrupts** and **faults**. More in general, we consider the following *type of events*:

- I/O device request
- Invoking OS system call from a user program
- Tracing instruction execution
- Integer arithmetic overflow/underflow
- Floating point arithmetic anomaly
- Page fault
- Misaligned memory access
- Memory protection violation
- Hardware/Power failure

▲ Causes of Interrupts/Exceptions

An **interrupt** is an **event that requires the processor's attention**. The causes of an interrupt or exception can be of two types:

- Asynchronous Exceptions, when a request comes from an external event, such as:
 - I/O device service-request
 - Timer expiration
 - Power disruptions, hardware failure

These events are caused by devices external to the CPU and memory and can be handled after the completion of the current instruction (easier to handle)

- Synchronous Exceptions, when a request comes from an internal event (a.k.a. exceptions), such as:
 - Undefined opcode, privileged instruction
 - Integer arithmetic overflow, FPU exception
 - Misaligned memory access
 - Virtual memory exceptions: page faults, TLB misses, protection violations
 - Traps: system calls, e.g., jumps into kernel

■ Classes of Exceptions

Some exceptions are predictable and easier to handle, such as user-requested exceptions. But, some exceptions are unpredictable, such as "coerced" exceptions. Other classes of exceptions are:

- User Requested "Exceptions", such as I/O events, are predictable. They are treated as exceptions because they use the same mechanisms that are used to save and restore the state; handled after the instruction has completed (easier to handle).
- Coerced "exceptions" are caused by some hardware event not under control of the user program; hard to implement because they are unpredictable.
- Masking. To mask an interrupt is to disable it, so it is deferred or ignored by the processor, while to unmask an interrupt is to enable it.

User maskable interrupts are signals affected by the mask. So, when the interrupt is disabled, the associated interrupt signal may be ignored by the processor, or it may remain pending.

User nonmaskable interrupts are signals that cannot be disabled and they are not affected by the interrupt mask.

• Within instructions. These classes of exceptions are synchronous, since the instruction triggers the exception.

In this case, the instruction must be stopped and restarted.

• Between instructions. These classes of exceptions are asynchronous and they arise from catastrophic situations such as HW malfunctions and always cause program termination.

Finally, there are two explanations of the terms we will use:

- The term terminating event means that the program execution always stops after the interrupt/exception.
- The term resume event means that the program execution continues after the interrupt/exception.

1.3.2 Interrupts and Interrupt Handler

The interrupts change the normal flow of control. As you can see in Figure 27, on the left we see the instructions of the program; on the right we see the interrupt handler.

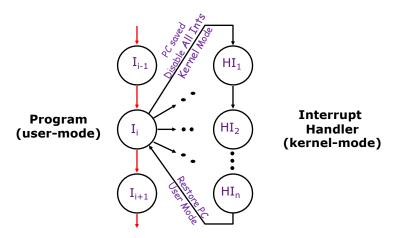


Figure 27: Program and Interrupt Handler.

An Interrupt Handler, also known as an interrupt service routine or ISR, is a special block of code associated with a specific interrupt condition. Interrupts can be of two types:

• Synchronous Interrupts (exception) are caused by a particular instruction stage. In general, the instruction I_i (see the Figure 27) cannot be completed and needs to be restarted after the exception has been handled.

If we think about the pipeline, this condition requires undoing the effect of one or more partially executed instructions.

• Asynchronous Interrupts are caused by an I/O device requesting attention by asserting one of the prioritized interrupt request lines.

When the processor decides to process the interrupt:

- 1. It stops the current program at instruction I_i , completing all the instructions up to I_{i-1} (called **precise interrupt**, see below to understand what it is).
- 2. It saves the Program Counter (PC) of the instruction I_i in a special register called **Exception Program Counter (EPC)**: PC \rightarrow EPC.
- 3. It disables interrupts and transfer control to a designated interrupt handler running in the **kernel mode**. So it loads the **Interrupt Vector Address (IVA)** into the Program Counter (PC): IVA → PC.

- 4. When the Interrupt Handler has finished, it must **restore the stable** situation. It uses a special indirect jump instruction called **Return-From-Exception** (RFE), which restores the PC and:
 - Re-enables the interrupts (again, because they were disabled in the previous step);
 - Returns the processor to user mode;
 - Restores the hardware and control state.

? Ok, but what exactly is a Precise Interrupts in Asynchronous Interrupts?

An interrupt or exception is precise if there is a single instruction (or interrupt point) for which all previous instructions have committed their state and no subsequent instructions (including the interrupting instruction I_i) have changed any state.

In other words, we can restart execution at the interrupt point and "get the right answer".

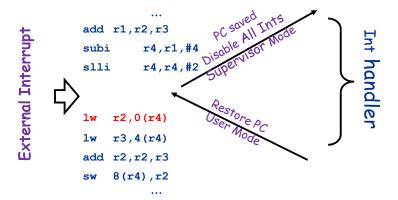


Figure 28: Example of precise interrupt/exception (interrupt point is at red lw instruction).

1.3.3 Exceptions in the 5-stage pipeline

Asynchronous interrupts can occur at any stage of the pipeline. In the following figure we can see some examples of exceptions that can occur at any stage.




Figure 29: Example of exceptions in the 5-stage pipeline.


The aim of this section is to understand how to handle multiple simultaneous exceptions at different stages of the pipeline, and how and where to handle external asynchronous interrupts such as an I/O service request.

Example 9: Data Page Fault and Arithmetic Exception

In this first example of an exception in a 5-stage pipeline, we can see that pipelining can cause exceptions to be thrown **out of order**. In fact, we remember that exceptions can occur at different stages in the pipeline for different instructions.

For example, a **Data Page Fault** occurs at the memory stage of the first instruction. The **Arithmetic Exception** occurs in the execution phase of the second instruction.

Because of the pipelined execution, the page fault occurs at the same time as the overflow. Note, however, that the data page fault MUST be handled first.

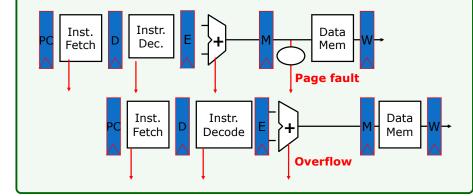


Example 10: Instruction Page Fault and Data Page Fault

The exceptions may not always be as waterfall. As we said in the first example, the exceptions can be thrown out of order.

In this case we have an **Instruction Page Fault** that occurs in the **Instruction Memory** stage of the second instruction. There is also a **Data Page Fault** in the memory phase of the first instruction.

Despite the first example, the instruction page fault is handled first!

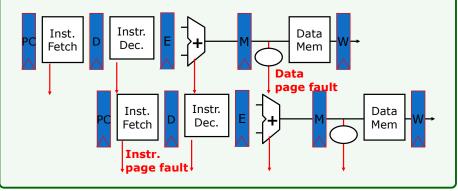

From the previous examples, we know that out-of-order is a serious pipelining problem.

✓ How can the pipeline be modified to solve these problems?

By using the exception flag and the PC.

- 1. First, hold the exception flag and pass it through the pipeline.
- 2. Hold the **Program Counter** (PC) and **pass it through the pipeline** (to be saved and restored after the Exception Handler Routine).
- 3. Finally, do not react to the exception until it reaches the commit point. In other words, wait until the end of MEM stage to raise the exception.

Please note that when the instruction reaches the Commit Point, before entering the Write Back (WB) phase, the following steps are performed:

- Store the Program Counter in the Exception Program Counter (PC \rightarrow EPC) and store the Interrupt Handler Address in the Program Counter (IHA \rightarrow PC).
- Make all next instructions in previous stages NOP operations (see Figure 30 on page 55).
- Handle interrupts by "faulting nop" in the Instruction Fetch (IF) stage.

At the end of the Exception Handler Routine, the instruction is re-executed.

By adopting this solution, all exceptions are deferred to be handled in order at the MEM stage, as in any non-pipelined processor.

```
time
                                  t0
                                          t1
                                                  t2
                                                           t3 It4
                                                                                     t6
                                                                                             t7
(I<sub>1</sub>) 096: ADD
                                  IF<sub>1</sub> ID<sub>1</sub> EX<sub>1</sub> ME<sub>1</sub> nop
                                                                                     overflow!
(I<sub>2</sub>) 100: XOR
                                          IF<sub>2</sub> ID<sub>2</sub> EX<sub>2</sub> nop nop
                                                  IF_3
(I<sub>3</sub>) 104: SUB
                                                          ID₃¹ nop nop nop
                                                           IF<sub>4</sub> nop nop nop nop
(I<sub>4</sub>) 108: ADD
(I<sub>5</sub>) Exc. Handler Add
                                                                            IF<sub>5</sub> ID<sub>5</sub> EX<sub>5</sub> ME<sub>5</sub> WB<sub>5</sub>
```

Figure 30: Make all next instructions in previous stage NOP operations.

In the following figure, we can see how the execution flow changes when an exception occurs in a pipeline.

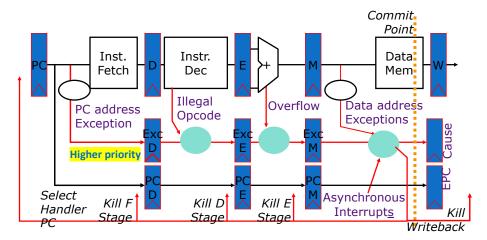


Figure 31: This is how we solve the out-of-order problem in a pipeline architecture.

References

- [1] J.L. Hennessy and D.A. Patterson. Computer Architecture: A Quantitative Approach. ISSN. Elsevier Science, 2017.
- [2] Cristina Silvano. Lesson 1, pipelining. Slides from the HPC-E master's degree course on Politecnico di Milano, 2024.
- [3] Cristina Silvano. Advanced computer architecture. Slides from the HPC-E master's degree course on Politecnico di Milano, 2024-2025.

\mathbf{Index}

Symbols	
n-way Set Associative Cache	43
A Asynchronous Exceptions Asynchronous Interrupts Average Clock Per Instruction (CPI) Average Memory Access Time (AMAT)	49 51 33 37
B Between instructions Branch Target Address	50 21
C Cache Hit Cache Miss Clocks Per Instruction Coerced "exceptions" Control Hazards	36 36 32 50 19
D Data forwarding Data Hazards Data Memory (DM) Direct Mapped Cache Dirty Bit	24 19 7 39 46
Exception Exception Program Counter (EPC) Execution (EX)	49 51 7
F Forwarding Unit Fully Associative Cache	25 41
H Hazard (conflict) Hit Rate Hit Time	19 36 36
I Ideal speedup Imbalance among the pipeline stages Insertion of nop Insertion of stalls Instruction Decode and Register Read (ID) Instruction Fetch (IF) Instruction Memory (IM)	14 32 24 24 7 7

	Index
To at weathing a sheal allies a	24
Instructions scheduling Interrupt	24 49
Interrupt Handler	51
Interrupt Vector Address (IVA)	51
L	
Latency	14
Load-Store Data Hazard	19
Load-Use Data Hazard	19
Locality of Reference	34
M Memory Access (ME)	7
MIPS	$\stackrel{\circ}{4}$
MIPS formula	32
Miss Penalty	37
Miss Rate	36
Miss Time	36
N	
No Write Allocate	47
Number of Clock Cycles	32
0	
Optimized Pipeline	22
Overhead in the pipeline control	32
P	
Pipeline registers	17
Pipeline Stall Cycles per Instruction	33 12
Pipelines stages Pipelining	12
Precise Exceptions	52
Precise Interrupts	52
Program Counter (PC)	7
R	
RAW (Read After Write) Hazard	20
Register File (RF)	7
Resume event	50
Return-From-Exception (RFE)	52
S Spatial Locality	24
Spatial Locality Structural Hazards	34 19
Synchronous Exceptions	49
Synchronous Interrupts	51
T	
Temporal Locality	34
Terminating event	50

	Index
Throughput	14
\mathbf{U}	
User maskable	50
User nonmaskable	50
User Requested "Exceptions"	50
\mathbf{W}	
Within instructions	50
Write Allocate	47
Write Buffer	46
Write-Back	46
Write-Back (WB)	8
Write-Through	46