
SUPPLY: J1 -> R1 -> D4 -> VCC. R1 is a resistor, not a fuse.

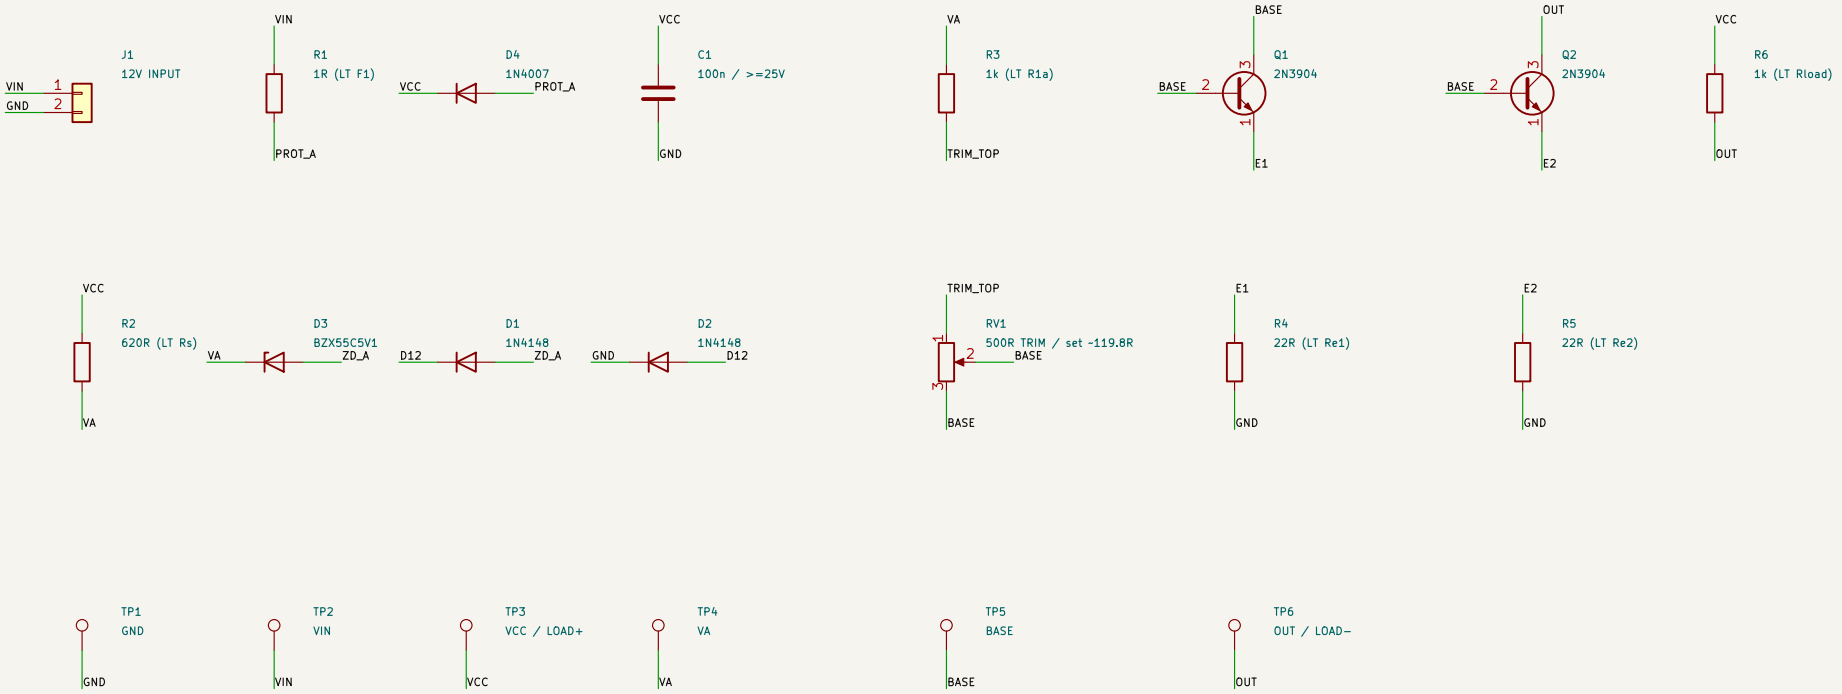

RV1: 500 ohm multiturn; 119.8 ohm is only the LTspice nominal setting. Pins 2 + 3 tied.

P0 PROVISIONAL: RV1 footprint and actual transistor/package pinouts must be confirmed before fabrication.

Measure V(TP3)−V(TP6) across R6: approximately 5 V means approximately 5 mA (nominal 1k load).

LT names: R1=F1, R2=Rs, R3=R1a, R4=Re1, R5=Re2, R6=Rload, D3=Dz.

All resistors 1/4 W. Labels with matching names are electrically connected.

Exact LTspice connectivity; added power connector and voltage test points

Sheet: /
File: current_mirror.kicad_sch

Title: 5 mA diode−compensated current mirror

Size: A4	Date:	Rev: P0 – TRIMMER FOOTPRIN
KiCad E.D.A. 10.0.7		Id: 1/1