priate number of gaskets to the intermediate flange. Do not fit less gaskets than required, as this would have a detrimental effect on the diaphragm and the drive mechanism.

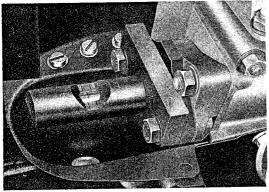


Fig. 33

Installation

- 1. Fill fuel pump housing with special grease before installing it.
- 2. Fit fuel pump.
- 3. Connect fuel lines. See to it that the fuel line rubber grommet is correctly seated in the engine front cover plate!


16 Fu

Reconditioning Fuel Pump

Special Tool: VW 328 b Fuel pump diaphragm gauge

Disassembly

- 1. Remove hex. hd. retaining screws on pump cover.
- 2. Take off pump cover and fuel strainer.
- 3. Unscrew the six slotted screws and take off pump cover.

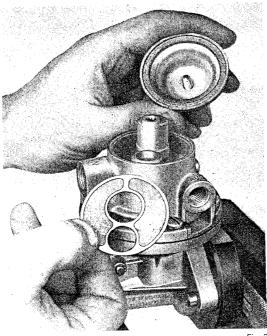

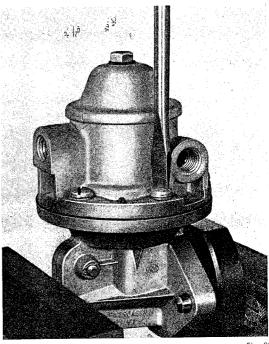


Fig. 35