7. Apply special rubber cement between the rubber strip and body, using a putty knife to pry up the edge of the strip. The same procedure is used to apply rubber cement between the outside of the windshield and the rubber strip.

Fig. 75

Note

This step is essential to insure a waterproof seal between the windshield and body.

Roadster

Removal

- 1. Lower convertible top.
- 2. Remove wiper arms.
- 3. Remove windshield holding clamps from wiper shafts by removing the nut and rubber pad.
- 4. Remove trim strip lifting upward and out.
- Remove windshield frame tensioner by removing the two screws at the top and releasing the tension from beneath the instrument panel.

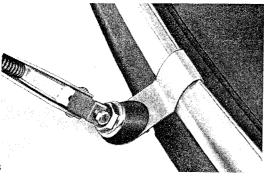


Fig. 76

Fig. 77