
Using the palm of the hand, gently strike the upper part of the windshield from the inside and remove the windshield.

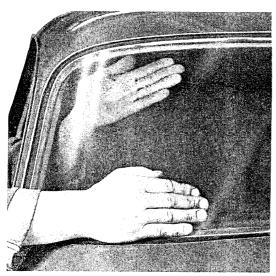

⊋i ≒

6. Clean the recess for the windshield weather strip of rubber and rubber cement.



If the entire car is to be spray painted, the windshield should be left in after performing step 3 removal. The windshield can easily be removed and cleaned after spraying.

Installation

- Clean windshield and inspect defroster vents for obstructions.
- Place new rubber strip on clean windshield so that the connected seam is exactly in the bottom center of the windshield.
- 3. Using rubber lubricant or soapy water, moisten the slot for the aluminum trim and press trim strip in place. Slide center connectors in place.
- Insert a thick cord into the bottom of the slot (item 4 in Fig. 69) so that the cord overlaps at the top.

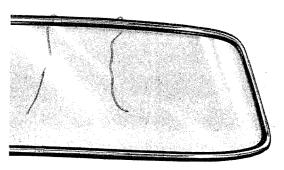


Fig. 72

5. Set complete windshield with rubber strip and trim into the windshield frame engaging the lower edge first. Press windshield into the frame as far as possible and pull out the cord parallel to the glass.

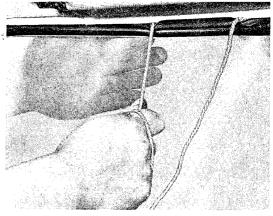


Fig. 73

Using a wooden block and hammer, seat the windshield firmly in place.

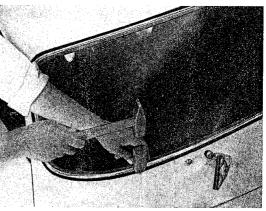


Fig. 74