- 2. Install lock pin in support bracket.
- 3. Remove nut, lock washer, and bolt. Place lock washer on bolt, insert bolt through the suspension arm and mount support bracket.
- 4. Install tie bolts with rubber joints and rubber joint plates in the support brackets.

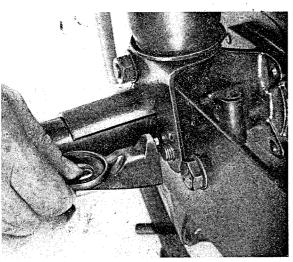


Fig. 3


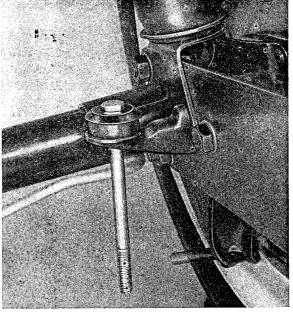


Fig. 5

In the event that there is no hole provided for the lock pin, a hole must be bored as shown in the following sketch.

5. Place rubber mount on center block of compensating spring.

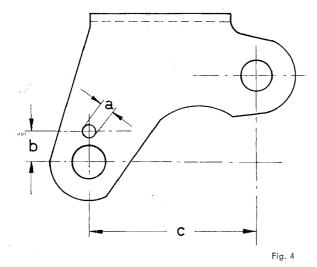

a = 5.1 mm dia.

 $b = 12 \pm 0.1 \text{ mm}$

 $c = 66 \pm 0.2 \text{ mm}$

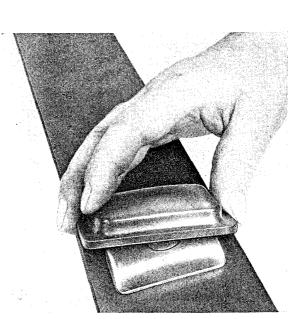


Fig. 6