
Removing and Installing Door Window

11 BO

Coupe

Removal

- 1. Roll down window.
- 2. Remove door panel (10 BO).
- 3. Remove sponge rubber pad from window crank
- 4. Disconnect window rails from the bottom of the door frame.

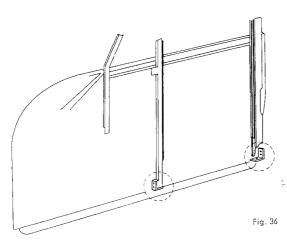

 Bend open the window elevating track at the arrow Fig. 37, and spread the window rails so that the window can be brought out of the frame toward the inside.

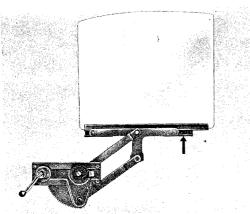


Fig. 37

- Lift the window so that the forward roller leaves the end of the elevating track and tilt the assembly forward lifting it from the door edgewise.
- Remove the screws which hold the elevating mechanism and remove the assembly.

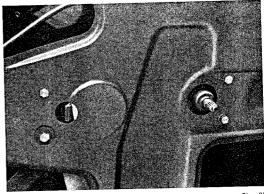


Fig. 38

8. Remove the window frame rails only if necessary.

1 P

Installation

The installation is accomplished in the reverse order of removal observing the following points:

- 1. Install the elevating mechanism loosely at first.
- Install the window standing it on edge and lowering it into the door channel so that the elevating track engages the rollers of the elevating mechanism.
 Bend track back into shape.
- 3. Fasten window rails to the bottom of the door frame.
- Adjust the window rails so that the window is secured but free to move. Adjust the level position of the window by adjusting the position of the elevating mechanism (thin arrow Fig. 39).