Interior

General

The ceiling in the Coupe and Hardtop are lined with sound absorbant perforated leatherette. The rear and inside walls of the Coupe are padded with sound proofing and covered with leatherette as are the side walls of the Cabriolet/Hardtop. The rear wall of the Cabriolet/Hardtop is covered with coarse weave matting as is the entire rear section of the Roadster. The ceiling liner is fastened to bows in the roof and is attached to the wall at the front, rear and side windows. The dash board is padded with rubber cushioned material and covered with leatherette.

23 BO

Installing Side Liner

 Glue sound proofing felt to the rear and side walls and glue a fastener strip (white strip in Fig. 98) wherever the liner is to be attached.



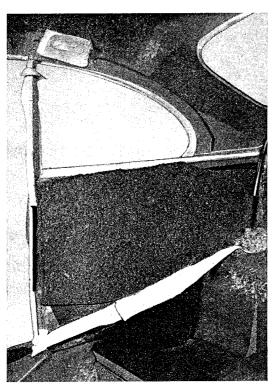


Fig. 98

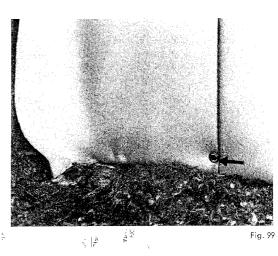

Fasten the upper edge of the panel to the wall with clamps.

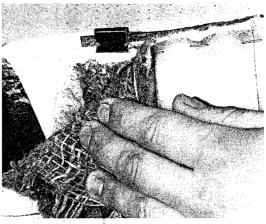

Fasten the bottom of the panel with a washer and sheet metal nail.

Fig. 100