
21 BO

Removal

1. Push back the rubber strip at the door jamb and remove the screw holding the window moulding.

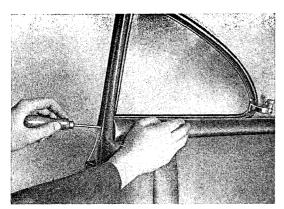

2. Remove the moulding unhooking it from the slot in the rear wall.

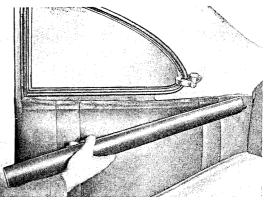


Fig. 94

Fig. 93

Installation

The installation is accomplished in the reverse order of removal.

22 BO

Removing and Installing Grills, Hood Ornament, and Porsche Name Plate

The grills are easily removed by removing the screws which support them.

When installing the grills it is important that the rubber is properly located.

Name Plate

The name plate and model designation (1600, 1600 Super, 1600 Super 90) are held by spring clips which are spot welded to the inside of the rear body sheeting. The name plate has pins which protrude through the body sheeting, and are held by the spring clips.

The spring clip has smaller openings in it than the size of the pins and is therefore expanded by the pins as they are pushed into place. The locking jaws of the spring clip hold the name plate firmly against the car body.