Coupe, Cabriolet-Hardtop

Removal

- 1. Remove windshield wiper arms.
- Using a sharp knife or linoleum knife, cut rubber around entire window being careful to cut close to but not touching the aluminum trim. Remove cut rubber and slide trim strip connections to one side.


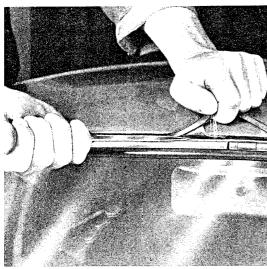


Fig. 67

3. Insert a putty knife or screw driver completely under trim strip and draw evenly around the window. Remove trim strip.

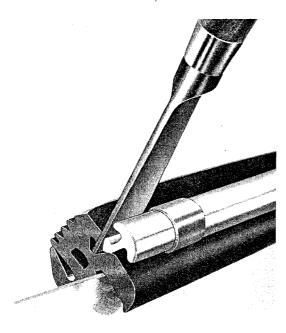

1 2 3 4 Fig. 69

- ① Windshield
- ② Trim strip
- 3 Rubber strip
- 4 Body section
- 4. Loosen rubber around glass with a putty knife, then cut parallel to the surface of the glass through the weather strip being careful not to chip or scratch the edge of the glass.

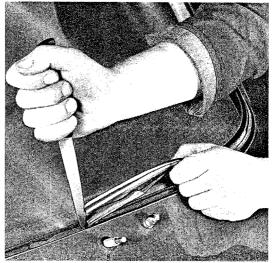


Fig. 68

Fig. 70