Measuring Chassis on Jig

31 BO

- 1. Remove all front and rear suspension members.
- 2. Place chassis on the jig so that the measuring pins are opposite the suspension tubes.
- Insert the measuring pins in the suspension point which appears to be the least damaged.
- 4. Adjust the frame so that the connected points indicate zero on the calibrated marks.
- 5. Move the base of the measuring pins which do not fit until a fit or approximate fit is obtained.

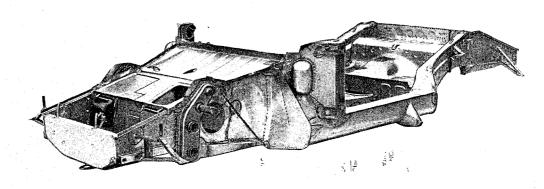


Fig. 160

Chassis, seen from left front

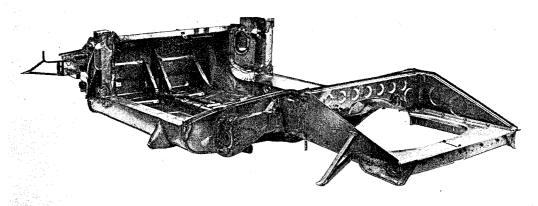


Fig. 161

Chassis, seen from left rear