- 4. Fit the press board into the slot behind the edge of the door post.
- 5. Glue the leatherette material to the fastener strip at the edge of the door post.



Fig. 101

Fig. 102

## Installing Head Liner

24 BO

- Glue sound proofing to the inside of the roof and glue fastener strip to the places where the liner is to be glued to the body.
- 2. Install the bows for the headliner in the roof with the liner.

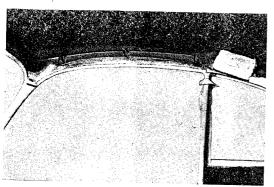


Fig. 103

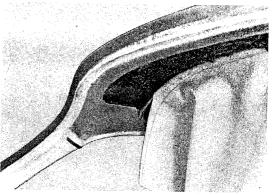


Fig. 104