Remove locking screw in A-A and plug in B-B from the vehicle underside

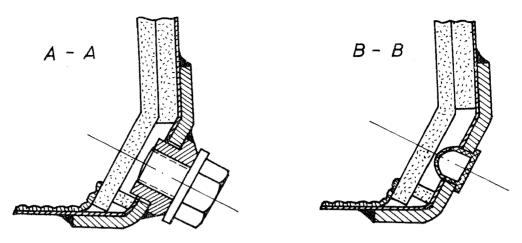


Fig. 2

Pierce through the opening with a marking tool and cut out floor covering in A-A and B-B. Screw counter nuts on the shackles and insert shackles. Fasten shackles with hexagon nuts M 8x1 DIN 934-6S gal Zn 9 from the vehicle underside (see Fig. 3).

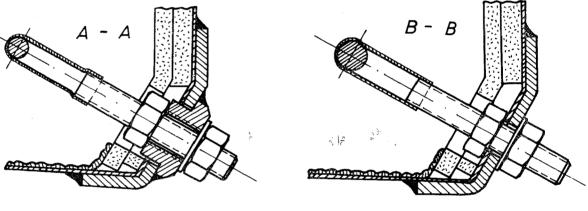


Fig. 3

In several countries (USA for example) the regulations require the mounting of a threaded bolt for the anchorage. The threaded bolt 7/16" is screwed in A-A.

Mounting

Remove locking screws in A-A. Cut out floor covering. Screw in 7/16" threaded bolt and fasten with a nut from the vehicle underside. Add spring washer.

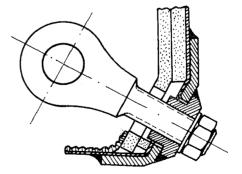


Fig. 4