
COOLING SYSTEM

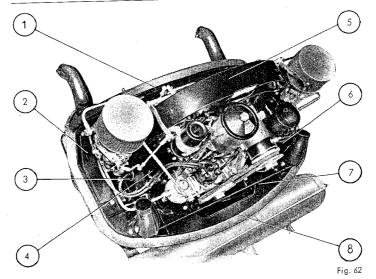

- 1 Front cover plate
- ② Side cover plate bottom
- 3 Side cover plate
- 4 Cylinder cover plate
- ⑤ Fan housing
- 6 Side horizontal cover plate
- Rear cover plate
- ® Weather strip

Removing and Installing Duct Plates

(Engine removed from car)

3 EN

The duct system of the engine insures that sufficient air reaches the cooling surfaces. It is therefore important that it is properly installed. The parts must be so fitted that cooling air can not escape though the joints, thereby improperly cooling the engine.

Removal

- 1. Remove rear cover plate before removing the engine.
- 2. Remove front cover plate.



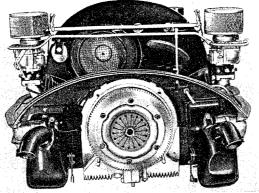


Fig. 63

- 3. Remove side cover plate.
- 4. Remove exhaust system.

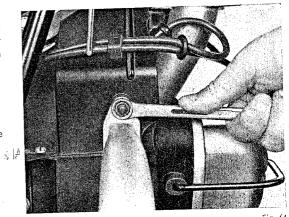

5. Remove lower air channel.

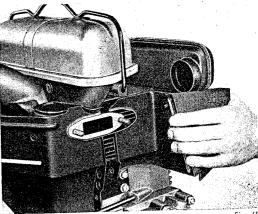

6. Remove cylinder cover plates.

Fig.