1. Glue front fiber mat with pocket to the front side wall

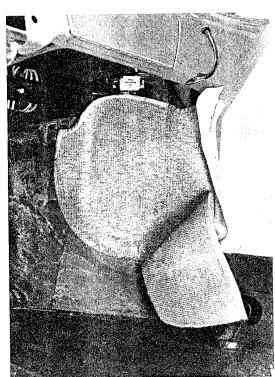


Fig. 111

2. Fasten pocket section to the wall with nails.

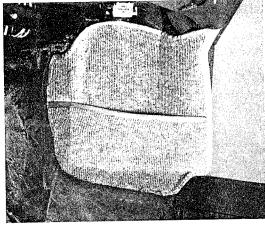


Fig. 112

3. Glue the remaining mat to the wall so that it matches the other mat.

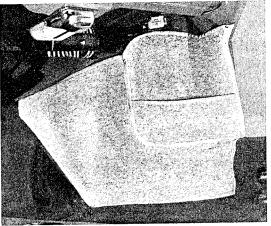


Fig. 113

4. Glue felt lining into the rear seat recesses.

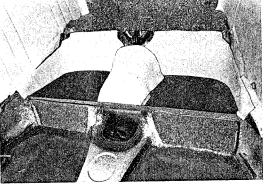


Fig. 114

5. Glue floor tunnel mat in place.

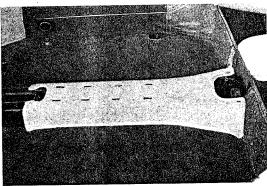


Fig. 115