


Fig. 16

Note that the slanted slot of the adjustment screw corresponds to the angle of the brake shoes as in Fig. 17.

This part is not identical to any part of the VW or Porsche drum brake.

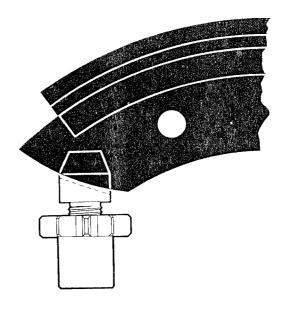

9. Adjust the handbrake. The brake must be adjusted again after the first use.

## Adjusting the Handbrake

The adjustment is primarily performed at the brake shoe as with drum brakes. The adjustment screw is accessible through the hole in the spider. Both the upper and lower shoe must be adjusted equally. The adjusting screw is turned until the brake shoe is tight against the disc and turned back 3 to 4 clicks.

For the adjustment of the hand brake cables see sections 17 and 18 ST of the shop manual.

It is to advantage to remove the brake pads while adjusting the hand brake.

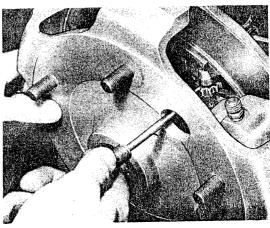


Fig. 18