Installing the Hardtop

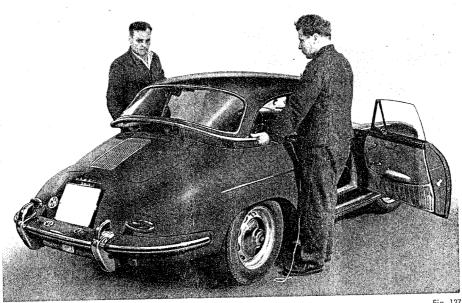


Fig. 137

- 1. Install a strong thin cord in the groove of the rear weather strip, let extend 30 to 40 cm beyond each end for a good grip.
- 2. Hook the two turnbuckles to the ball studs on the
- 3. Lift hardtop in place engaging the lugs in the door post.
- 4. Place a flat washer and nut on each retaining bolt and tighten the two bolts evenly. Check the position of the roof against the windshield. If the two do not match, the roof may be adjusted forward by shims at the lugs on the door posts.
- 5. Connect and tighten the two turnbuckles lightly.
- 6. Pull the cord to the inside so that the weather strip lies smoothly on the inside of the rear panel.

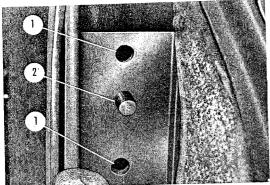


Fig. 138

- ① Sockets for guide pins.
- ② Retaining bolt for hardtop or convertible.

