

- 5. Tighten the mounting screws of the elevating mechanism.
- 6. The bottom of the window travel is regulated by a stop on the window carrier (large arrow Fig. 39).




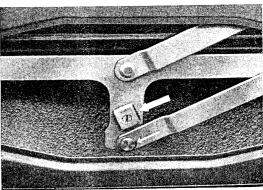


Cabriolet-Hardtop

Removal

- 1. Roll down window.
- 2. Remove door panel (10 BO).
- 3. Remove sponge rubber pads from the mounting
- 4. Remove felt moulding at the upper edge of the window channel.
- 5. Disconnect window rails from the bottom of the door frame.

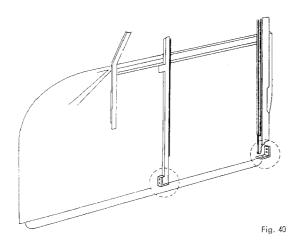

6. Remove the nut (14 mm) from the inside of the elevating arm pin (on the other end of the pin shown by the arrow Fig. 41).

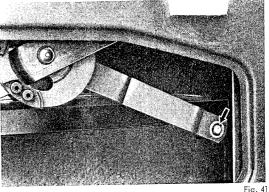

- 7. Roll the other elevating arm out of the track, move the window out of the frame and lift it out tilting it up edgewise.
- 8. Remove screws holding the elevating mechanism and remove the entire assembly.

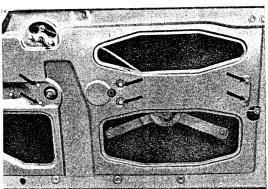


Fig. 42

9. Remove the window rails only if necessary.