## **Pedal Assembly**

## General


The clutch and brake pedals are mounted on a common shaft while the accelerator pedal is mounted on a separate bracket. The brake pedal operates a hydraulic master cylinder directly through a short push rod while the clutch and throttle are connected to the pedals by cables.

## Removing and Installing Pedal Assembly

26 BO

## Removal

- 1. Remove rubber floor mat.
- 2. Disconnect the throttle linkage at the pedal.
- 4. Remove pedal board.
- Disconnect clutch cable from pedal shaft. It may be necessary to hold the cable from twisting with pliers.

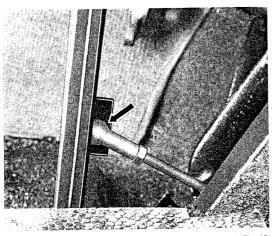

ig. 124

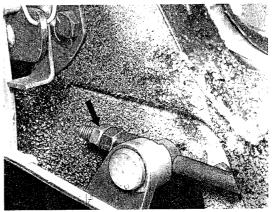
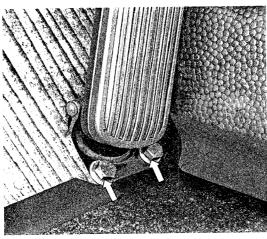


Fig. 126

- 3. Remove two screws at the accelerator pedal bracket and remove pedal.
- 6. Disconnect brake cylinder push rod from pedal.



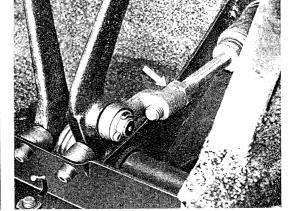


Fig. 127

Fig. 125