


Fig. :

- 27. Install spark plugs.
- 28. Install intake manifolds insuring proper gassket fit.
- 29. Install cover plate on No. 3 cylinder.
- 30. Install fan housing and generator.

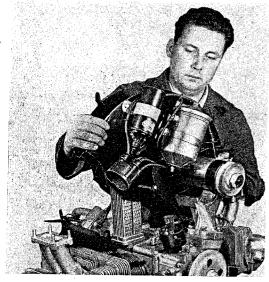

ia. 60

- 31. Install cylinder cover plates.
- 32. Install fuel pump cover plate.
- 33. Install lower air channels (3, 7 EN).
- 34. Install side cover plates.

- 35. Connect oil lines to oil filter and install pressure indicator sending unit.
- 36. Fasten generator clamp and check free rotation of blower impeller.

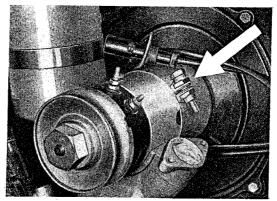


Fig. 61

- 37. Install V-belt.
- Connect ignition cable to ignition coil and distributor.
- 39. Grease fuel pump push rod and install in push rod guide with rounded end toward crankshaft.
- 40. Grease fuel pump base with high temperature grease and install using a new gasket.
- 41. Connect fuel line and carburetor linkage.
- 42. Install oil filler pipe with a rubber gasket.
- 43. Install air cleaners.
- 44. Connect spark plug wires.
- 45. Install exhaust system (10 EN, 11 EN).
- 46. Fill crankcase with 4.5 i (43% qt.) motor oil, after short test run check and add oil if necessary.