Raising Convertible Top

The top is raised in the reverse order of lowering, observing the following points:

 Raise the front frame section until the cloth begins to become tight. Move the third bow back toward the rear window until it is between the seam and the window.

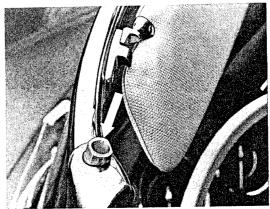


Fig. 157

2. Close the top so that the guide pins fit into the sockets on the windshield frame.

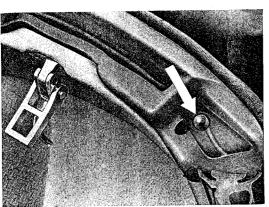


Fig. 156

3. Push down on the front frame and fasten the hold down latch.

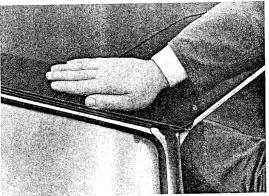


Fig. 158