


## Bottom rubber strip

- a. Windshield slot
- b. Trim strip slot
- c. Slot for body sections

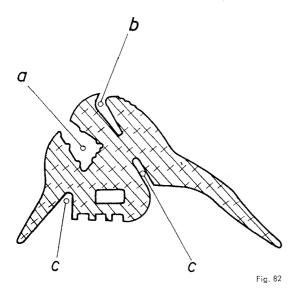



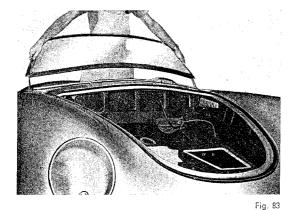

- 7. Install and tighten allen screws for windshield posts.
- 8. Check the angle of the windshield post with respect to the door window and the top as shown in Fig. 84. The correct space is approx. 15 cm (5/s in.) which can be adjusted by placing shims under the windshield post as required.

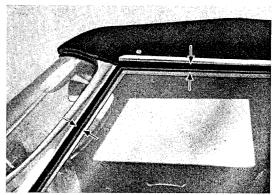


Fig. 84

- 9. Install tension rod in center of windshield.
- By raising the forward edge of the lower rubber strip, check whether the body section is properly engaged.
- 11. Press down rubber strip so that the body section seats fully.



- Place a cord in the slot ("b" Fig. 82) and insert trim strip. Pull out cord downward and press trim strip in place.
- 13. Install windshield holding clamps on wiper shafts.
- 14. Install wiper arms.
- 15. Test the windshield with water. Where leaks are found, dry with compressed air and seal with special rubber cement.
- 16. Clean windshield with alcohol.