In the event that the outer weather strip does not lie properly, adjust the rubber using a plastic spatula being careful not to damage the finish.


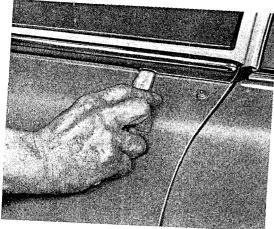


Fig. 140

- 8. Tighten the mounting bolts and turnbuckles in sequence a turn at a time.
- 9. Install turnbuckle caps and secure with two punch marks.
 - 1 Turnbuckle
 - ② Cover
 - 3 Punch here
 - 4 Ball pin bracket

- a) Engage the two tabs of the panel into the door post.
- b) Mark the position of the wall panel with chalk.
- c) Remove the panel and locate the hole with a punch. The hole is located approx. "a" = 3.5 cm $(1^3/s~in.)$ and "b" = 6 cm $(2^3/s~in.)$ as in Fig. 142.
- d) Insert the screw and apply chalk to the cross slot. Install side panel first in front hooks and then press against screw so that a white mark is made. Punch a hole through the panel at the mark.

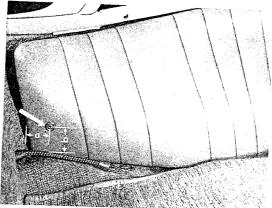


12. Install side panel.

Fig. 142

Fig. 141

10. Fasten the three hold down clamps at the windshield.



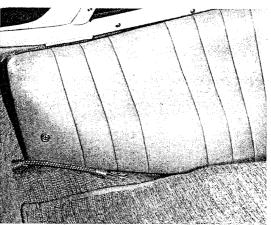


Fig. 143