## Roadster

## Removal

- 1. Remove door panel (10 BO).
- 2. Remove window (11 BO).
- 3. Remove the window rail screws as shown in Fig. 60.
- 4. Remove window rail.

The installation is accomplished in the reverse order of removal observing the condition of the weather strip and felt lining of the window rails replacing where necessary.

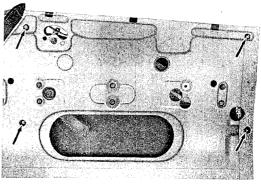


Fig. 60