b) Diagonal shoulder safety belts

A diagonal shoulder safety belt (complete) is supplied by us under the spare part No. 644, 803, 011, 02, with the following anchorage parts:

1	Shackle	644.803.111.02
2	Spring washers 7 8 DIN 137 bost.	900,028,010,01
4	Hexagon nuts M 8x1 DIN 934-6S gal Zn9	900.076.014.02
1	Retaining bolt	644,803.121.00
1	Round anchor plate	644.803.123.00
1	Spring ring 8 DIN 7980 bost.	900, 142, 002, 01
1	Spring ring 12 DIN 7980 bost.	900, 142, 004, 01
1	Head screw M 8x45 DIN 6912-8G gal Zn 9	900.119.007.02

The installed diagonal shoulder belt passes from the right bottom side over the left shoulder of the occupant sitting on the left side and is fastened with a retaining bolt to the left rear side of the car's interior. The belt for the right seat occupant passes over his right shoulder and is mounted to the right rear side.

Mounting anchorage parts

Install shackle behind the front seat, see item a).
Cut out lateral covering at the anchorage point in the rear of the car's interior (see Fig. 5)

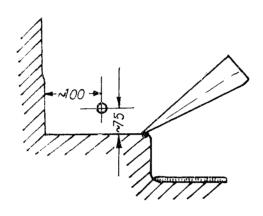


Fig. 5

Insert spring ring 12 DIN 7980 bost, in the welded-in metal piece, mount round anchor plate and fasten retaining bolt (644, 803, 121, 00) with head screw M 8x45 DIN 6912-8G gal Zn 9 on the metal piece. Add a spring ring 8 DIN 7980 bost, under the head screw.