## Cabriolet-Hardtop

## Removal

- 1. Remove door panel (10 BO).
- 2. Remove window (11 BO).
- 3. Remove the mounting screws from the vent window frame and window rail as shown in Fig. 57.


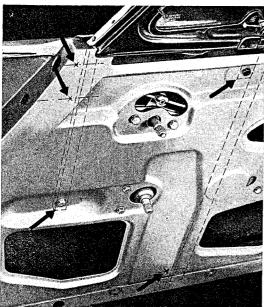


Fig. 57 1

4. Remove the vent window, frame, and window rail.

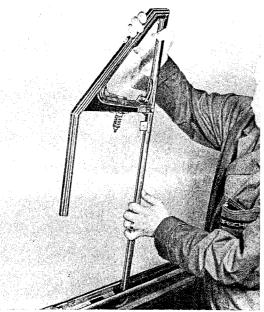

Fia. 58

5. Remove the two screws from the rear window rail.

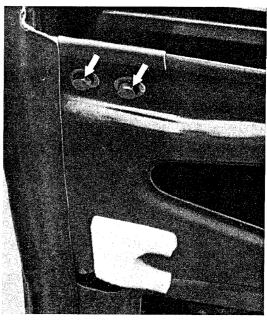


Fig. 59

- 6. Remove screws from lower end of the window rail.
- 7. Remove the window rail.

## Installation

The installation is accomplished in the reverse order of removal observing the condition of the weather strip and felt linings in the window rails replacing where necessary.