DISASSEMBLY AND ASSEMBLY OF FRONT AXLE

Special tools:

P 30 Brake drum puller

Puller for annular taperd bearing P 63

VW 266 f Tie rod end remover


VW 156 Key 8 mm for tightening and loosening sus-

pension arm center lock


1 ST

Disassembly


1. Remove drums (2 St)

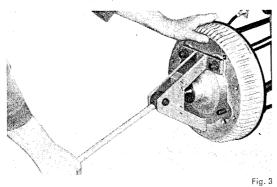


2. Remove brake anchor plates

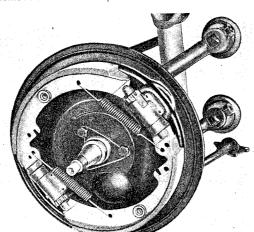

3. Remove tie rods (19 St) .

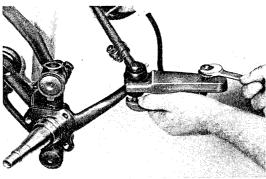

4. Remove suspension arm link and stub axle (6 St)

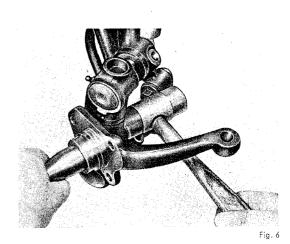

5. Remove shock absorbers (16 St)

